

## Russell Hobbs 27681-56

# Russell Hobbs Satisfry 9L Dual Basket Air Fryer 27681-56 Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Russell Hobbs Satisfry 9L Dual Basket Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury:

- Always ensure the voltage on the rating label matches your mains supply.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs.
- Ensure adequate ventilation around the appliance during use.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## PRODUCT COMPONENTS

---

Your Russell Hobbs Satisfry 9L Dual Basket Air Fryer consists of the following main components:

- Main Unit with Digital Control Panel

- Two 4.5L Cooking Baskets
- Two Removable Crisping Plates



Figure 1: Front view of the Russell Hobbs Satisfry 9L Dual Basket Air Fryer, showcasing its sleek design and digital control panel.

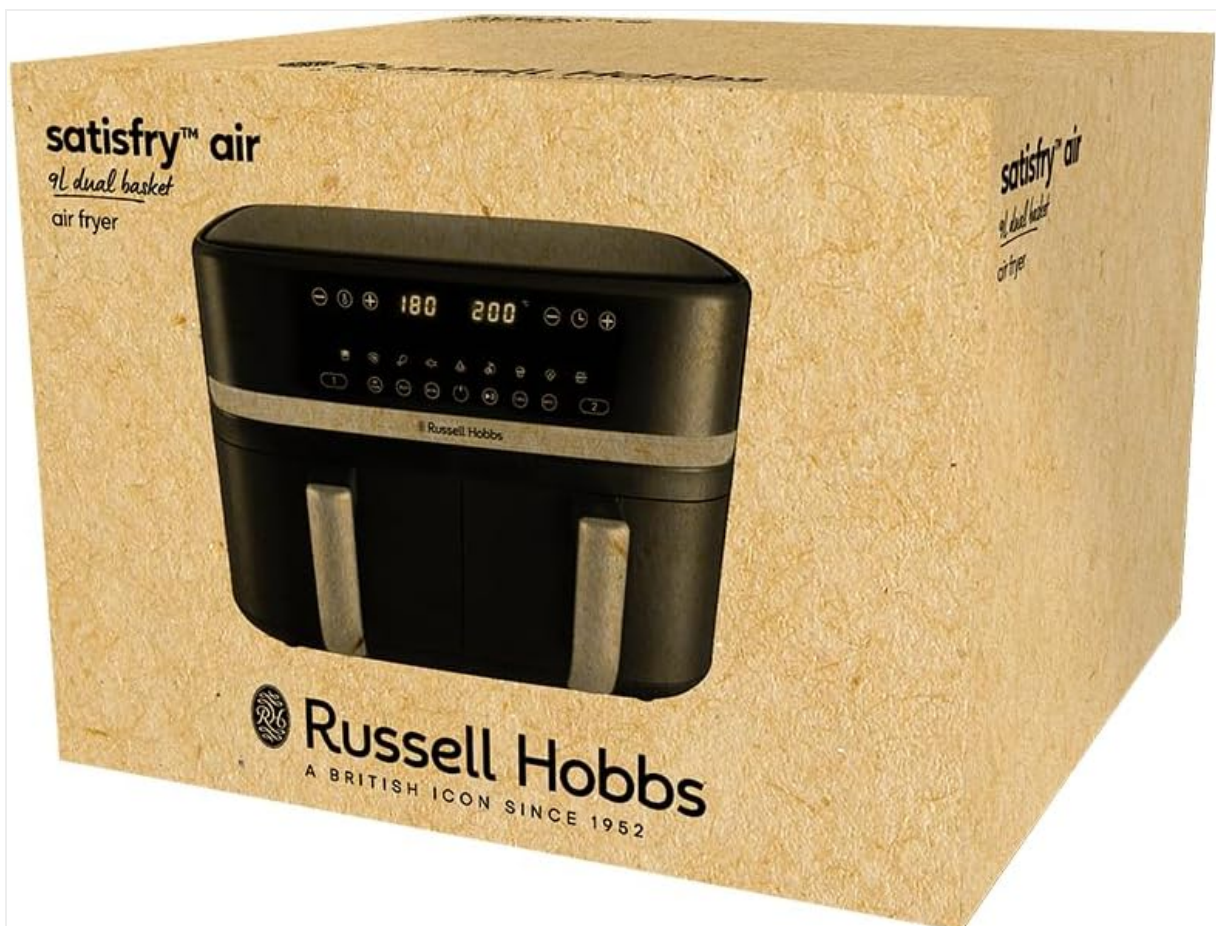


Figure 2: The two removable cooking baskets and their corresponding crisping plates, designed for easy cleaning and versatile cooking.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, wash the cooking baskets and crisping plates in warm, soapy water, then rinse and dry thoroughly. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it near walls or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The digital control panel allows you to manage all cooking functions. It features touch controls for temperature, time, and various preset programs.



Figure 3: Detailed view of the intuitive digital control panel, showing temperature and time adjustments, and dedicated buttons for presets and smart functions.

### Basic Operation

1. **Power On:** Press the power button to turn on the appliance.
2. **Select Basket:** Choose basket 1 or 2 to set its cooking parameters.

3. **Set Temperature:** Use the temperature control buttons (up/down arrows) to adjust the cooking temperature between 40°C and 200°C.
4. **Set Time:** Use the time control buttons (up/down arrows) to set the cooking duration.
5. **Start Cooking:** Press the start/pause button to begin the cooking cycle.

### Dual Zone Functionality

The air fryer features two independent cooking zones. You can use one or both baskets as needed. For optimal performance, ensure both baskets are correctly inserted into their respective compartments.

### Smart Meal Preparation Functions

- **Sync Function:** This feature allows you to cook different foods in each basket with different settings, ensuring they both finish cooking at the same time. Select the Sync button after setting individual basket parameters.
- **Match Function:** Use the Match button to apply identical cooking settings (temperature and time) to both baskets simultaneously, ideal for cooking larger quantities of the same food.
- **Delay Start:** Program the air fryer to start cooking at a later time, fitting your schedule.
- **Keep Warm:** After cooking, activate the Keep Warm function to maintain your food at an optimal serving temperature until you are ready to eat.
- **Shake Reminder:** For certain foods, the air fryer will emit a reminder to shake the basket, ensuring even cooking and crispiness.



Figure 4: The air fryer in operation on a kitchen counter, demonstrating one basket pulled out to reveal perfectly cooked sweet potato fries.



Figure 5: An overhead perspective illustrating the dual baskets filled with different food items, such as roasted potatoes and chicken breasts, highlighting the appliance's versatility.

## COOKING GUIDE

The Russell Hobbs Satisfry offers a wide temperature range from 40°C to 200°C, suitable for various cooking tasks from dehydrating to crisping. It includes 9 pre-set programs for common dishes, simplifying your cooking process. Refer to the recipe book (if included) or online resources for specific cooking times and temperatures for different foods. This air fryer is designed for oil-free cooking, promoting healthier meal preparation.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Baskets and Crisping Plates:** The non-stick ceramic coated cooking baskets and crisping plates are dishwasher safe for convenient cleaning. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or

scourers. Never immerse the main unit in water.

4. **Interior:** Clean the interior of the appliance with a damp cloth, ensuring no food residue remains.



Figure 6: The cooking baskets and crisping plates positioned in a dishwasher, illustrating their dishwasher-safe design for effortless cleaning.

## TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household's circuit breaker.
- **Food Not Cooked Evenly:** Ensure not to overfill the baskets. Use the shake reminder function or manually shake the baskets halfway through cooking.
- **White Smoke from Appliance:** This may indicate fat or oil residue from previous use. Clean the baskets and crisping plates thoroughly.
- **Appliance Emits Odor:** A slight odor may occur during the first few uses. This is normal and will dissipate. Ensure good ventilation.

For issues not covered here, please contact customer support.

## SPECIFICATIONS

| Feature                | Specification   |
|------------------------|---|
| Model Number           | 27681-56  |
| Capacity               | 9 Liters (2 x 4.5L Baskets)   |
| Power                  | 2800 Watts  |
| Voltage                | 230 Volts (AC)  |
| Temperature Range      | 40°C - 200°C  |
| Material               | Ceramic, Non-stick coating  |
| Dimensions (L x W x H) | 37 x 50 x 44.4 cm   |
| Item Weight            | 7.7 Kilograms   |
| Special Features       | Automatic shut-off, Dual-zone functions, Timer, Programmable, Temperature control, Keep Warm, Delay Start, Shake Reminder |



Figure 7: A detailed diagram showing the overall dimensions of the air fryer and the measurements of its individual components.

## **WARRANTY AND SUPPORT**

---

Your Russell Hobbs Satisfry 9L Dual Basket Air Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or warranty claims, please visit the official Russell Hobbs website or contact their customer service department. Contact information can typically be found on the product packaging or the Russell Hobbs official website.