

UD70171

Dirt-Devil Endura Express Bagless Compact Upright Vacuum Cleaner User Manual

Model: UD70171 | Brand: Generic

1. INTRODUCTION

Thank you for choosing the Dirt-Devil Endura Express Bagless Compact Upright Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

The Dirt-Devil Endura Express is a powerful, lightweight cleaning solution designed for deep-cleaning homes, apartments, and offices. It features high-suction performance, an advanced Endura filtration system for consistent power, and is effective on multiple surfaces including carpets and hard floors. Its compact design, 20ft power cord, and easy-to-empty bagless system make it a convenient and efficient tool for everyday cleaning and pet hair removal.

2. IMPORTANT SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Always unplug the vacuum cleaner from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be

present.

- Do not use without dirt cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PACKAGE CONTENTS

Please check the contents of your package to ensure all items are present and undamaged:

- Dirt-Devil Endura Express Upright Vacuum Cleaner Unit
- Extension Wand
- Crevice Tool
- Dusting Brush
- User Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Dirt-Devil Endura Express vacuum cleaner:

1. **Attach the Handle:** Insert the handle into the top of the vacuum body until it clicks securely into place. Ensure it is firmly seated.
2. **Connect the Hose:** Attach the end of the hose to the hose inlet port on the back of the vacuum. Twist to lock it into position. Then, secure the hose into the hose clip on the handle.
3. **Store Accessories:** Place the crevice tool and dusting brush onto their designated storage posts on the vacuum cleaner.



Figure 4.1: Front view of the assembled Dirt-Devil Endura Express vacuum cleaner, showing its compact upright design and integrated hose and tools.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- Plug the power cord into a suitable electrical outlet.
- Step on the power pedal located at the base of the vacuum to turn it ON. Step on it again to turn it OFF.

5.2 Reclining the Vacuum

- With the vacuum powered ON, place your foot on the nozzle and pull the handle back to recline the vacuum for cleaning.

5.3 Multi-Surface Cleaning

The Dirt-Devil Endura Express is designed for effective cleaning on various floor types, including carpets and hard floors.



Figure 5.1: The vacuum effectively cleaning a carpeted area, demonstrating its ease of use in a typical home setting.



Figure 5.2: The vacuum seamlessly cleaning both hard floors and carpets, picking up various debris.

5.4 Using Attachments for Above-Floor Cleaning

For cleaning stairs, upholstery, or hard-to-reach areas, use the quick-release wand and included attachments.

1. **Detach the Wand:** Press the wand release button and pull the wand out from the vacuum body.
2. **Attach Tools:** Connect the desired tool (crevice tool or dusting brush) directly to the end of the wand.
3. **Clean:** Use the attached tool to clean surfaces such as furniture, stairs, or high shelves.



Figure 5.3: Demonstrating the use of the crevice tool for precise cleaning in tight spaces, such as cleaning up spilled cereal.



Figure 5.4: The extension wand allows for convenient cleaning of elevated surfaces, such as shelves and ceiling corners.



Figure 5.5: The lightweight design of the vacuum makes it easy to transport between rooms or up and down stairs.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the vacuum before performing any maintenance.

6.1 Emptying the Dirt Cup

Empty the dirt cup after each use or when debris reaches the 'Max Fill' line.

1. Press the dirt cup release button and lift the dirt cup away from the vacuum.
2. Hold the dirt cup over a trash can. Press the bottom release latch to open the dirt cup and empty its contents.
3. Close the bottom latch securely and reattach the dirt cup to the vacuum until it clicks into place.



Figure 6.1: The easy-to-empty dirt cup simplifies debris disposal, making maintenance quick and mess-free.

6.2 Cleaning the Washable Filter

The Endura filtration system includes a washable filter. Clean it regularly to maintain suction power.

1. Remove the dirt cup.
2. Twist the top of the dirt cup to remove the filter assembly.
3. Separate the filter from the assembly. Rinse the filter under running water until clean.
4. Allow the filter to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with a wet filter.

6.3 Checking the Brush Roll

Periodically check the brush roll for tangled hair or debris that may reduce cleaning performance. Unplug the vacuum before inspecting.

- Turn the vacuum over to access the brush roll.
- Use scissors to carefully cut away any hair or strings wrapped around the brush roll.
- Ensure the brush roll spins freely.

7. TROUBLESHOOTING

Before performing any troubleshooting, ensure the vacuum is unplugged from the power outlet.

Problem	Possible Cause	Solution
Vacuum will not turn on.	No power to the outlet. Power cord not firmly plugged in. Thermal protector activated.	Check fuse or breaker in your home. Ensure plug is firmly inserted into outlet. Turn off vacuum, unplug, and allow to cool for 30 minutes. Check for clogs.
Loss of suction.	Dirt cup full. Filter needs cleaning. Hose or nozzle clogged.	Empty dirt cup. Clean or wash filter and allow to dry completely. Remove hose and check for obstructions. Clear any clogs in the nozzle.
Brush roll not spinning.	Brush roll jammed. Belt broken.	Unplug vacuum and remove any hair or debris wrapped around the brush roll. Contact customer support for belt replacement.
Vacuum is difficult to push.	Brush roll height setting incorrect (if applicable). Suction too strong for carpet type.	This model has a fixed height setting. Ensure brush roll is clear of debris.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Name	Endura Express
Model Number	UD70171
Form Factor	Upright
Special Features	Corded, Bagless, High Suction Power, Lightweight, Multi-Surface Cleaning, Pet Hair Removal
Filter Type	Cartridge (Washable)
Capacity	1.5 Liters
Wattage	960 watts
Amperage	8 Amps

Feature	Detail
Hose Length	6.5 Feet
Power Cord Length	20 Feet
Product Dimensions	11"L x 10"W x 43"H
Item Weight	9 pounds
Color	Red
Recommended Uses	Home, Apartment, Office (Floor Cleaning, Carpet Cleaning, Pet Hair Removal)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the contact information provided with your product packaging or visit the manufacturer's official website. Keep your purchase receipt as proof of purchase for any warranty claims.

Protection plans may be available for extended coverage. Please check with your retailer for details on available protection plans.

