



[Manuals.plus](#) /

> [Thor Kitchen](#) /

> Gordon Ramsay by THOR Kitchen 36 Inch Professional Electric Range User Manual

## Thor Kitchen RSE36B-BRZ

# Gordon Ramsay by THOR Kitchen 36 Inch Professional Electric Range

Model: RSE36B-BRZ | Brand: Thor Kitchen

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Gordon Ramsay by THOR Kitchen 36 Inch Professional Electric Range. Please read all instructions carefully before installation and use to ensure proper function and to prevent injury or damage.



Figure 1: Front view of the 36-inch Professional Electric Range.

## SAFETY INFORMATION

**WARNING:** To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not leave children alone or unattended in an area where the appliance is in use.
- Do not store items of interest to children above the range.
- Always ensure the anti-tip bracket is properly installed and engaged.
- Do not touch hot surfaces. Use handles or knobs.
- Never use the appliance for warming or heating the room.
- Ensure proper electrical grounding.

# SETUP AND INSTALLATION

---

## Unpacking

Carefully remove all packaging materials, tape, and protective film from the range. Retain packaging for future transport if needed. Inspect the appliance for any shipping damage. Report any damage immediately to your dealer.

## Placement and Electrical Requirements

The range is designed for freestanding installation. Ensure adequate clearance around the appliance as per local building codes. The unit weighs approximately 231 pounds and has dimensions of 29.4 x 29.8 x 36 inches. This electric range requires a 240 Volts electrical supply. Consult a qualified electrician for proper installation and wiring.

## Included Components

Verify that all components are present:

- 1 Standard Oven Rack
- 1 Telescopic Rack
- 1 Broiler Pan Set
- 1 Air Fry Basket
- 1 Meat Probe



Figure 2: Angled view of the range, highlighting its freestanding design.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The range features a Tilt Panel Touch Control for intuitive operation of both the cooktop and oven functions. The panel can be adjusted for optimal viewing.

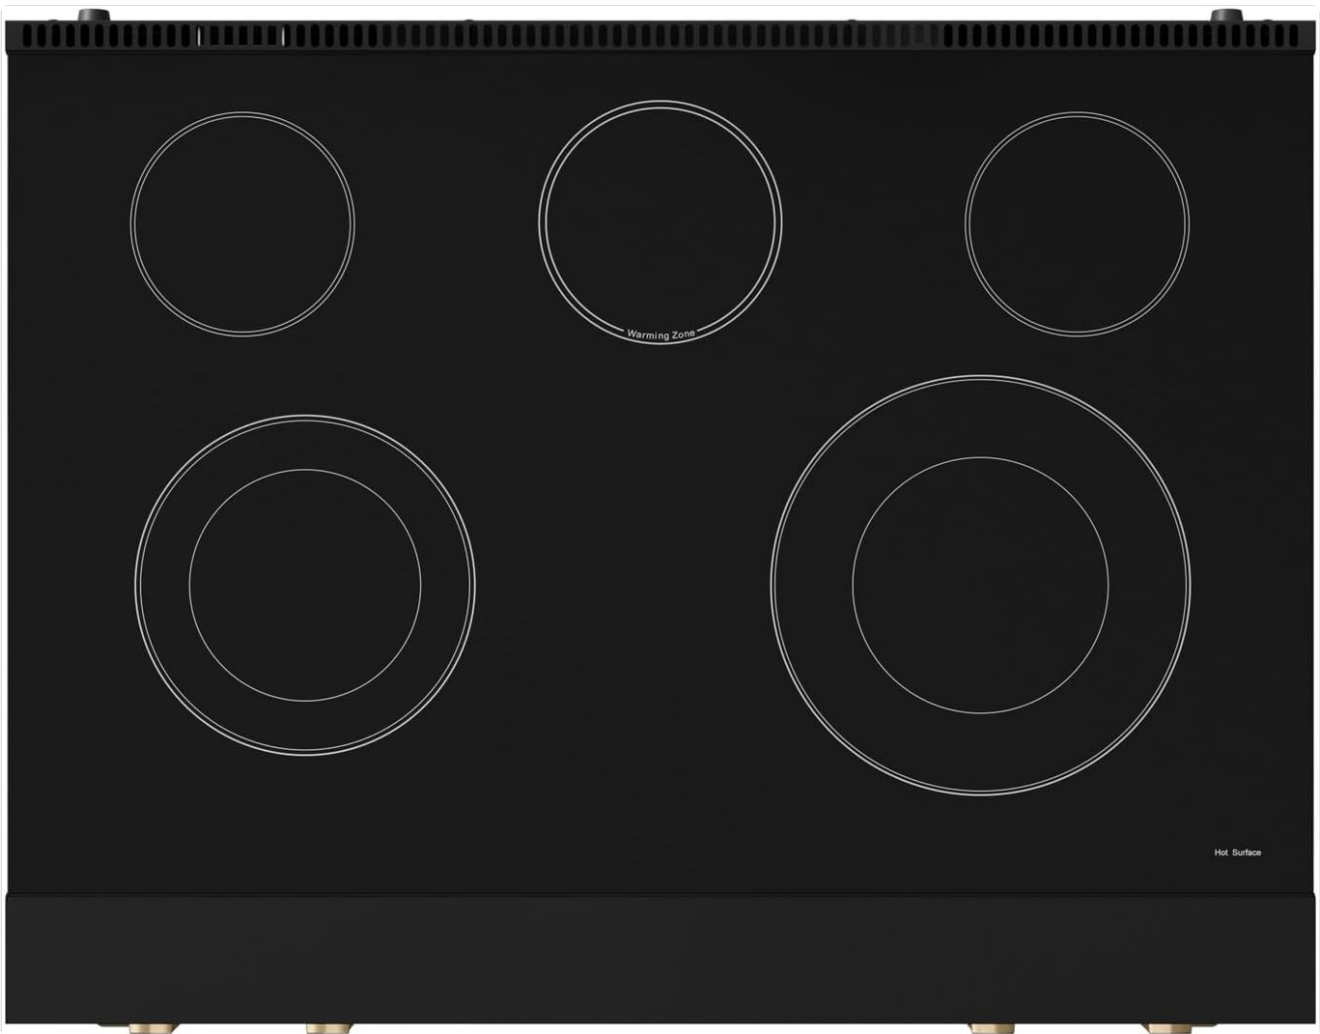


Figure 3: Detail of the Tilt Panel Touch Control and rotary knobs.

## Cooktop Operation

The cooktop features five radiant burners beneath a smooth ceramic glass surface, providing even and consistent heat. Each burner has a wide power range, from a gentle 100 watts for warming to a powerful 3,000 watts for high-intensity cooking. Use the corresponding rotary knobs to select the desired heat level for each burner.



Figure 4: Top view of the radiant electric cooktop.

## Oven Operation

The oven is equipped with a True Convection Fan for even heat distribution, ensuring consistent cooking results. The powerful broil element, rated at 3,500 watts, provides quick and efficient broiling. The oven includes multiple rack positions and a dedicated drawer for baking, broiling, and warming functions.



Figure 5: Oven interior with racks and air fry basket.



Figure 6: Angled view of the oven interior, showing the convection fan.

## MAINTENANCE AND CLEANING

### General Cleaning

Always allow the range to cool completely before cleaning. Use mild soap and water for general cleaning of exterior surfaces. Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish.

### Cooktop Care

For the ceramic glass cooktop, use a ceramic cooktop cleaner and a non-abrasive pad to remove spills and stains. Regularly clean the cooktop to prevent buildup that can become difficult to remove.

### Oven Care

Remove oven racks before cleaning the interior. For stubborn stains, consult the self-cleaning cycle instructions if applicable, or use an oven cleaner designed for electric ovens. Ensure all cleaner residue is removed before using the oven.

## TROUBLESHOOTING

This section provides solutions to common issues you might encounter. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Range not turning on	No power supply; circuit breaker tripped.	Check power cord connection; reset circuit breaker.
Cooktop element not heating	Incorrect setting; element failure.	Ensure knob is set correctly; contact service if issue persists.
Oven not reaching temperature	Door not closed properly; heating element issue.	Ensure oven door is fully closed; contact service.

## SPECIFICATIONS

Feature	Specification
Brand Name	Thor Kitchen
Model Info	RSE36B-BRZ
Item Weight	231 pounds
Product Dimensions	29.4 x 29.8 x 36 inches
Capacity	6 Cubic Feet
Installation Type	Freestanding
Burner Type	Radiant
Drawer Type	Baking, Broiler, Warming
Heating Elements	5
Color	Black/Bronze
Control Console	Touch
Voltage	240 Volts
Racks	2
Certification	CSA
Material Type	Stainless Steel

## WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Thor Kitchen website. In case of technical issues or for customer support, please contact Thor Kitchen directly. Keep your purchase receipt for warranty claims.

This product is eligible for 30-day easy returns through Amazon.com. For further assistance, please visit the [Thor Kitchen Store on Amazon](#).

