

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LEVOLOR](#) /

> [LEVOLOR Basics Cordless Fabric Roller Shade \(46"W x 72"H, White\) User Manual](#)

LEVOLOR 197067219794

LEVOLOR Basics Cordless Fabric Roller Shade User Manual

Model: 197067219794 | Brand: LEVOLOR

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your LEVOLOR Basics Cordless Fabric Roller Shade. Please read all instructions carefully before beginning installation and retain this manual for future reference. This product is designed to provide light control, privacy, and enhance room decor.

PRODUCT OVERVIEW

The LEVOLOR Basics Cordless Fabric Roller Shade features a white fabric front with a blackout coated liner for improved light control and privacy. Its cordless lift mechanism offers a safe solution for homes with children and pets. The design includes an open roll headrail and bracket covers that match the shade color for a cohesive appearance.

Key Features:

- **Blackout Fabric:** Provides light blockage for enhanced privacy and a darkened room.
- **Cordless Operating System:** Designed for consistent reliability and safety, eliminating cords.
- **Easy Installation:** Simple instructions for quick and easy setup.
- **Integrated Bracket Covers:** Coordinate with the shade color for a clean, finished look.
- **Durable Craftsmanship:** Offers exceptional value and long-lasting performance.



Image: LEVOLOR Basics product features including cordless lift, room darkening, glare reduction, and privacy.

SETUP & INSTALLATION

Proper measurement and installation are crucial for optimal performance of your roller shade. Always use a

metal tape measure for accuracy.

1. Measuring Your Window

Determine whether you will use an Inside Mount or an Outside Mount. Refer to the diagrams and video below for detailed measuring instructions.

Your browser does not support the video tag.

Video: This video guides you through the process of accurately measuring your windows for both inside and outside mount LEVOLOR blinds and shades.

Inside Mount Measurement:

- Measure the width at the top, middle, and bottom of the window frame to the nearest 1/8 inch. Order the narrowest width.
- Measure the height at the left, middle, and right of the window frame to the nearest 1/8 inch. Order the height that most closely matches the longest measurement, rounding up if needed.
- Note any obstacles (cranks, handles, tracks) that may interfere with the shade's function.



Image: Diagram illustrating how to measure window width and height for an inside mount installation.

Outside Mount Measurement:

- Measure the width between the outermost points where you want the shade to extend. Overlap each side by at least 3/4 inch.
- Measure the height from the highest point where you intend to install the shade to the sill where the bottom will rest. Overlap the top by at least 3 inches when possible. If there is no sill, measure at least 3 inches below the bottom of the window.



Image: Diagram illustrating how to measure window width and height for an outside mount installation, including recommended overlaps.

2. Installation Steps

Follow these steps to install your LEVOLOR Basics Cordless Fabric Roller Shade. For a visual guide, refer to the installation video.

Your browser does not support the video tag.

Video: This video provides step-by-step instructions on how to install your LEVOLOR Basics Roller Shade, covering unpacking, marking, mounting brackets, and final adjustments.

1. **Unpack Components:** After opening the package, verify you have the shade, manual, brackets, spacer shim, handle, screws, accessory box, and positioning strip.
2. **Mark Screw Hole Positions:** Place the positioning strip at the desired installation spot. Use a marker to mark the screw hole positions.
3. **Install Brackets:** Install and tighten the left and right brackets using the provided screws.
4. **Prepare for Shade Insertion:** Remove the pin from the right bracket.
5. **Insert Shade:** Insert the shade into the left bracket first. Then, insert the pin into the right side of the shade and slide it into the right bracket.
6. **Remove Protective Paper:** Carefully remove the protective paper from the shade.
7. **Install Handle:** Pull the shade all the way down. Align the positioning strip parallel to the bottom bar. Use

the center hole on the strip to install the handle in the exact middle of the bottom bar.

8. **Final Pull Test:** Perform a final pull test to ensure the shade operates smoothly.



Image: Visual guide for the three main installation steps: Measure, Mark, and Install.

OPERATING INSTRUCTIONS

Your LEVOLOR Basics Cordless Fabric Roller Shade is designed for simple and smooth operation.

- **To Lower the Shade:** Gently pull down on the handle located at the bottom of the shade. Continue pulling until the shade reaches your desired position.
- **To Raise the Shade:** Gently push up on the handle. The shade will smoothly retract upwards. Release the handle when the shade reaches your desired height.
- **Adjusting Position:** The cordless mechanism allows for precise positioning at any height.

MAINTENANCE

To keep your LEVOLOR Basics Cordless Fabric Roller Shade in optimal condition, follow these simple maintenance guidelines:

- **Regular Cleaning:** Dust the shade regularly with a soft cloth or a soft brush attachment on your vacuum cleaner.
- **Spot Cleaning:** For minor stains, gently blot the affected area with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric or coating.
- **Avoid Creasing:** When raising or lowering the shade, ensure it moves freely and does not get caught or creased.



Image: Icons highlighting the shade's durability, environmental friendliness, and ease of cleaning.

TROUBLESHOOTING

If you encounter any issues with your LEVOLOR Basics Cordless Fabric Roller Shade, consider the following common solutions:

- **Shade Not Raising/Lowering Smoothly:** Check for any obstructions in the window frame or along the shade's path. Ensure the bottom handle is securely attached and not damaged.
- **Shade Uneven:** Gently adjust the shade by pulling it down completely and then raising it slowly to allow the mechanism to re-align.
- **Installation Issues:** Re-verify that the mounting brackets are securely fastened and correctly aligned according to the installation instructions.

If problems persist, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Material	Polyester
Product Dimensions (L x W)	72"L x 46"W
Brand	LEVOLOR
Color	White
Opacity	Blackout
Operation Mode	Automatic (Cordless)
Mounting Type	Inside Mount (also supports Outside Mount)
Control Type	Cordless
Number of Items	1
Shape	Rectangular
Recommended Uses	Indoor
Model Number	197067219794
Manufacturer	LEVOLOR
UPC/GTIN	197067219794

WARRANTY

This LEVOLOR Basics Cordless Fabric Roller Shade is backed by a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship for the lifetime of the product, under normal use and service. Please retain your proof of purchase for warranty claims. For full details on the warranty coverage and how to make a claim, refer to the official LEVOLOR warranty documentation or contact customer support.

SUPPORT

For any questions, assistance with installation, troubleshooting, or warranty inquiries, please contact LEVOLOR customer support.

Customer Support: 1-800-LEVOLOR

You can also visit the official LEVOLOR website for additional resources and FAQs.