

bonsaii C283-C

bonsaii Auto-Feed Shredder C283-C User Manual

Model: C283-C

1. INTRODUCTION

Thank you for choosing the bonsaii Auto-Feed Shredder C283-C. This document provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new shredder. This model features micro-cut shredding for enhanced security, a large 31-liter waste bin, and quiet operation suitable for various environments.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before use and retain for future reference.

- Keep children away from the shredder.
- Do not insert hands or fingers into the shredder opening.
- Keep loose clothing, jewelry, and long hair away from the feed opening.
- Do not spray any flammable materials or aerosols near the shredder.
- Ensure the shredder is placed on a stable, level surface to prevent tipping.
- For CD shredding, use the manual feed slot only for small quantities and intermittent use. Do not use the auto-feed for CDs.
- Staples, paper clips, and credit cards should only be fed through the manual feed slot. Do not use the auto-feed for these items.
- Empty the waste bin when it is approximately 80% full to prevent jams and ensure proper operation.
- Regularly maintain the blades using lubricating oil or the provided maintenance sheets to ensure optimal performance and longevity.





警告



ご使用前に取扱説明書を必ずお読みください



子供
使用禁止



手を
入れるな



衣類
巻込み注意



髪の毛
巻込み注意



可燃
スプレー厳禁



鋭利な
物禁止



液体
禁止



鋭利な
物禁止



鋭利な
物禁止

●宅配便送り状、窓つき封筒、ガムテープ、両面テープ、粘着シール、カーボン紙、布、新聞紙、ポリ袋を細断
しないでください。
●細断クズは、ダストボックスの深さ 80% 位で捨ててください。

※注意：

① CD 対応：少量・間欠的使用のみ | 頻繁利用不可

② ホッチキス / ゼムクリップ / カード / CD：手動給紙口限定 | 自動口投入禁止

③ 刃の維持：定期的に潤滑油・メンテナンスシートを使用ください (12 枚無料付属)



Image: The bonsai shredder highlighting its 10-minute auto-sleep function and the inclusion of maintenance sheets for blade care.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- bonsai Auto-Feed Shredder C283-C Unit
- 31L Waste Bin
- 12 x Dedicated Maintenance Sheets
- User Manual (Japanese version included, English version provided here)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your shredder:



Image: Front view of the bonsai Auto-Feed Shredder C283-C, showing the auto-feed tray, control panel, and waste bin window.

Control Panel and Indicators:

大容量31L引き出し式ダストボックス



Image: Close-up of the shredder's control panel, displaying buttons for reverse, power, and forward, along with indicator lights for various statuses.

- **Power Button:** Turns the shredder on/off.
- **Forward/Reverse Buttons:** Manually controls the shredding direction.
- **Status Indicators:**
 - **Full Bin:** Illuminates when the waste bin is full.
 - **Overheat:** Illuminates when the motor is overheated.
 - **Overload:** Illuminates when too much paper is inserted.
 - **Door Open:** Illuminates if the waste bin is not properly closed or inserted.

Key Components:

- **Auto-Feed Tray:** For automatic shredding of up to 300 sheets of A4 paper.
- **Manual Feed Slot:** For shredding small quantities of paper (up to 10 sheets), staples, paper clips, and credit cards.
- **Waste Bin (31L):** Collects shredded materials. Features a transparent window to monitor fill level.

- **Casters:** For easy mobility of the shredder.
- **Main Power Switch:** Located at the rear of the unit for complete power disconnection.

5. SETUP

1. **Unpack the Shredder:** Carefully remove the shredder from its packaging. Retain packaging for future transport or storage.
2. **Position the Shredder:** Place the shredder on a flat, stable surface. Ensure there is adequate space around the unit for ventilation and access to the waste bin. The casters allow for easy movement.
3. **Connect Power:** Plug the power cord into a standard electrical outlet. Ensure the main power switch at the rear of the unit is in the 'ON' position.
4. **Insert Waste Bin:** Ensure the 31L waste bin is correctly inserted into the shredder. The shredder will not operate if the bin is not properly seated.

6. OPERATING INSTRUCTIONS


Automatic Shredding (Auto-Feed Tray)

This feature allows for shredding large batches of paper without manual feeding.

1. Open the auto-feed tray lid.
2. Stack up to 300 sheets of A4 paper neatly into the auto-feed tray. Ensure papers are free of folds or wrinkles.
3. Close the auto-feed tray lid. The shredder will automatically begin shredding.
4. The shredder can operate continuously for up to 60 minutes in auto-feed mode.

2x10mm 極細マイクロ

DIN規格
P-5

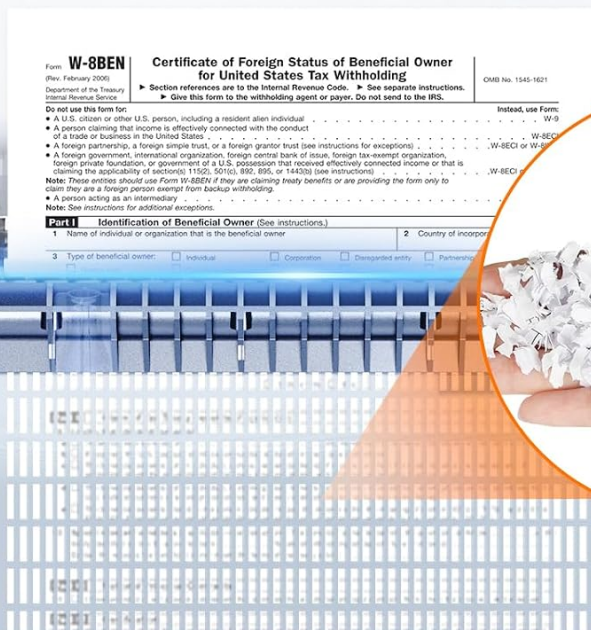

bonsai



**2×10mm
マイクロカット**

VS

Other



**一般的な
クロスカット**

Image: A stack of A4 paper being placed into the auto-feed tray of the bonsai shredder for automatic shredding.

Manual Shredding (Manual Feed Slot)

Use this slot for smaller quantities or specific items.

1. Ensure the shredder is powered on.
2. Insert up to 10 sheets of paper, a credit card, a stapled document, or a document with a paper clip into the manual feed slot.
3. The shredder will automatically detect the item and begin shredding.
4. The shredder can operate continuously for up to 30 minutes in manual feed mode.

置くだけ **300** 枚
自動細断

300枚

細断
(A4のみ)

連続使用時間

最大 **60**分



定期メンテナ
ンスで刃の切
れ味を持続！

(12枚無料付属)



Image: A hand feeding paper into the manual feed slot of the bonsai shredder, illustrating its capacity for up to 10 sheets.

Shreddable Materials:

- Paper (A4 size for auto-feed, up to 10 sheets for manual feed)
- Staples (manual feed only)
- Paper Clips (manual feed only)
- Credit Cards (manual feed only)

Non-Shreddable Materials (or limited use):

- CDs (small quantities, intermittent use only, manual feed)
- Adhesive envelopes, gummed tape, double-sided tape
- Carbon paper, newspaper, plastic bags

7. MAINTENANCE

Blade Maintenance

Regular blade maintenance is crucial for optimal performance and to prevent paper jams. Use the included 12 maintenance sheets periodically, especially after heavy use or when you notice a decrease in shredding efficiency.

1. Turn off the shredder.
2. Feed one maintenance sheet into the manual feed slot.
3. Allow the sheet to be fully shredded. This lubricates and cleans the blades.

Emptying the Waste Bin

The shredder is equipped with a full bin sensor. When the waste bin is full, the 'Full Bin' indicator will illuminate, and the shredder will stop operating.

1. Turn off the shredder.
2. Carefully pull out the waste bin.
3. Dispose of the shredded material.
4. Slide the waste bin back into place until it clicks securely. Ensure the 'Door Open' indicator is off before resuming operation.

こだわり機能設計



省エネルギー設計

10分以上作業されていない場合、スリープモードになっている。



≤58db静音設計

作業の邪魔にならない。



Image: The bonsai shredder with its 31L waste bin pulled out, showing the transparent window and casters for easy emptying.

Cleaning

The shredder has an auto-cleaning function. For external cleaning, wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shredder does not turn on.	Power cord not plugged in; Main power switch off; Waste bin not properly inserted.	Ensure power cord is securely plugged in. Turn on the main power switch at the rear. Re-insert the waste bin correctly until the 'Door Open' indicator is off.

Problem	Possible Cause	Solution
Shredder stops during operation and 'Overheat' indicator is on.	Continuous operation has caused the motor to overheat.	Turn off the shredder and allow it to cool down for at least 30-60 minutes. The shredder will automatically resume operation once cooled.
Shredder stops and 'Overload' indicator is on.	Too much paper inserted at once.	Press the 'Reverse' button to clear the jam. Reduce the amount of paper and try again.
Shredder stops and 'Full Bin' indicator is on.	Waste bin is full.	Empty the waste bin and re-insert it properly.
Paper jam occurs.	Too much paper, uneven feeding, or blades need lubrication.	Press the 'Reverse' button to clear the jam. Reduce paper quantity. Use a maintenance sheet to lubricate blades.



Image: Diagram illustrating the intelligent protection system of the bonsai shredder, including overheat and overload protection features.

9. SPECIFICATIONS

Feature	Detail
Brand	bonsaii
Model Number	JP-C283-C
Shred Type	Micro-cut (2x10mm)
Waste Bin Capacity	31 Liters
Auto-Feed Capacity	Up to 300 sheets (A4)
Manual Feed Capacity	Up to 10 sheets

Feature	Detail
Continuous Operation Time	Auto-feed: 60 minutes; Manual feed: 30 minutes
Noise Level	≤58dB
Dimensions (D x W x H)	40.5 cm x 35 cm x 56.3 cm
Item Weight	15.1 kg
Power Type	Corded Electric
Special Features	Energy-saving mode, Quiet design, Casters, Full bin sensor, Overheat/Overload protection, Auto-reverse, Auto-cleaning



Image: The bonsaii shredder with its dimensions (height 563mm, width 350mm, depth 405mm) and casters highlighted for easy movement.

10. WARRANTY AND SUPPORT

Warranty Information

This bonsaii product is covered by a **1-year warranty** from the date of purchase. This warranty excludes accessories and consumable items such as maintenance sheets. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact bonsaii customer support. We offer dedicated Japanese-language phone and email support to assist you promptly and courteously. Contact information can typically be found on the bonsaii official website or through your purchase platform.

