



Manuals.plus /

› **Geevon** /

› Geevon Small Travel Alarm Clock Model 250509-B User Manual

## Geevon 250509-B

# Geevon Small Travel Alarm Clock Model 250509-B User Manual

Your guide to setup, operation, and maintenance.

## 1. INTRODUCTION

---

Welcome to your new Geevon Small Travel Alarm Clock. This compact and versatile digital alarm clock is designed to provide accurate timekeeping, dual alarms, indoor temperature display, and a convenient backlight function. Its portable design makes it ideal for various settings, including bedrooms, home offices, and travel.

# 6-in-1 Multifunctional Small Alarm Clock



Image 1.1: Overview of the Geevon Small Travel Alarm Clock, highlighting its compact size and key features such as dual alarm, locking function, snooze, backlight, battery power, 12/24 hour display, temperature, and calendar.

## 2. SETUP

### 2.1 Battery Installation

The Geevon Small Travel Alarm Clock requires two (2) AAA batteries for operation. Batteries are not included with the product.

1. Locate the battery compartment on the back of the clock.
2. Open the battery cover by sliding it down or lifting the latch.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and - terminals align with the markings inside the compartment).
4. Close the battery cover securely.

# Battery Operated



Image 2.1: The back of the alarm clock with the battery compartment open, illustrating where to insert the two AAA batteries.

## 2.2 Initial Time and Date Setting

After installing batteries, set the current time and date.

1. Press and hold the **SET** button (located on the top of the clock) for approximately 3 seconds to enter time setting mode. The hour digit will begin to flash.
2. Use the **UP** (^) or **DOWN** (v) buttons (on the back) to adjust the hour.
3. Briefly press **SET** again to confirm the hour and move to minute setting. Adjust minutes using **UP** (^) or **DOWN** (v).
4. Continue briefly pressing **SET** to cycle through and set the year, month, and day, adjusting each value with the **UP** (^) or **DOWN** (v) buttons.
5. Press **SET** one last time to exit the setting mode and save your changes.

Video 2.1: Demonstration of setting the time and alarm on the Geevon Small Travel Alarm Clock. This video shows the button locations and the step-by-step process for adjusting time, minutes, and alarm settings.

## 3. OPERATING INSTRUCTIONS

### 3.1 12/24 Hour Format

To switch between 12-hour (AM/PM) and 24-hour formats:

- In normal time display mode, briefly press the **UP** (^) button. The display will toggle between the two formats.



Image 3.1: The clock display showing both 12-hour (AM/PM) and 24-hour time formats, illustrating the clear digital readout.

### 3.2 Temperature Display

The clock displays the indoor temperature. To switch between Celsius (°C) and Fahrenheit (°F):

- In normal time display mode, briefly press the °C/°F button (located on the back of the clock).



Image 3.2: The clock display showing the indoor temperature in both Fahrenheit and Celsius, demonstrating the temperature conversion feature.

### 3.3 Setting Alarms (Alarm 1 & Alarm 2)

The clock features two independent alarms (Alarm 1 and Alarm 2) that can be set for different times or days.

1. To set Alarm 1: Press and hold the **Alarm 1** button (bell icon) on the back for approximately 3 seconds. The hour digit for Alarm 1 will flash.
2. Use the **UP** (^) or **DOWN** (v) buttons to adjust the desired alarm hour.
3. Briefly press **Alarm 1** again to confirm the hour and move to minute setting. Adjust minutes using **UP** (^) or **DOWN** (v).
4. Briefly press **Alarm 1** again to select the alarm repetition mode:
  - **1-5**: Alarm sounds Monday to Friday.
  - **6-7**: Alarm sounds Saturday and Sunday.
  - **1-7**: Alarm sounds every day.
5. Briefly press **Alarm 1** one last time to confirm your settings and exit.

6. Repeat the entire process for Alarm 2 using the **Alarm 2** button.



Image 3.3: The clock display illustrating the setup for two separate alarm times, indicating the flexibility for weekday and weekend alarms.

### 3.4 Activating/Deactivating Alarms

To turn an alarm ON or OFF:

- In normal time display mode, briefly press the **Alarm 1** or **Alarm 2** button.
- An alarm icon will appear on the display when the respective alarm is active. The icon will disappear when the alarm is deactivated.

### 3.5 Snooze Function

When the alarm sounds:

- Press the **LIGHT/SNOOZE** button (top of the clock) to activate the snooze function. The alarm will pause for 5 minutes and then sound again.
- The alarm sound is designed to gradually increase in volume over 2 minutes to ensure a gentle waking experience.

### 3.6 Backlight Operation

To illuminate the display:

- Press the **LIGHT/SNOOZE** button. The backlight will illuminate for 5 seconds.

## Press “💡” Button, the Backlight last for 5 Seconds

No Backlight At Night

Turn On Backlight



Image 3.4: The clock display with and without the 5-second backlight activated, demonstrating its visibility in low-light conditions.

### 3.7 Lock Function

To prevent accidental changes to settings or alarms, use the lock function:

- To lock: Press and hold the **LIGHT/SNOOZE/LOCK** button for approximately 3 seconds until a lock icon appears on the display.
- To unlock: Press and hold the same button for approximately 3 seconds until the lock icon disappears.

## With Locking Function, Convenient to Bring Along

When the lock function is turned, the button is locked



Image 3.5: The clock being placed into a bag, illustrating the convenience of the lock function to prevent accidental button presses during travel.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean your Geevon Small Travel Alarm Clock:

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, chemical solvents, or spray directly onto the clock, as these may damage the surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the display dims, becomes erratic, or functions become unreliable.

- Follow the steps in Section 2.1 Battery Installation.
- Always replace both AAA batteries simultaneously to ensure optimal performance.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or very dim.	Batteries are dead or incorrectly installed.	Check battery installation and replace with fresh AAA batteries.
Alarm does not sound.	Alarm is not set or activated; low battery.	Verify the alarm is set correctly and activated (alarm icon visible on display). Replace batteries if low.
Time is incorrect.	Time was not set properly or batteries were removed.	Re-set the time and date following the instructions in Section 2.2.
Buttons are unresponsive.	Lock function is active.	Deactivate the lock function by pressing and holding the LIGHT/SNOOZE/LOCK button for 3 seconds.

## 6. SPECIFICATIONS

- **Model:** 250509-B
- **Dimensions:** 3.5" (W) x 2.36" (H)
- **Weight:** 0.26 Pounds
- **Power Source:** 2 x AAA Batteries (not included)
- **Display:** 3-inch LCD Digital Display
- **Features:** Dual Alarms, Snooze, 5-second Backlight, Indoor Temperature Display, 12/24 Hour Format, Date, Day of Week, Lock Function, Silent Operation
- **Materials:** Acrylonitrile Butadiene Styrene (ABS), LCD, Plastic



Image 6.1: Various views of the Geevon Small Travel Alarm Clock, including front, top, side, and back, showcasing its compact design and button layout.

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty

This Geevon Small Travel Alarm Clock comes with a 12-month warranty from the date of purchase, covering manufacturing defects and malfunctions under normal use.

### 7.2 Support

For technical assistance, troubleshooting, or warranty claims, please contact Geevon customer support through the retailer's platform where you purchased the product or visit the official Geevon website for contact information.