

SILKYDRY SK-KC57448

SILKYDRY Tilt Out Trash Can Cabinet with Power Outlet - Model SK-KC57448 User Manual

Brand: SILKYDRY | Model: SK-KC57448

[Introduction](#) [Safety Information](#) [Setup & Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SILKYDRY Tilt Out Trash Can Cabinet with Power Outlet, Model SK-KC57448. This versatile furniture piece is designed to enhance your kitchen or laundry area with integrated storage, a hidden trash receptacle, and convenient power outlets. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Assembly:** Always assemble the unit on a soft, clean surface to prevent scratches. Ensure all parts are present and undamaged before beginning assembly. Do not overtighten screws.
- **Stability:** This cabinet includes anti-tipping kits. It is crucial to install these kits as instructed to prevent the cabinet from tipping over, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 284 lbs (129 kg) for the entire unit. Distribute weight evenly on shelves and drawers.
- **Electrical Safety:** The integrated power outlets and USB ports are rated for 125V/12A and 5V/2.1A respectively. Do not overload the outlets. Ensure the power cord is not pinched or damaged. Keep liquids away from electrical components.
- **Placement:** Place the cabinet on a level surface. Avoid placing it in areas with excessive moisture or direct sunlight.
- **Children and Pets:** Keep children and pets away from the assembly area. Do not allow children to climb on or play with the cabinet. The tilt-out mechanism should be operated with care to avoid pinching.

3. SETUP & ASSEMBLY

Assembly is required for this product. Please follow the instructions carefully. It is recommended to have two people for assembly.

3.1 Package Contents

Verify that all components are present before starting assembly. The package includes one (1) Tilt Out Trash Can Cabinet and all necessary hardware for assembly.

3.2 Assembly Steps

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface. Refer to the included hardware list and diagrams to identify each part.
2. **Assemble the Main Frame:** Connect the side panels to the base and top panels using the provided screws and dowels. Ensure all connections are secure.
3. **Install Drawers:** Assemble the two spacious drawers according to the diagrams. Attach the smooth slide rails to the drawer sides and the cabinet frame. Insert the drawers into their designated slots.
4. **Attach Barn Door Cabinet:** Assemble the barn door cabinet section. This includes the door itself and the internal shelves. One shelf is adjustable; position it as desired.
5. **Install Tilt-Out Mechanism:** Assemble the tilt-out door for the trash can compartment. Ensure the flexible hinges are correctly installed to allow for a 25-degree tilt. A built-in universal wheel is integrated to prevent door sagging.
6. **Integrate Power Outlet:** Secure the power outlet strip into the designated slot on the countertop. Route the 4.9 ft power cord through the cable hole at the back of the cabinet.
7. **Attach Side Shelves:** Install the two side shelves, ensuring the 2-inch high guardrails are facing upwards to secure items.
8. **Install Anti-Tipping Kit:** For safety, attach the anti-tipping kits to the back of the cabinet and secure them to a wall stud. This step is critical to prevent accidental tipping.
9. **Final Checks:** Verify that all screws are tightened, and the cabinet is stable. Test the operation of drawers and doors.



Figure 3.1: Fully assembled cabinet in a laundry room, showcasing the tilt-out door and side cabinet.

Product Dimensions



Figure 3.2: Detailed product dimensions, including recommended trash bin size and power cord length.

Anti-Tipping Device

Avoid accidental tipping and protect your family



Figure 3.3: Illustration of the anti-tipping device, essential for securing the cabinet to a wall.

4. OPERATING INSTRUCTIONS

4.1 Tilt-Out Trash Can Compartment

The left compartment features a tilt-out door designed to conceal a trash can or laundry hamper. The door tilts out at a 25-degree angle for easy access. It accommodates a recycling bin up to 9.25 gallons (approximately 14" L x 9" W x 20" H). To open, gently pull the handle on the tilt-out door. To close, push the door back until it is flush with the cabinet. The built-in universal wheel helps ensure smooth operation and prevents the door from sagging.



Figure 4.1: The tilt-out door mechanism, showing the recommended trash can size.

4.2 Integrated Power Outlet

The countertop is equipped with a charging station that includes two 125V/12A power outlets and two 5V/2.1A USB ports. Plug the cabinet's 4.9-foot power cord into a standard wall outlet. Use the power outlets and USB ports to charge devices or power small kitchen appliances. Ensure that the total load does not exceed the specified ratings.



Figure 4.2: Close-up of the practical countertop charge station with power and USB ports.

4.3 Storage Drawers and Shelves

The cabinet features two spacious drawers with smooth slide rails for easy access to utensils, cutlery, or other small items. The right cabinet section has dual inner shelves, one of which is adjustable to three different positions, allowing customization for items of various sizes. Additionally, two side shelves with 2-inch high guardrails provide convenient storage for snacks, drinks, or spices.

More Storage Options



Wide Countertop

For convenient simple food preparation

2 Spacious Drawers

Premium slides for smooth operation

Figure 4.3: View of the two spacious drawers and the right-side cabinet with internal shelving.

Dual Inner Shelves, One Adjustable

Ideal for stowing away tableware, utensils, or snacks



2 Side Shelves with Guardrails

Making it easy to access your seasonings

Figure 4.4: Detail of the dual inner shelves, one adjustable, and the side shelves with guardrails.

5. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the laminated finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Electrical Components:** Keep the power outlets and USB ports clean and free of dust. Do not attempt to repair or modify the electrical components yourself.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Screws are loose; anti-tipping kit not installed or improperly secured.	Ensure all assembly screws are tightened. Install the anti-tipping kit securely to a wall stud. Place the cabinet on a level surface.
Tilt-out door is difficult to open/close or sags.	Hinges are loose or misaligned; built-in wheel not functioning correctly.	Check and tighten hinges. Ensure the built-in universal wheel is clean and free of obstructions.
Drawers do not slide smoothly.	Slide rails are dirty or misaligned.	Clean the drawer slide rails. Ensure drawers are correctly inserted into the rails.
Power outlets/USB ports are not working.	Power cord not plugged in; circuit breaker tripped; overloaded outlets.	Ensure the cabinet's power cord is securely plugged into a functioning wall outlet. Check your household circuit breaker. Do not exceed the rated capacity of the outlets.

7. SPECIFICATIONS

Brand:	SILKYDRY
Model Number:	SK-KC57448
Color:	White
Material:	Engineered Wood (PB and MDF laminated with triamine)
Product Dimensions (L x W x H):	39.5" x 14" x 36" (99.06 cm x 35.56 cm x 91.44 cm)
Item Weight:	72.5 lbs (32.89 kg)
Weight Capacity:	Up to 284 lbs (129 kg)
Tilt-Out Bin Capacity:	Fits up to 9.25-gallon trash cans
Power Outlets:	2 x 125V/12A
USB Ports:	2 x 5V/2.1A
Power Cord Length:	4.9 ft (1.5 m)
Number of Shelves:	3 (including 1 adjustable)
Assembly Required:	Yes
Special Features:	Tilt-out trash can cabinet, integrated power outlet, 2 drawers, adjustable shelves, barn door, anti-tipping kit, built-in wheel for door.

8. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to the product packaging or contact SILKYDRY customer support for warranty terms and conditions.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your SILKYDRY Tilt Out Trash Can Cabinet, please contact SILKYDRY customer support. Refer to the contact information provided on the product packaging or the official SILKYDRY website for the most up-to-date support options.

For general inquiries, you may visit the [SILKYDRY Store on Amazon](#).