

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CAMWORLD](#) /

› [CAMWORLD Digital Camera AC18 User Manual](#)

CAMWORLD AC18

CAMWORLD Digital Camera AC18 User Manual

Model: AC18

INTRODUCTION

Thank you for choosing the CAMWORLD Digital Camera AC18. This manual provides detailed instructions for the proper use, setup, and maintenance of your new camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- 1x CAMWORLD Digital Camera AC18
- 1x 64GB TF Card (Micro SD Card)
- 1x Rechargeable Battery
- 1x Type-C USB Cable
- 1x Lanyard
- 1x Carry Bag
- 1x Lens Cloth
- 1x Instruction Manual (this document)



Image: All components included in the CAMWORLD Digital Camera AC18 package.

PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

72MP Autofocus Digital Camera for Photograph

Record the best moments of your life anytime



4K Video



72MP Image



Auto Focus



Flash Light



18X Digital
Zoom



Various Filters



Webcam
Function



270° Flip
Screen



Image: Detailed diagram showing the various parts and controls of the CAMWORLD Digital Camera AC18.

1. Video Button
2. Shutter Button
3. Power Button
4. Built-in Microphone
5. Cold Shoe Connector (for external flashlight/microphone)
6. W / T Toggle Bar (Zoom In/Out)
7. USB Port (Type-C)
8. HD Port (HDMI Output)
9. Lanyard Port
10. Flash / Fill Light
11. Lens
12. Indicator Light
13. Playback Button
14. UP / Flash Button
15. Left / Scene Mode Button
16. Right / Metering Mode Button
17. Menu / Confirm Button
18. Down / Timer Button
19. DISP Button (Display Information)
20. Delete / Return Button
21. Battery Cover
22. Tripod Port

SETUP

1. Installing the Battery

1. Open the battery cover (21) located on the bottom of the camera.
2. Insert the provided rechargeable battery, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery cover securely.

2. Charging the Battery

Connect the camera to a power source using the supplied Type-C USB cable (7). The indicator light (12) will show charging status. A full charge provides approximately 80 minutes of 4K video recording.

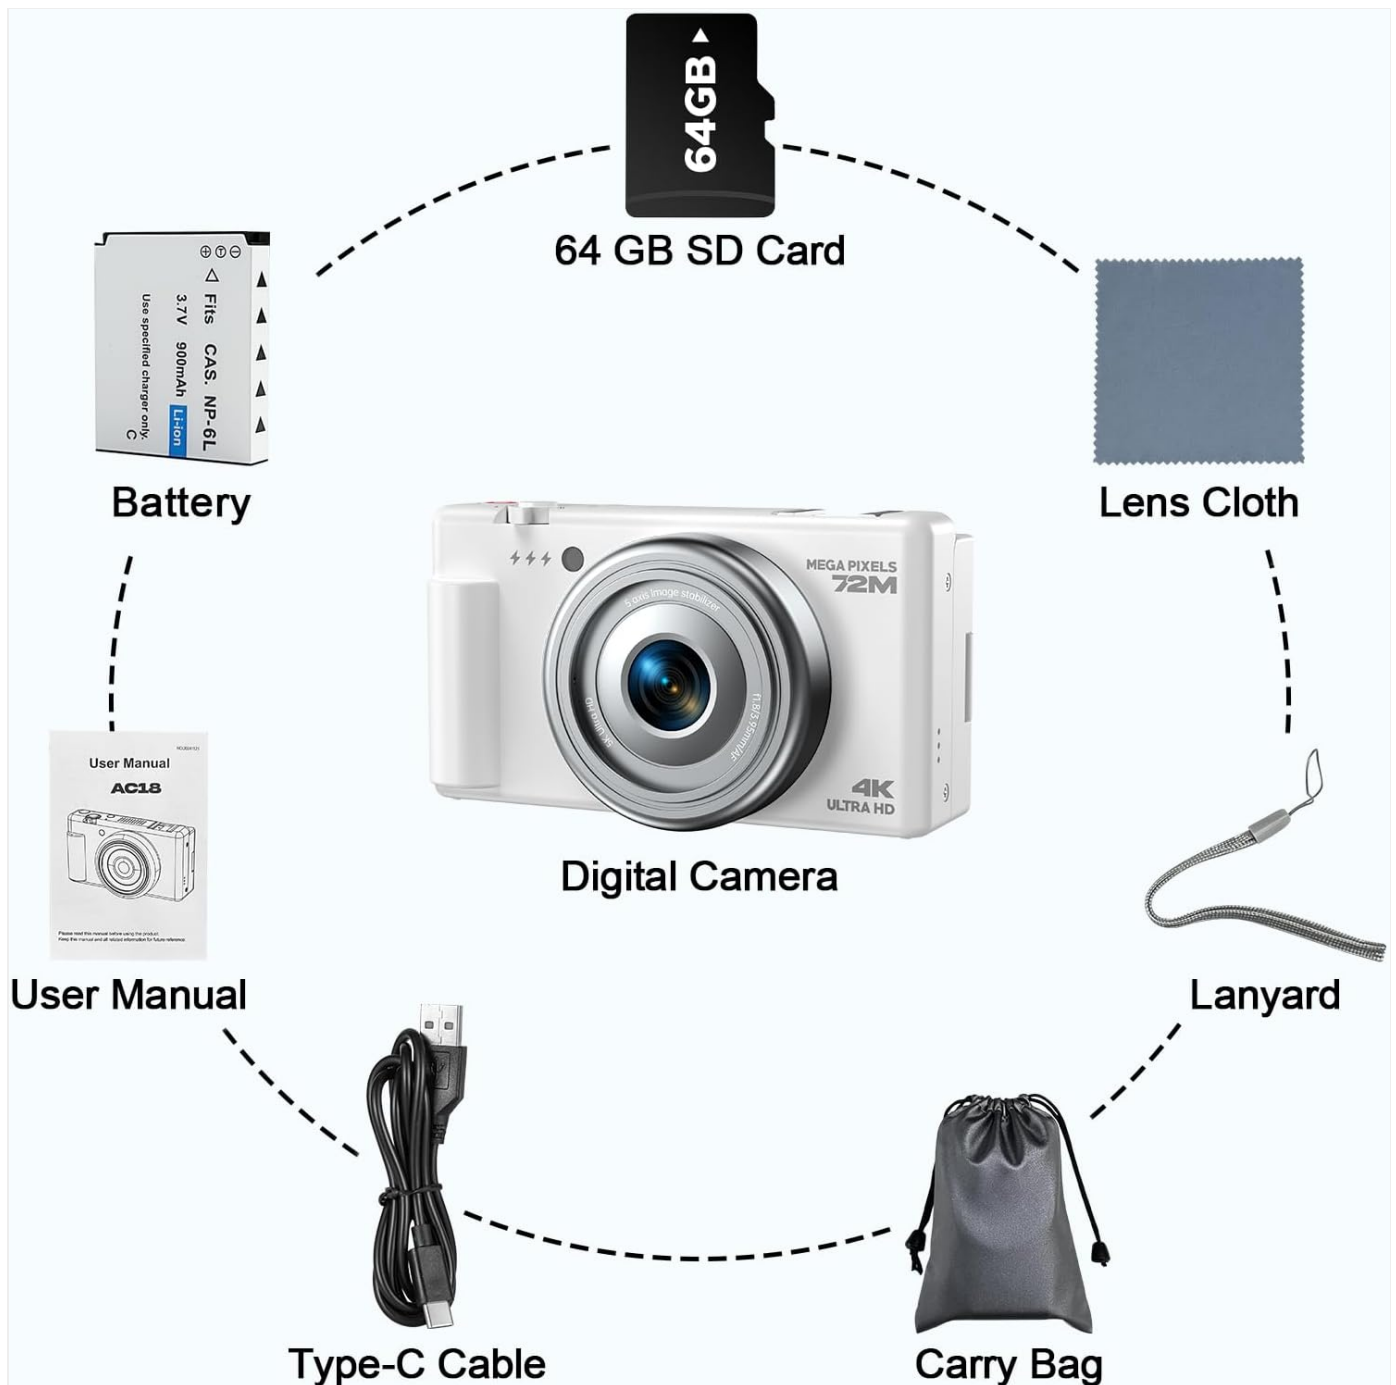


Image: The camera can be charged using a wall adapter or a portable power bank via the Type-C USB cable.

3. Inserting the TF Card (Micro SD Card)

Locate the TF card slot, usually near the battery compartment or on the side. Insert the 64GB TF card with the metal contacts facing the correct direction until it clicks into place. Ensure the card is properly formatted before first use via the camera's menu settings.

4. Attaching the Lanyard

Thread the lanyard through the lanyard port (9) to prevent accidental drops.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the Power Button (3) to turn the camera on or off.

Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.8-inch 270° rotatable LCD screen.
3. Press the Shutter Button (2) halfway down to activate autofocus. A green box will appear when focus is achieved.
4. Press the Shutter Button (2) fully to capture the image.



Image: The camera's autofocus in action, showing a clear, focused image after activation.

Recording Videos

1. Turn on the camera.
2. Press the Video Button (1) to start recording. A red 'REC' indicator will appear on the screen.
3. Press the Video Button (1) again to stop recording.

Your browser does not support the video tag.

Video: Demonstration of the CAMWORLD Digital Camera AC18's video recording capabilities, showing a child using the camera.

Zoom Function

Use the W / T Toggle Bar (6) to adjust the 18X digital zoom. Press 'W' to zoom out (wide) and 'T' to zoom in (telephoto).

18X Digital Zoom



9 kinds of filters to you to choose from



Image: Visual representation of the 18X digital zoom feature, showing varying levels of magnification on a distant object.

Flash and Fill Light

The camera supports flash and fill-light shooting for low-light conditions. Press the UP / Flash Button (14) to cycle through flash modes (Auto, On/Fill, Off).

INNOVATIVE 72MP AUTOFOCUS CAMERA

Press the Shutter halfway to autofocus for sharper and clear images

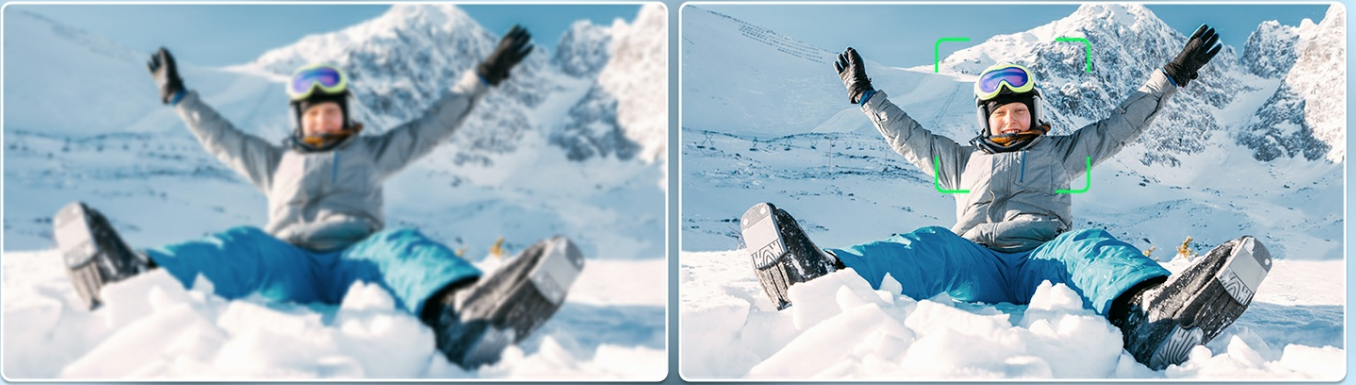 


Image: Demonstration of the camera's flash/fill light feature, showing improved illumination in a dark environment.

Special Shooting Modes

- **Self-Timer:** Use the Down / Timer Button (18) to set a delay (e.g., 3s, 10s) before taking a photo.
- **Continuous Shooting:** Capture a rapid sequence of images.
- **Time-Lapse:** Record a series of images over time to create a sped-up video.
- **Loop Recording:** Continuously record video, overwriting the oldest footage when the memory card is full.
- **Anti-Shake:** Digital image stabilization helps reduce blur from camera movement.

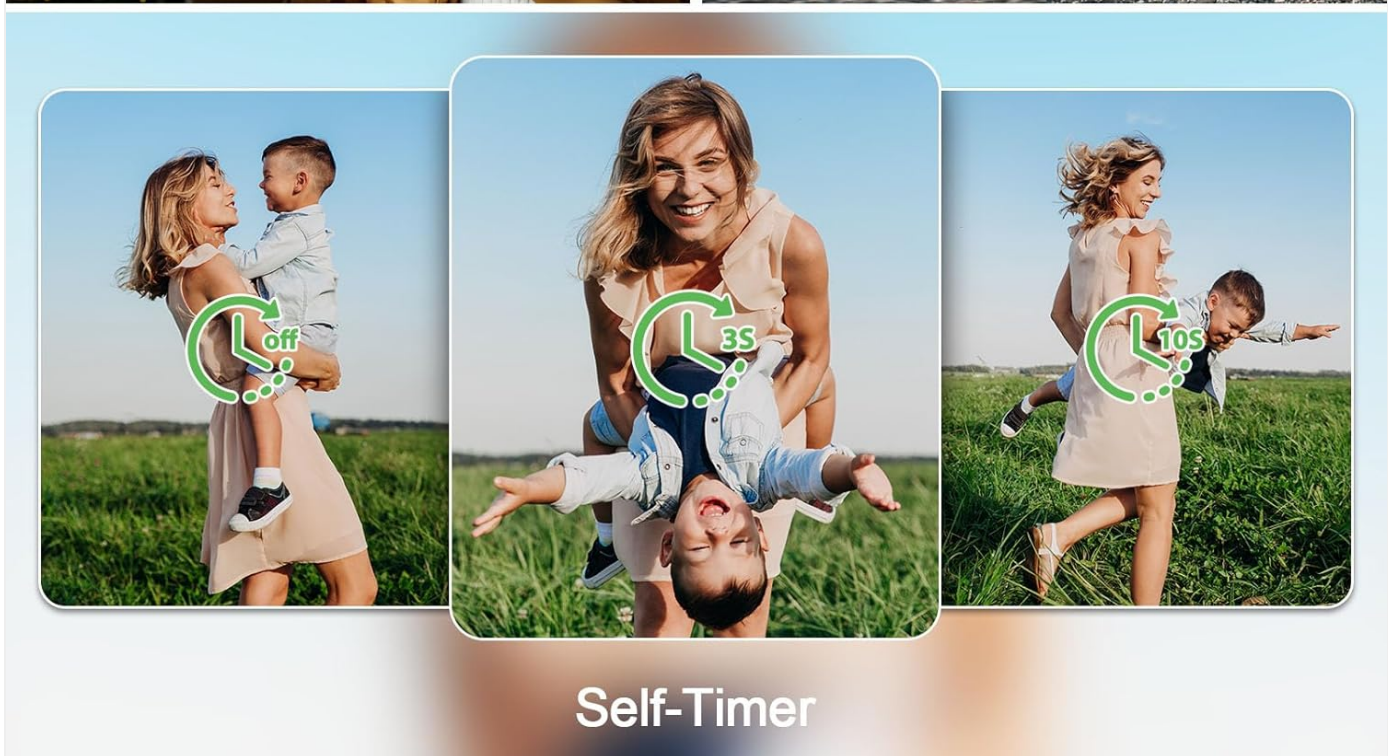
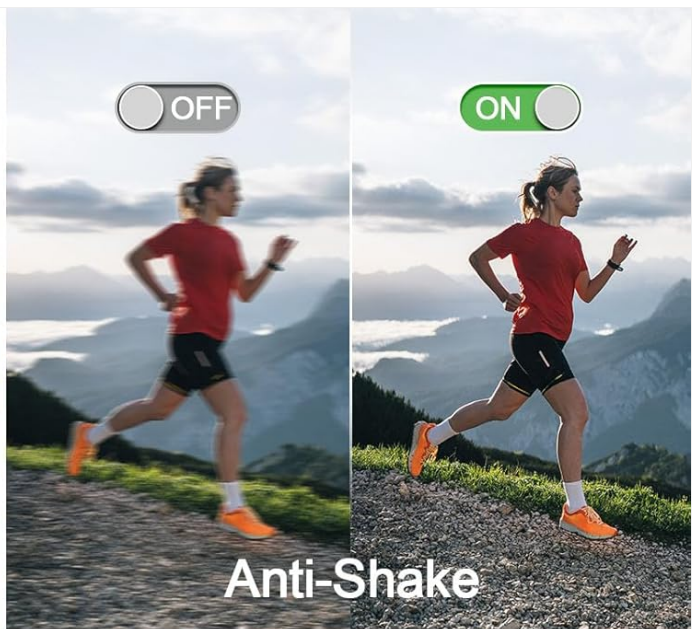
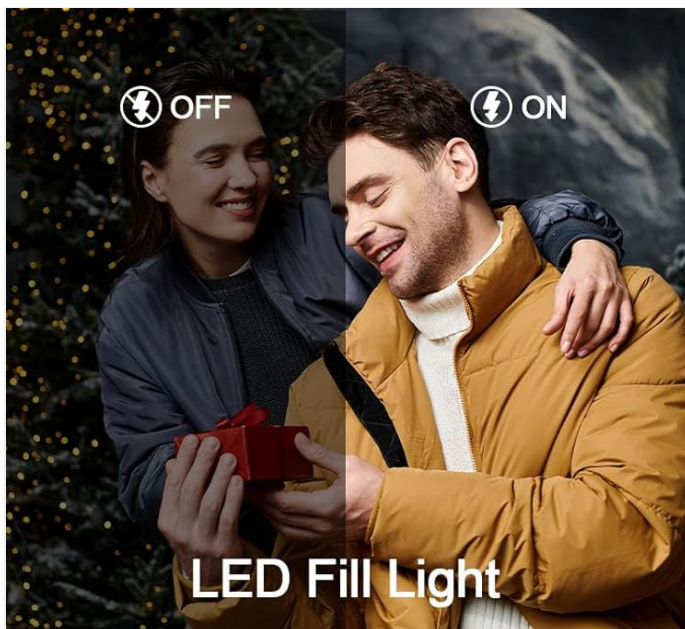


Image: Examples of advanced shooting modes including self-timer, time-lapse, and continuous shooting.



Image: The Anti-Shake feature ensures clearer images by compensating for camera movement.

Filters and Exposure Compensation

The camera offers various creative filters and exposure compensation settings to enhance your photos. Access these options through the camera's menu.



Image: Examples of various creative filters and exposure compensation settings available on the camera.

Webcam Functionality

Connect the camera to a computer using the Type-C USB cable (7) to use it as a webcam for video calls or live streaming on platforms like YouTube.

9 kinds of filters to you to choose from



13 kinds of exposure compensation

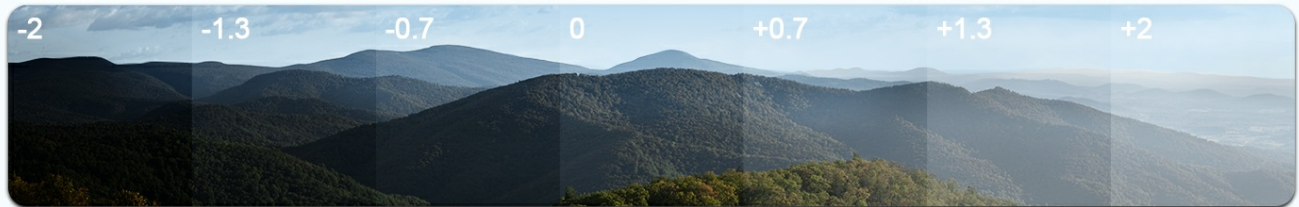


Image: The camera can function as a webcam for live streaming and video calls when connected to a computer.

MEDIA MANAGEMENT

Viewing Photos and Videos

Press the Playback Button (13) to enter playback mode. Use the navigation buttons (14, 15, 16, 18) to browse through your captured media. Press the Delete / Return Button (20) to exit playback or delete selected files.



Image: The camera's 270° flip screen allows for easy viewing of captured media, which can also be played back on a computer or TV via HD output.

Transferring Files to a Computer

Connect the camera to your computer using the Type-C USB cable (7). The camera will appear as a removable disk drive. You can then copy photos and videos directly to your computer. Alternatively, remove the TF card and insert it into a card reader connected to your computer.

MAINTENANCE

- **Cleaning the Lens:** Use the provided lens cloth (or a soft, lint-free cloth) to gently wipe the lens (11). Avoid using harsh chemicals.
- **Cleaning the Screen:** Use a soft, dry cloth to clean the LCD screen.

- **Storage:** When not in use, store the camera in the carry bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove the battery if the camera will not be used for an extended period. Recharge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Cannot take photos/record videos.	TF card is full, not inserted, or corrupted.	Insert a TF card. Delete unnecessary files or format the card (this will erase all data). Replace the card if corrupted.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus engages (green box). Use Anti-Shake mode. Clean the lens with the provided cloth.
Camera freezes or becomes unresponsive.	Temporary software glitch.	Remove and reinsert the battery to reset the camera.
Cannot connect to computer as webcam.	Incorrect USB mode or driver issue.	Ensure the camera is in webcam mode (if applicable, check menu). Try a different USB port or cable. Update computer drivers if necessary.

SPECIFICATIONS

Feature	Detail
Model Name	Digital Camera (AC18)
Brand	CAMWORLD
Maximum Webcam Image Resolution	72 MP
Photo Sensor Technology	CMOS
Effective Still Resolution	72 MP
Video Resolution	2160p (4K)
Digital Zoom	18x
Screen Size	2.8 inches
Display Type	LED, 270° Flip Screen
Autofocus	Yes (Hybrid, Active)
Image Stabilization	Digital

Feature	Detail
Flash Modes	Auto, On/Fill
Storage Media	Micro SD (TF Card), up to 128GB supported
Included TF Card	64GB
Connectivity	USB Type-C, HD Output
Battery Type	Lithium Ion
Battery Life (Video)	Approx. 80 minutes (4K recording)
Special Features	Webcam function, Loop Recording, Time-Lapse, Continuous Shooting, Self-Timer
Dimensions (D x W x H)	1.97"D x 4.33"W x 2.36"H
Weight	0.25 Kilograms

WARRANTY AND SUPPORT

Warranty: This product comes with a 2-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support: For any questions, technical assistance, or warranty inquiries, please contact CAMWORLD customer support through the retailer where you purchased the product or visit the official CAMWORLD website for contact information. Please have your model number (AC18) and purchase details ready when contacting support.

