

ECOTINY HW1273BK

ECOTINY Ultra Slim TV Floor Stand

MODEL: HW1273BK

Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ECOTINY Ultra Slim TV Floor Stand, Model HW1273BK. Designed for televisions ranging from 37 to 86 inches, this stand offers a space-saving solution with adjustable features and integrated cable management. Please read this manual thoroughly before installation and retain it for future reference.

Key Features:

- **Ultra-Slim Space-Saving Design:** Features a modern curved base that fits neatly against walls or over baseboards, ideal for minimalist setups.
- **No Drilling Required:** Eliminates the need for wall drilling, making it suitable for renters or flexible room arrangements. Includes an anti-tip kit for added safety.
- **Wide TV Compatibility:** Supports 37-86 inch TVs with VESA patterns up to 600x400mm.
- **Flexible Screen Adjustment:** Offers stepless height adjustment and tool-free screen tilting (+5° to -10°) for optimal viewing angles.
- **Integrated Cable Management:** Features built-in cable routing to conceal messy wires, maintaining a clean and organized appearance.
- **Adjustable AV Shelf:** Includes an FSC-certified wooden shelf that can be adjusted to accommodate media devices or decor.

2. SAFETY INFORMATION

Ensure all components are securely fastened before placing the television on the stand. Always use the provided anti-tip kit to anchor the stand to the wall, especially in households with children or pets, to prevent accidental tipping. Do not exceed the maximum weight capacity of 99 lbs (45 kg) for the TV and 11 lbs (5 kg) for the shelf. If you are unsure about any part of the assembly or operation, consult a qualified professional.



Image: Anti-tip kit installation. The kit provides additional stability by securing the stand to the wall, preventing accidental tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or defective, please contact customer support.



Image: Overview of all components included in the package for the TV floor stand.

- Base Plate
- Vertical Support Column(s)
- TV Mounting Bracket
- Adjustable AV Shelf
- Cable Management Clips
- Anti-Tip Safety Kit
- Hardware Kit (screws, washers, spacers, Allen key)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your ECOTINY TV Floor Stand. It is recommended to have two people for safe assembly, especially when mounting the TV.

Assembly Video Guide:

Your browser does not support the video tag.

Video: ECOTINY Slim TV Stand Installation Manual. This video provides a step-by-step visual guide for assembling your TV floor stand.

Step-by-Step Assembly:

1. **Assemble the Base:** Attach the vertical support column to the base plate using the provided hardware. Ensure all screws are tightened securely.



Image: Connecting the vertical column to the sturdy base plate.

- 2. Attach TV Mounting Brackets to TV:** Secure the TV mounting brackets to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure the brackets are level and firmly attached to your TV's VESA mounting holes.



Image: Securing the TV mounting brackets to the back of your television.

- 3. Mount the TV onto the Stand:** Carefully lift your TV (with the brackets attached) and hook it onto the vertical support column's mounting plate. Ensure the TV is centered and level. Secure the TV using the safety screws or latches provided on the mounting brackets.



Image: The safety screw keeps your TV fixed and prevents it from sliding.

- 4. Install the AV Shelf:** Attach the adjustable AV shelf to the desired height on the vertical support column. Tighten the screws to secure it in place.

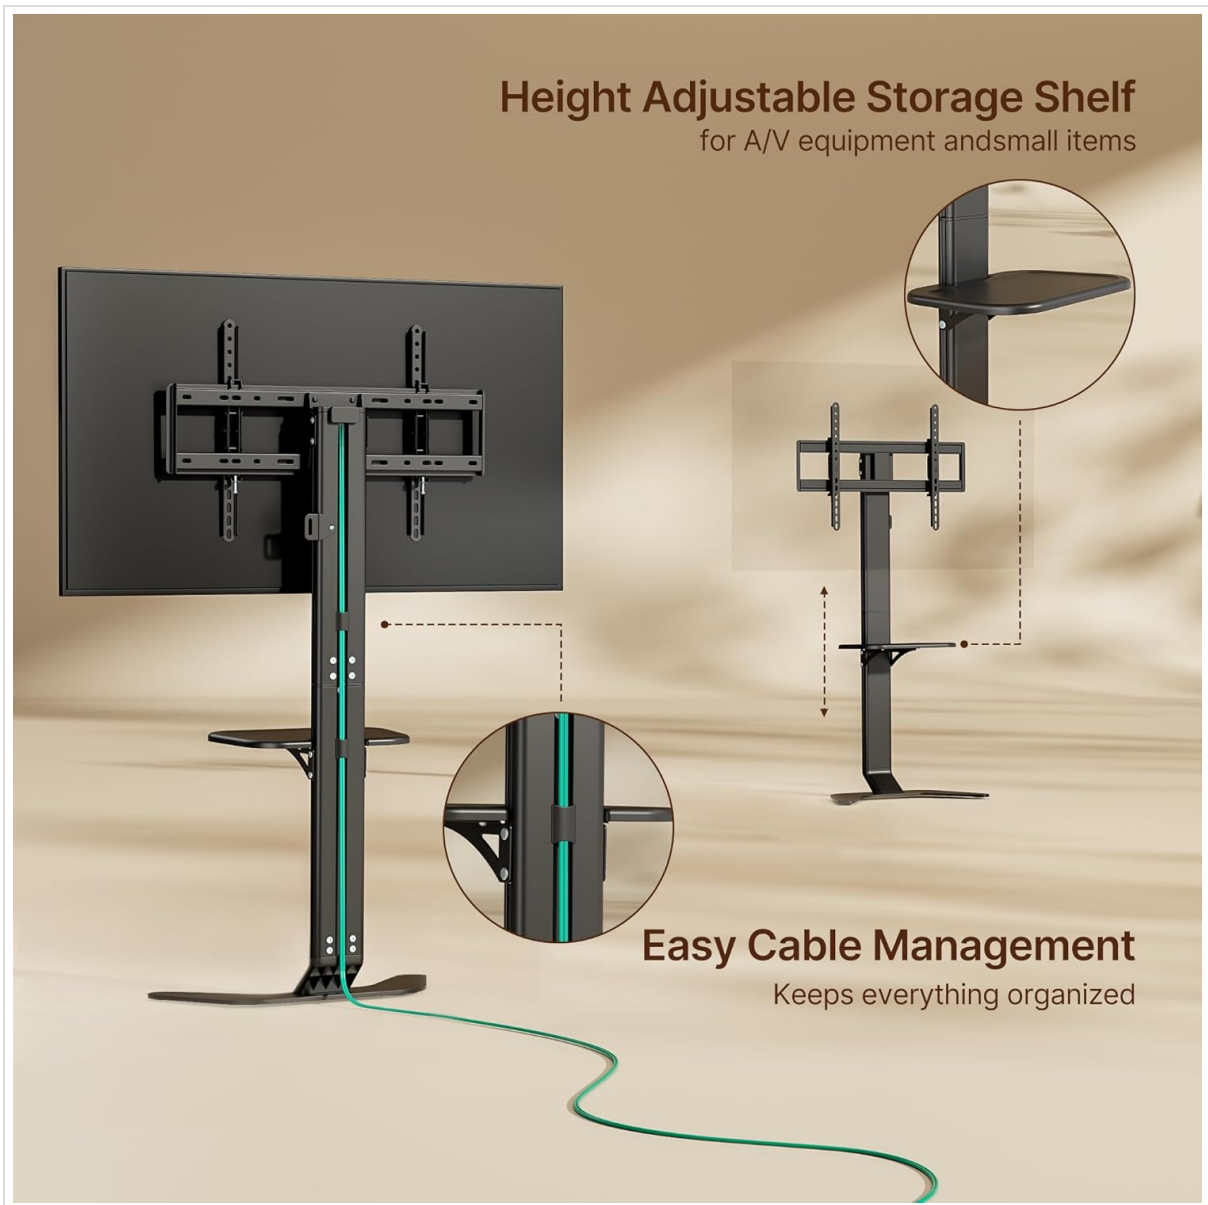


Image: The height-adjustable AV shelf provides space for media equipment or decorative items.

5. **Install Anti-Tip Kit:** For enhanced safety, install the anti-tip kit by securing one end to the stand and the other to a wall stud or appropriate wall anchor.
6. **Cable Management:** Route all TV and device cables through the integrated cable management clips along the back of the vertical column to maintain a tidy appearance.



Image: Integrated cable routing hides messy wires for a clean setup.

5. OPERATING INSTRUCTIONS

Adjusting TV Height:

The TV stand features stepless height adjustment. To adjust the height, loosen the locking mechanism on the vertical column, carefully slide the TV to your desired height, and then re-tighten the mechanism to secure it.

Adjusting Screen Tilt:

The screen can be tilted from +5° to -10° without tools. Gently push or pull the top or bottom of your TV screen to achieve the desired tilt angle. The mechanism is designed to hold the position once adjusted.



Image: Flexible screen adjustment allows for tool-free tilting and stepless height changes.

Cable Management:

Utilize the cable clips located along the back of the stand's column to neatly organize and conceal all power and AV cables. This helps prevent clutter and enhances safety.

6. MAINTENANCE

To ensure the longevity and appearance of your TV stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.

- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Protective Pads:** Ensure the protective pads on the base are intact to prevent scratches to your floors.

7. TROUBLESHOOTING

If you encounter any issues with your TV floor stand, refer to the following common solutions:

- **TV Not Level:** Check that the mounting brackets are evenly installed on the TV and that the stand's base is on a flat surface. Adjust the tilt mechanism if needed.
- **Stand Feels Unstable:** Ensure all assembly screws are fully tightened. Verify that the anti-tip kit is correctly installed and secured to the wall.
- **Cables are Visible:** Re-route cables through the integrated cable management clips along the vertical column.

8. SPECIFICATIONS

Brand:	ECOTINY
Model Number:	HW1273BK
Compatible TV Sizes:	37-86 inches
Max TV Weight Capacity:	99 lbs (45 kg)
Max Shelf Weight Capacity:	11 lbs (5 kg)
VESA Compatibility:	100x100, 200x100, 200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400
Material:	Aluminum, MDF
Color:	Black
Item Weight:	27.4 pounds
Package Dimensions:	29 x 10.75 x 5.25 inches

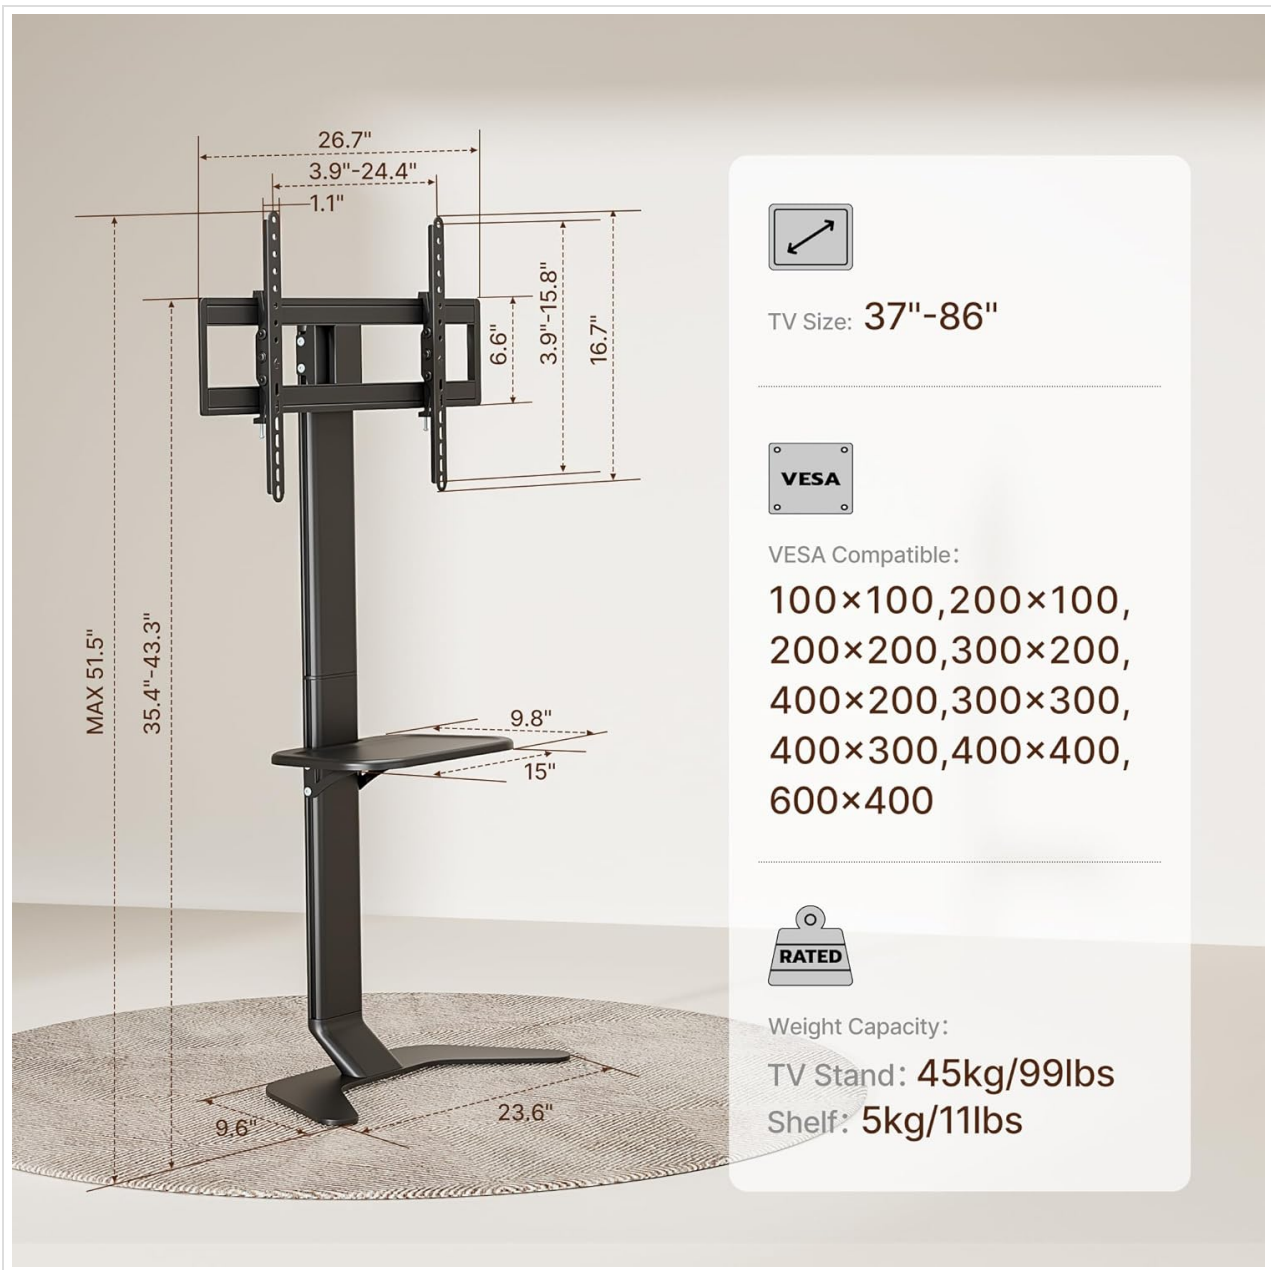


Image: Technical specifications including dimensions, TV size compatibility, VESA patterns, and weight capacities.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact ECOTINY customer service directly. Keep your purchase receipt as proof of purchase.