

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EasyAcc](#) /

› [EasyAcc Portable Handheld Fan 9000mAh \(Model FSZD02-21\) User Manual](#)

EasyAcc FSZD02-21

EasyAcc Portable Handheld Fan 9000mAh (Model FSZD02-21) User Manual

IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Keep the fan away from open flames and high temperatures.
- Do not allow children to operate the fan without adult supervision.
- Do not insert fingers or foreign objects into the fan grille.
- Use only the provided charging cable or a certified equivalent.
- Do not attempt to disassemble, repair, or modify the fan. Contact customer support if service is required.
- Store the fan in a cool, dry place when not in use.

PRODUCT OVERVIEW

The EasyAcc Portable Handheld Fan (Model FSZD02-21) is a versatile cooling device designed for personal use. It features a high-capacity battery, multiple speed settings, and a foldable design for portability.

Key Features:

- **High Capacity Battery:** Equipped with a 9000mAh battery, providing up to 53 hours of cooling time.
- **Power Bank Function:** Can be used to charge mobile phones and other small electronic devices.
- **Adjustable Speeds:** Offers 4 distinct wind speed settings for customized comfort.
- **Quiet Operation:** Operates at a low noise level (≤ 40 dB).
- **Versatile Design:** Functions as a handheld fan, a foldable desk fan, and a neck fan with the included lanyard.
- **Detachable Lanyard:** Includes a durable, adjustable lanyard for hands-free use.
- **Foldable and Portable:** Compact design for easy carrying and storage (folded size: 12.9 x 7.2 cm / 5 x 3 inches).


- **Washable Fan Cover:** Removable fan cover for easy cleaning and maintenance.
- **Low Battery Reminder:** LED indicators show remaining battery power.
- **One-Touch Power Off:** Press and hold the power button for 3 seconds to turn off the fan instantly.



Figure 1: EasyAcc Portable Handheld Fan in various configurations, demonstrating its handheld and desk modes, and its ability to charge a smartphone.



Easy To Clean

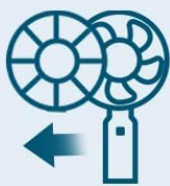

Removable Fan Cover



Figure 2: The fan's 3-in-1 design, illustrating its use as a hanging neck fan, a handheld fan, and a foldable desk fan.

PACKAGE CONTENTS

Please check the package for the following items:

- EasyAcc Portable Handheld Fan (Model FSZD02-21)
- USB Charging Cable
- Detachable Camera-Quality Lanyard
- User Manual (this document)

GETTING STARTED

Initial Charging

Before first use, fully charge the fan. Connect the provided USB charging cable to the fan's charging port and a suitable USB power adapter (not included). The LED indicators will show charging progress and battery level.



Figure 3: The fan's power bank function, demonstrating how it can charge a smartphone via a USB cable.

Attaching the Lanyard

The fan comes with a detachable camera-quality lanyard for hands-free operation. Follow these steps to attach it:

1. Hold the fan grille and push the buckle of the lanyard into the 3rd and 4th grids on the fan's handle.
2. Tighten the buckle by moving it to the edge of the grille to secure it.
3. Adjust the lanyard length for comfortable wear around your neck.
4. To remove the lanyard and use the fan handheld, simply unbuckle it.



Figure 4: Visual instructions for securely attaching the adjustable lanyard to the fan.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment

- **Power On:** Press the power button once to turn on the fan at Speed 1 (Breeze Wind).
- **Adjust Speed:** Press the power button repeatedly to cycle through Speed 2 (Refreshing Wind), Speed 3 (Strong Wind), and Speed 4 (Super Strong Wind).
- **Power Off:** To turn off the fan, press and hold the power button for 3 seconds at any speed setting. Alternatively, cycle through all speeds until the fan turns off.

Making It A Neck Fan.

Leaving your hands free to do other tasks while enjoying a refreshing wind.



Figure 5: Illustration of the four adjustable wind speed settings available on the fan.

Power Bank Function

The fan's 9000mAh battery can also serve as an emergency power bank for your mobile devices.

- Locate the USB output port on the fan's handle.
- Connect your device's charging cable to the USB output port on the fan and to your device.
- The fan will begin charging your device.

As a portable charger



Figure 6: The fan's dual functionality as a portable power bank, shown charging a phone in an outdoor setting.

Low Battery Reminder

The fan features LED indicators to display the remaining battery level:

- **3 Lights On:** Approximately 100% power remaining.
- **2 Lights On:** Approximately 60% power remaining.
- **1 Light On:** Approximately 30% power remaining. Recharge the fan soon.

To use on airplanes
works as an emergency powerbank
Accompany you anywhere



Figure 7: Visual representation of the LED indicators for checking the fan's battery status.

MAINTENANCE

Cleaning the Fan

To ensure optimal performance and extend the fan's lifespan, regular cleaning of the fan blades and cover is recommended, especially after outdoor use.

1. Ensure the fan is turned off before cleaning.
2. Gently turn the front fan cover clockwise to detach it from the main body.
3. Wipe the fan blades and the inside of the cover with a soft, damp cloth. Do not use abrasive cleaners or

immerse the main unit in water.

4. Once clean and dry, align the fan cover and turn it counter-clockwise to reattach it securely.



Figure 8: Instructions for detaching and cleaning the fan's removable front cover.

TROUBLESHOOTING

If you encounter any issues with your EasyAcc Portable Handheld Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using the provided USB cable.
Weak airflow.	Fan blades are dirty or obstructed.	Clean the fan blades and cover as described in the Maintenance section. Ensure no obstructions.
Fan does not charge.	Faulty charging cable or power adapter.	Try a different USB charging cable or power adapter. Ensure connections are secure.
Device not charging from fan (power bank function).	Fan battery is low or cable is faulty.	Ensure the fan has sufficient charge. Try a different charging cable for your device.

If the problem persists after trying these solutions, please contact EasyAcc Customer Support.

SPECIFICATIONS

Feature	Detail
Brand	EasyAcc
Model Name	FSZD02-21
Color	9000mAh Black With Strap
Power Source	Battery Powered
Battery Capacity	9000mAh
Usage Time	Up to 53 hours (Speed 1)
Number of Power Levels	4
Noise Level	≤40dB
Control Method	Touch Button
Product Dimensions	10"D x 6"W x 8"H
Item Weight	14.9 ounces
Voltage	3.7 Volts
Wattage	5 Watt-hours
Indoor/Outdoor Usage	Outdoor
Special Features	Backup Power, Camera Lanyard, Detachable Washable Fan Cover, Portable/Foldable/Neck, Rechargeable Battery

WARRANTY AND SUPPORT

EasyAcc products are designed and manufactured to high-quality standards. For warranty information specific to your purchase, please refer to the terms and conditions provided by your retailer or the official EasyAcc

website.

For technical support, troubleshooting assistance, or any inquiries regarding your EasyAcc Portable Handheld Fan, please contact our customer service team:

- **Email:** support@easyacc.com
- Please include your model number (FSZD02-21) and a detailed description of your issue when contacting support.