

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nutricook](#) /

› [Nutricook SMART POT SP330-ON 8L Multi-Cooker Instruction Manual](#)

## Nutricook SP330

# Nutricook SMART POT SP330-ON 8L Multi-Cooker Instruction Manual

Model: SP330-ON

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nutricook SMART POT SP330-ON 8L Multi-Cooker. Please read all instructions carefully before first use and retain this manual for future reference.

The Nutricook SMART POT SP330-ON is a versatile 12-in-1 appliance designed to simplify various cooking tasks. It functions as a pressure cooker, slow cooker, rice cooker, steamer, sauté pan, sterilizer, egg cooker, yogurt maker, soup maker, cake maker, sous vide pot, and food warmer.

## IMPORTANT SAFETY INFORMATION

**WARNING: To prevent injury or property damage, always follow basic safety precautions when using electrical appliances.**

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Ensure unit is properly closed before operating.

- Built-in safety features include Pressure Limit Protection, Overheating Protection, and a Safety Lid Lock.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Nutricook SMART POT SP330-ON.



Image: Front view of the Nutricook SMART POT SP330-ON Multi-Cooker, showcasing the control panel and exterior design.



Image: The Nutricook SMART POT SP330-ON with its lid removed, revealing the stainless steel inner pot.

- **Main Unit:** The exterior housing containing the heating element and control panel.
- **Smart Lid:** Features automatic sealing and one-touch pressure release.
- **Inner Pot:** 8L capacity, food-grade stainless steel 304, dishwasher-safe.
- **Control Panel:** LCD display with 17 one-touch cooking programs and 3 customizable Favorite buttons.
- **Power Cord:** Detachable power supply cord.

## SETUP AND FIRST USE

## Unpacking

1. Remove all packaging materials from the box.
2. Take out the multi-cooker and all accessories.
3. Retain packaging for storage or shipping if needed.

## Initial Cleaning

1. Wash the inner pot, sealing ring, and any accessories (e.g., steam rack) with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. Ensure all parts are dry before assembly.

## Placement

Place the multi-cooker on a stable, level surface away from heat sources and flammable materials. Ensure adequate space around the unit for ventilation.

## OPERATING INSTRUCTIONS

---

### Basic Operation

1. Place the inner pot into the main unit.
2. Add ingredients to the inner pot according to your recipe. Do not exceed the MAX fill line.
3. Close the Smart Lid. The lid will automatically seal. Ensure the pressure release valve is in the correct position for your chosen cooking function (e.g., sealed for pressure cooking).
4. Plug the power cord into a grounded electrical outlet. The LCD display will illuminate.
5. Select your desired cooking program from the 17 one-touch options (e.g., Rice, Soup, Meat, Bean, Poultry, Slow Cook, Sauté, Steam, Yogurt, Cake, Egg, Sterilize, Sous Vide, Warm).
6. Adjust cooking time or pressure level if necessary using the +/- buttons.
7. Press the 'Start' button to begin cooking. The LCD display will show the cooking progress.
8. Once cooking is complete, the unit will typically switch to a 'Keep Warm' function or beep to indicate completion.
9. For pressure cooking, allow pressure to release naturally or use the one-touch pressure release button on the Smart Lid, following recipe instructions.
10. Carefully open the lid away from your face to avoid steam burns.

### 17 One-Touch Programs

The Nutricook SMART POT SP330-ON features dedicated buttons for various cooking functions:

- Rice
- Soup
- Bean
- Meat
- Poultry
- Stew
- Chili
- Multigrain
- Porridge
- Slow Cook

- Sauté
- Steam
- Yogurt
- Cake
- Egg
- Sterilize
- Sous Vide

## Customizable Favorite Buttons

The unit includes 3 customizable 'Favorite' buttons. Refer to the full recipe book or online resources for instructions on programming and saving your preferred settings for frequently cooked meals.



Image: The Nutricook SMART POT SP330-ON Multi-Cooker on a kitchen counter, surrounded by various prepared dishes, demonstrating its versatility.

## CARE AND MAINTENANCE

### Cleaning

1. Always unplug the multi-cooker and allow it to cool completely before cleaning.
2. The stainless steel inner pot is dishwasher-safe. Alternatively, wash with warm, soapy water and a non-abrasive sponge.
3. The sealing ring and steam release valve can be removed from the lid for thorough cleaning. Wash with warm, soapy water.
4. Wipe the exterior of the main unit and the lid with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. Ensure all parts are completely dry before reassembling and storing.

### Storage

Store the multi-cooker in a dry place. You may place the lid upside down on the inner pot to save space and allow for air

circulation.

## TROUBLESHOOTING

---

If you encounter issues with your Nutricook SMART POT, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on	Power cord not properly connected; outlet malfunction	Ensure power cord is securely plugged into both the unit and a working electrical outlet. Test the outlet with another appliance.
Pressure not building	Lid not properly sealed; sealing ring misplaced or damaged; insufficient liquid	Ensure lid is closed correctly and the pressure release valve is in the 'Sealing' position. Check the sealing ring for proper placement and damage. Add sufficient liquid as per recipe.
Food not cooking evenly	Incorrect cooking time/temperature; uneven distribution of ingredients	Adjust cooking time or program settings. Ensure ingredients are distributed evenly in the inner pot.
Error code on display	Specific internal issue	Refer to the full user manual for a list of error codes and their corresponding solutions. If the issue persists, contact customer support.

For issues not listed here, or if solutions do not resolve the problem, please contact Nutricook customer support.

## SPECIFICATIONS

---

Feature	Detail
Model Number	SP330-ON
Capacity	8 Liters
Wattage	1500 Watts
Functions	12-in-1 Multi-Cooker (Pressure Cooker, Slow Cooker, Rice Cooker, Steamer, Sauté Pan, Sterilizer, Egg Cooker, Yogurt Maker, Soup Maker, Cake Maker, Sous Vide Pot, Food Warmer)
Programs	17 One-Touch Cooking Programs + 3 Customizable Favorite Buttons
Inner Pot Material	Food-grade Stainless Steel 304
Dishwasher Safe Parts	Inner Pot
Safety Features	Pressure Limit Protection, Overheating Protection, Safety Lid Lock
Control Method	Push Button
Item Weight	7.1 Kilograms
Product Dimensions	40.5D x 41W x 40.5H centimeters

## WARRANTY INFORMATION

---

The Nutricook SMART POT SP330-ON comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use.

The warranty does not cover:

- Damage caused by accident, abuse, misuse, or improper operation.
- Damage caused by unauthorized repair or modification.
- Normal wear and tear.

Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the warranty card included with your product or visit the official Nutricook website.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance, or need to make a warranty claim, please contact Nutricook customer support.

- **Online Support:** Visit the official Nutricook website for FAQs, product registration, and contact forms.
- **Email Support:** Refer to your product packaging or warranty card for the customer service email address.

When contacting support, please have your product model number (SP330-ON) and proof of purchase readily available.