



Manuals.plus /

- › **SIMPLETASTE** /
- › SIMPLETaste Milk Frother User Manual

## SIMPLETASTE 706-0020

# SIMPLETaste Milk Frother User Manual

Model: 706-0020 | Brand: SIMPLETASTE

## INTRODUCTION

---

Thank you for choosing the SIMPLETaste Handheld Milk Frother. This battery-operated electric foam maker is designed to quickly and effortlessly create rich, creamy foam for your favorite beverages. Its durable stainless steel whisk and ergonomic design ensure a comfortable and efficient frothing experience. Please read this manual carefully before use to ensure proper operation and maintenance.



Figure 1: SIMPLETaste Handheld Milk Frother

## SAFETY INFORMATION

---

- Keep the frother out of reach of children.
- Do not immerse the main body (handle) of the frother in water or any other liquid.
- Only the stainless steel whisk is washable under running water.
- Ensure hands are dry before handling batteries or operating the frother.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the frother will not be used for an extended period.
- Avoid contact with moving parts during operation.

## PACKAGE CONTENTS

- 
- 1 x SIMPLETaste Handheld Milk Frother (Main Unit)
  - 1 x Stainless Steel Whisk
  - (Note: AA batteries are not included and must be purchased separately.)

## **SETUP**

---

### **Battery Installation**

1. Locate the battery cover on the top of the frother handle.
2. Place your thumb on the "PUSH" mark of the battery cover.
3. Push firmly in the direction of the arrow to slide open the battery cover.
4. Insert two (2) AA batteries into the battery compartment, ensuring correct polarity (+/-).
5. To close the battery cover: Press the cover downward with your index finger.
6. While pressing down, continue pushing forward with your thumb until it clicks securely into place.

## Battery Cover Open Guide



Place your thumb on the "Push" mark of the battery cover



Push firmly in the direction of the arrow with your thumb

## Battery Cover Close Guide



Press the cover downward with your index finger



While pressing down, continue pushing forward with your thumb

Figure 2: Battery Cover Open and Close Guide

## OPERATING INSTRUCTIONS

### Frothing Milk

1. Pour your desired amount of milk into a cup or pitcher. For best results, use cold milk for cold foam or warm milk for hot foam.
2. Submerge the stainless steel whisk end of the frother into the milk.
3. Press and hold the power button located on the handle to start frothing.
4. Move the frother up and down gently to create foam. Frothing typically takes 15-30 seconds.
5. Release the power button when your desired foam consistency is reached.

- Carefully remove the frother from the milk.

The high-powered motor ensures quick and efficient frothing, creating smooth, creamy foam. You have full control over the frothing process to achieve your perfect foam effortlessly.



Figure 3: Frothing with Control

### Versatile Applications

Beyond coffee drinks, this frother is also ideal for:

- Hot chocolates
- Matcha tea
- Protein shakes

- Smoothies
- Sauces
- Whisking eggs

# More Than Just Milk Foam

Coffee / Matcha / Creams / Hot chocolate



Figure 4: More Than Just Milk Foam

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your SIMPLETaste Milk Frother.

1. After each use, immediately rinse the stainless steel whisk under running water.
2. For thorough cleaning, you can briefly operate the frother in a glass of warm, soapy water, then rinse with clean water.

3. **Important:** Keep the handle (main body) dry and avoid exposing it to water. Do not immerse the handle in water.
4. Wipe the handle with a damp cloth if necessary, then dry thoroughly.
5. Store the frother in a dry place. Its compact design allows it to stand neatly upright on your countertop for easy storage.



Figure 5: Easy Cleaning of the Whisk

## TROUBLESHOOTING

---

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Frother does not turn on.	Batteries are dead or incorrectly installed.	Replace with new AA batteries, ensuring correct polarity.
Weak frothing performance.	Low battery power or whisk is bent/damaged.	Replace batteries. Check whisk for damage and gently straighten if bent.
Milk does not froth well.	Type of milk used (e.g., low-protein milk).	For best results, use fresh, cold milk with adequate protein content (e.g., whole milk, oat milk).

## **SPECIFICATIONS**

---

- **Brand:** SIMPLETASTE
- **Model Name:** Milk Frother
- **Item Model Number:** 706-0020
- **Color:** Blizzard White
- **Material:** Stainless Steel (whisk)
- **Power Source:** 2 x AA Batteries (not included)
- **Item Weight:** 3.2 ounces
- **Package Dimensions:** 9.21 x 2.44 x 1.46 inches
- **Special Feature:** Lightweight, Ergonomic Design
- **Recommended Uses:** Home & Kitchen (Coffee, Tea, Hot Chocolate, Protein Shakes, etc.)

# Why Choose US?



Figure 6: Product Dimensions and Key Features

## WARRANTY AND SUPPORT

For warranty information or product support, please contact SIMPLETASTE customer service through the retailer's platform where the product was purchased. Please have your purchase details and model number ready for faster assistance.

You can also visit the official SIMPLETASTE store for more information and products: [SIMPLETASTE Store](#)

