

Patikuin FabricDresser_PTH_333B

Patikuin 14-Drawer Fabric Dresser and TV Stand User Manual

Model: FabricDresser_PTH_333B

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Patikuin 14-Drawer Fabric Dresser and TV Stand. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- **Anti-Tipping Device:** Always install the included anti-tipping device to prevent the dresser from falling over, especially in households with children.
- **Weight Limits:** Do not exceed the recommended weight capacity for the top surface or drawers. The wooden top is designed to support TVs up to 55 inches.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all parts are securely fastened before use.
- **Children:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the dresser.
- **Placement:** Place the dresser on a level surface. Use the adjustable feet to stabilize the unit on uneven floors.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed in the included assembly guide are present and undamaged. If any parts are missing or damaged, please contact customer service.

Typical package contents include:

- Metal Frame Components
- Wooden Top Panels

- Fabric Drawers (14 units)
- Hardware Pack (screws, bolts, adjustable feet, anti-tipping kit)
- Assembly Instructions Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the step-by-step instructions provided in the separate assembly guide included in your package. Ensure you have all necessary tools (typically a screwdriver and Allen wrench, often included) before starting.

1. **Unpack:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in your assembly guide to identify each component.
3. **Assemble Frame:** Begin by assembling the metal frame according to the diagrams. Secure all connections firmly.
4. **Attach Wooden Tops:** Fasten the wooden top panels to the assembled metal frame.
5. **Insert Drawers:** Fold and insert the fabric drawers into their designated slots.
6. **Install Adjustable Feet:** Screw in the adjustable feet at the bottom of the frame. Adjust them to ensure the dresser is level and stable.
7. **Install Anti-Tipping Device:** This is a critical safety step. Securely attach the anti-tipping device to the back of the dresser and to a wall stud, following the specific instructions provided.



14

Drawers Dresser

Freedom in Storage, Start Here!

Image 1: Product Dimensions Diagram. This diagram illustrates the overall dimensions of the dresser (55.1"W x 11.4"D x 35.4"H) and the sizes of the two types of fabric drawers.



Image 3: Patikuin 14-Drawer Fabric Dresser in use. This image displays the dresser with its 14 fabric drawers, open central shelf, and side storage pockets, demonstrating its storage capacity and functionality as a TV stand.



Image 4: Patikuin 14-Drawer Fabric Dresser in a room setting. This image shows the dresser functioning as a stylish storage unit and display surface in a home environment.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your dresser.

- **Cleaning Fabric Drawers:** For light cleaning, use a lint roller or a soft brush to remove dust. For spills, gently blot with a clean, damp cloth and mild soap. Allow to air dry completely. Do not machine wash or tumble dry the fabric drawers.
- **Cleaning Wooden Top and Metal Frame:** Wipe surfaces with a soft, dry, or slightly damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Regular Checks:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Adjustable Feet:** Re-adjust the feet if the dresser becomes wobbly over time.

7. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser is wobbly.	Uneven floor; loose fasteners.	Adjust the leveling feet at the bottom of the frame. Check and tighten all assembly screws.
Drawers do not slide smoothly.	Overloaded drawer; drawer not inserted correctly; debris in slot.	Reduce the contents of the drawer. Ensure the drawer is fully and correctly seated in its slot. Check for any obstructions.
Anti-tipping device seems loose.	Improper installation; wall anchor not secure.	Re-install the anti-tipping device, ensuring it is securely fastened to both the dresser and a wall stud. Consult the anti-tipping device instructions.

8. SPECIFICATIONS

- **Brand:** Patikuin
- **Model:** FabricDresser_PTH_333B
- **Overall Dimensions (W x D x H):** 55.12" x 11.4" x 35.4"
- **Item Weight:** Approximately 62 lbs
- **Material:** Metal frame, Wooden top, Fabric drawers
- **Number of Drawers:** 14
- **Color:** Rustic Brown
- **TV Size Compatibility:** Up to 55 inches
- **Assembly Required:** Yes

9. WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Patikuin 14-Drawer Fabric Dresser, please contact our customer service team. We are committed to providing support and ensuring your satisfaction. Please refer to your purchase documentation for specific warranty details. If you have any issues with missing parts or assembly, our customer service team is available to help.

For support, please visit the [Patikuin Store on Amazon](#) or contact us through your order details.