

[Manuals.plus](#) /

> [ElfinAura](#) /

> ElfinAura 13'x13' Hexagonal Pop Up Gazebo User Manual

ElfinAura MYJ-PHO_33C79469-TAb0

ElfinAura 13'x13' Hexagonal Pop Up Gazebo User Manual

Model: MYJ-PHO_33C79469-TAb0

PRODUCT OVERVIEW

The ElfinAura 13'x13' Hexagonal Pop Up Gazebo is designed for outdoor use, providing shade, shelter, and a comfortable space for gatherings. It features a sturdy metal frame, waterproof and UV-resistant fabric, and integrated mesh netting for insect protection.

Key features include:

- **Sturdy Metal Frame:** Powder-coated metal for rust resistance, enhanced stability, and durability, capable of withstanding winds up to Beaufort scale 5-6.
- **Easy Setup & Portable:** Designed for quick assembly and includes a carrying bag for convenient transport.
- **Ample Space & Adjustable Height:** Hexagonal shape accommodates 10-16 people, with three adjustable height settings.
- **Superior Fabric & Double Roof:** Crafted with 300D silver-coated fabric for UPF 80+ UV protection and water resistance. Double roof design enhances airflow.
- **Integrated Mesh Netting:** Six fully enclosed mesh screens with dual-head zippers for privacy and insect protection.



Figure 1: The ElfinAura 13'x13' Hexagonal Pop Up Gazebo providing shade and shelter in an outdoor setting.

IMPORTANT SAFETY INFORMATION

WARNING:

- Never leave your gazebo unattended.
- It may collapse or blow away in heavy wind or rain.
- Always use the provided guy ropes and stakes to enhance its stability.
- Always take it down when a storm or other bad weather is approaching.

COMPONENTS LIST

Before assembly, ensure all components are present and undamaged. Refer to the packing list included with your product for exact quantities. Typical components include:

- Pop-Up Frame Assembly
- Canopy Top Fabric (Main Roof)

- Double Roof Vent Fabric
- Mesh Netting Sidewalls (6 panels)
- Carrying Bag
- Ground Stakes
- Guy Ropes
- Instruction Manual

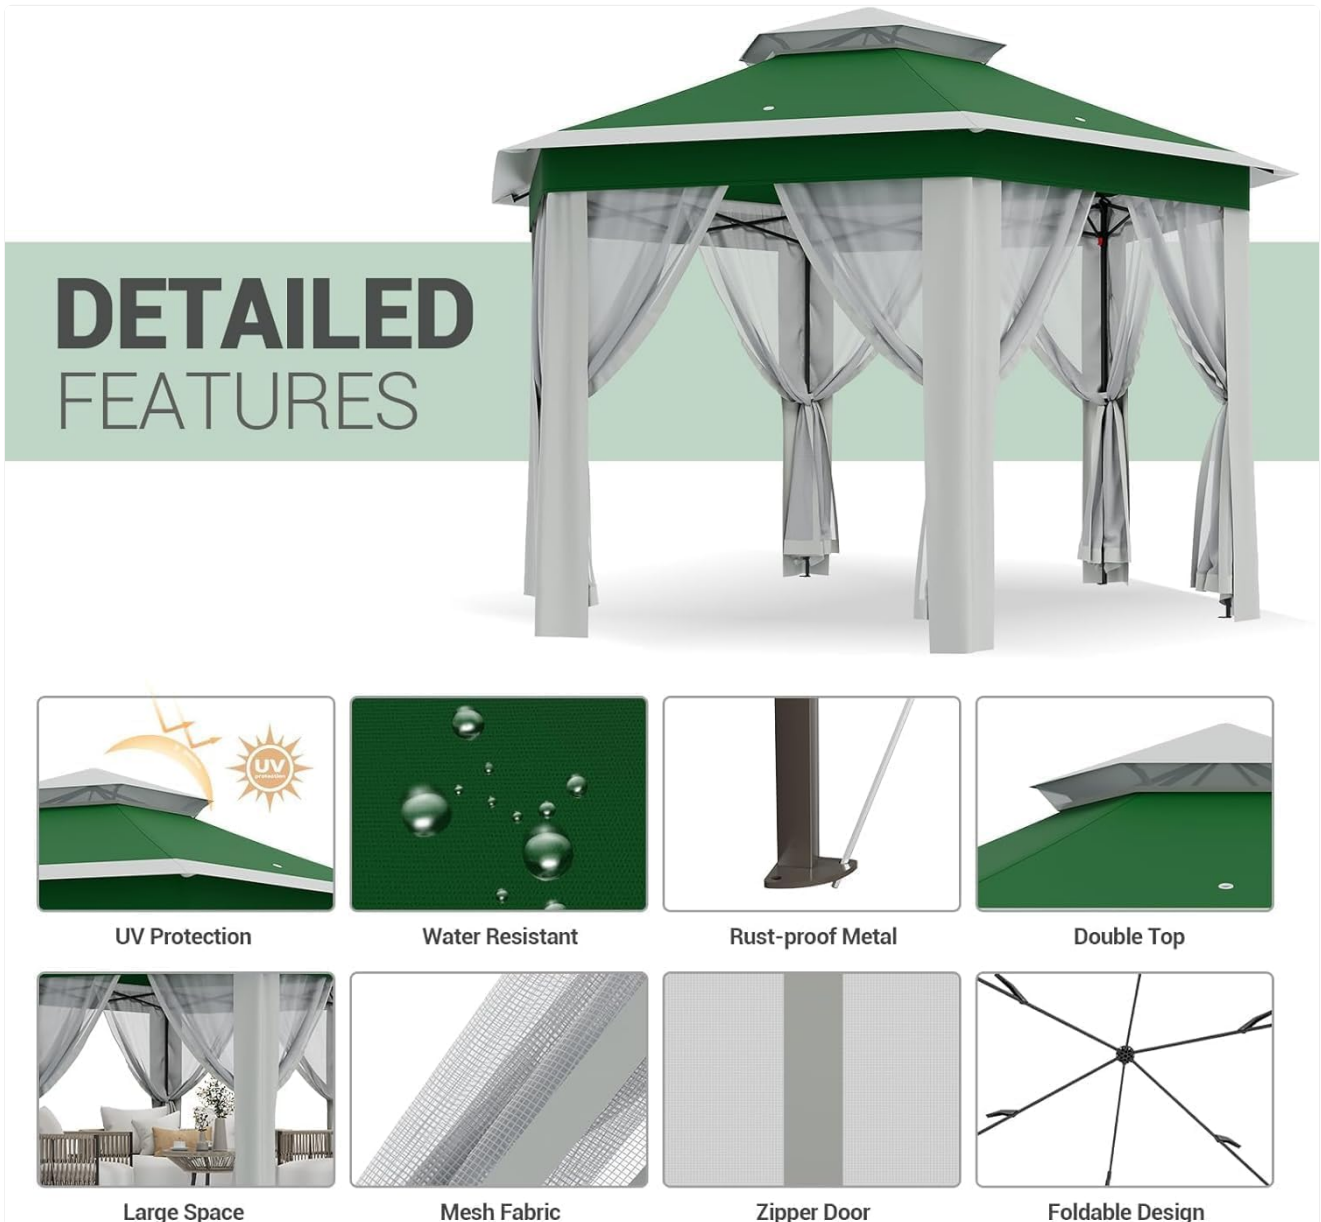


Figure 2: Visual representation of key features and components.

SETUP INSTRUCTIONS

Follow these steps for quick and easy setup:

1. Step 1: Open the Canopy Frame and Keep It Upright.

With two people, grasp opposite sides of the folded frame. Slowly pull outwards, allowing the frame to expand partially. Ensure the frame legs are upright and not tangled.

2. Step 2: Cover It with the Canopy Top.

Unfold the main canopy fabric and place it over the partially opened frame. Align the corners of the canopy with the corners of the frame. Secure the canopy to the frame using any attached Velcro straps or ties.

3. Step 3: Adjust the Height (3 Height Positions).

Once the canopy is draped over, carefully push up on the center hub of the frame until it locks into place. Extend each leg one by one, pressing the release button and sliding the inner leg section down until it clicks into your desired height setting. There are three adjustable height positions.

4. Step 4: Put It Up and Attach Side Walls.

Fully extend all legs and ensure they are securely locked. Attach the mesh netting sidewalls to the frame using the integrated zippers and Velcro fasteners. Ensure all zippers are functional for easy access.


5. Step 5: Secure the Gazebo.

For maximum stability, especially in windy conditions, use the provided guy ropes and ground stakes. Attach the ropes to the designated loops on the canopy and stake them firmly into the ground at an angle away from the gazebo.

HOW TO SET UP



STEP 2
Cover It with
the Canopy Top

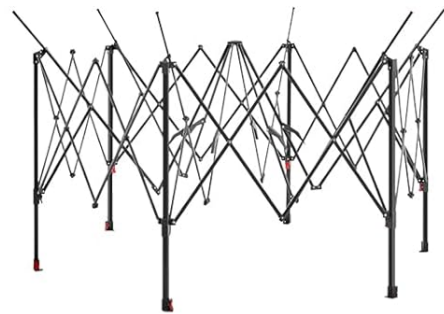

STEP 1
Open the Canopy Frame
and Keep It Upright



STEP 4
Put It Up and
Attach Side Walls



STEP 3
Adjust the Height
(3 Height Positions)

Figure 3: Visual guide for the setup process.

Using your ElfinAura Gazebo is straightforward:

- **Adjusting Height:** To change the height, locate the push-button mechanisms on each leg. Press the button and slide the inner leg to the desired position until it clicks into place. Ensure all legs are set to the same height.
- **Using Mesh Netting:** The gazebo features six fully enclosed mesh screens. Use the dual-head zippers to open and close the screens for entry/exit or to adjust privacy and airflow. When not needed, the screens can be tied back to the legs.
- **Ventilation:** The double roof design allows for enhanced airflow, reducing heat buildup inside the gazebo.
- **Weather Protection:** The 300D silver-coated fabric provides UPF 80+ UV protection and water resistance for light rain. Drainage holes on the canopy prevent water accumulation.



Figure 4: Gazebo with mesh netting closed for privacy and insect protection.

MAINTENANCE

Proper maintenance will extend the life of your gazebo:

- **Cleaning:** Clean the fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse

thoroughly and allow to air dry completely before storage.

- **Frame Care:** Inspect the metal frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame.
- **Storage:** When not in use for extended periods or during severe weather, disassemble the gazebo and store it in its carrying bag in a dry, cool place. Ensure the fabric is completely dry to prevent mold and mildew.
- **Stakes and Ropes:** Keep stakes and ropes clean and free of dirt. Store them with the gazebo to ensure they are available for future use.

TROUBLESHOOTING

Here are solutions to common issues:

Problem	Possible Cause	Solution
Gazebo is unstable or sways in light wind.	Not properly secured; legs not fully extended/locked.	Ensure all legs are fully extended and locked. Use all provided guy ropes and stakes, securing them firmly into the ground.
Water pooling on the canopy.	Insufficient tension on canopy; heavy rain exceeding drainage capacity.	Ensure the canopy is taut and properly attached to the frame. In heavy rain, it is recommended to take down the gazebo.
Difficulty extending/collapsing the frame.	Frame joints are stiff or misaligned.	Ensure no fabric is caught in the joints. Apply a silicone-based lubricant to moving parts if necessary. Ensure two people are assisting with setup/takedown.
Mesh netting zippers are stuck.	Fabric caught in zipper; zipper teeth are misaligned.	Gently pull the fabric away from the zipper path. Apply a zipper lubricant or wax if needed. Do not force the zipper.

SPECIFICATIONS

Attribute	Detail
Brand	ElfinAura
Model Number	MYJ-PHO_33C79469-TAb0
Product Dimensions	159.45"L x 70.86"W x 111.02"H (Hexagonal, approximately 13'x13')
Item Weight	42.8 pounds
Frame Material	Alloy Steel (Powder-coated metal)
Canopy Material	300D Silver-Coated Oxford Fabric
Water Resistance Level	Water Resistant (Water Pressure Resistance 1500ml)
UV Protection	UPF 80+
Occupancy	10-16 People
Color	Beige&Green

Attribute	Detail
Assembly Required	Yes
Maximum Wind Resistance	Beaufort Scale 5-6 (31-38mph)

13FT X 13FT DIMENSIONS OF GAZEBO

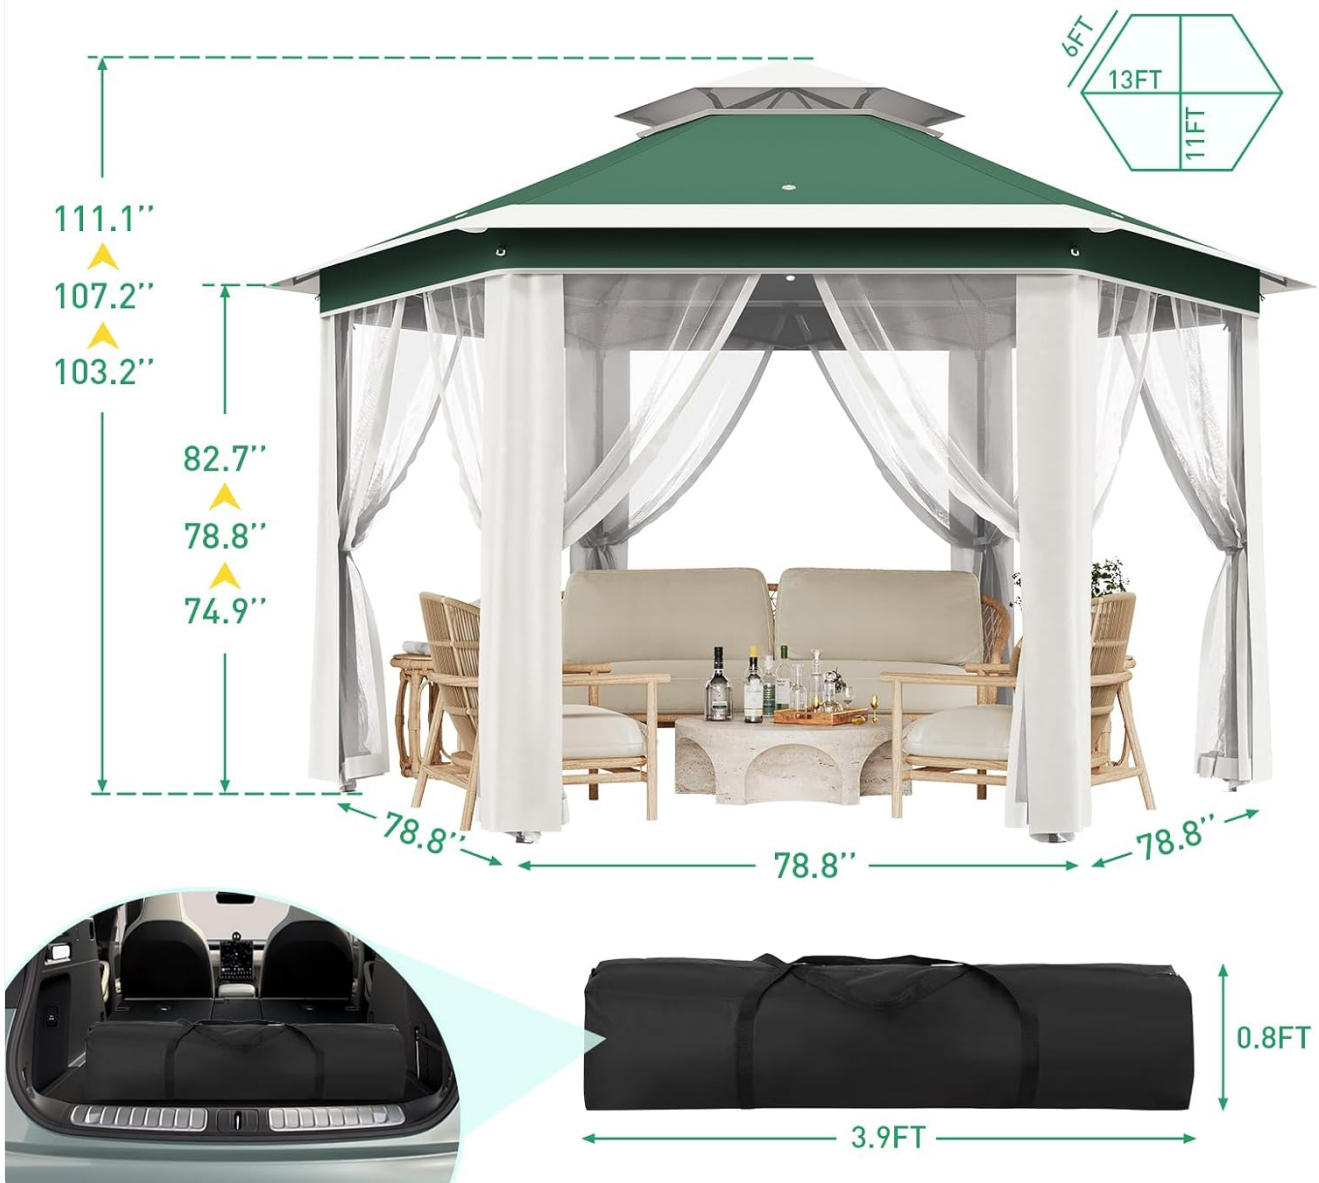


Figure 5: Product dimensions overview.

WARRANTY INFORMATION

This ElfinAura Pop Up Gazebo comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. Please refer to the warranty card included in your packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for any warranty claims. For warranty service or claims, please contact ElfinAura customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please

contact ElfinAura customer support. For the most up-to-date contact information, please refer to the product packaging or the official ElfinAura website.

When contacting support, please have your model number (MYJ-PHO_33C79469-TAb0) and purchase date ready to expedite service.