

United 6689-BRJ

United 6V Medium 3-Wheel Electric Ride-On for Kids - Model 6689-BRJ User Manual

Brand: United
Model: 6689-BRJ

1. INTRODUCTION

Welcome to the user manual for your United 6V Medium 3-Wheel Electric Ride-On for Kids, Model 6689-BRJ. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new ride-on toy. Please read it thoroughly before use and retain it for future reference.

This electric ride-on is designed for young explorers aged 2 to 6 years. It features a 6V battery, a single rear motor for reliable performance, integrated front lights, and various sound and light effects to enhance the riding experience. The directional control button allows for easy forward and backward movement, complemented by a comfortable seat.

2. SAFETY INFORMATION

WARNING: Adult supervision is required at all times. This product is not a protective device. Always ensure the child wears appropriate safety gear, including a helmet, knee pads, and elbow pads, when operating the ride-on.

- Keep the ride-on away from open flames or direct heat sources.
- Do not operate the ride-on near streets, cars, steep inclines, swimming pools, or other bodies of water.
- Only use on flat, dry surfaces. Avoid sand, loose dirt, or gravel.
- Ensure the child's weight does not exceed the maximum recommended limit.
- Do not allow more than one rider at a time.
- Always ensure the battery is charged according to the instructions to prevent overheating or damage.
- Regularly inspect the ride-on for any loose parts, damage, or wear before each use.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x United 6V Medium 3-Wheel Electric Ride-On for Kids (Model 6689-BRJ, Blue)
- 1 x 6V Battery (pre-installed or separate)
- 1 x Battery Charger
- 1 x User Manual (this document)



Image: The United 6V Medium 3-Wheel Electric Ride-On for Kids, Model 6689-BRJ, in blue color. This image shows the complete product as it appears after assembly, highlighting its three-wheel design, handlebars, seat, and overall structure.

4. SETUP AND INITIAL CHARGING

4.1. Assembly (if required)

The United 6V Electric Ride-On Model 6689-BRJ typically requires minimal assembly. Please refer to the diagrams in the separate assembly guide (if provided) for detailed steps. Ensure all connections are secure before proceeding.

4.2. Battery Connection and Initial Charge

1. Locate the battery compartment, usually under the seat.

2. Connect the battery terminals (red to red, black to black) if not already connected.
3. Before first use, fully charge the 6V battery for 8-12 hours. Do not overcharge.
4. Connect the charger to the charging port on the ride-on and then plug the charger into a standard wall outlet.
5. The charger indicator light will typically show red during charging and turn green when fully charged.
6. Disconnect the charger once charging is complete.

Note: Always use the charger provided with the product. Using an incompatible charger may damage the battery or the ride-on.

5. OPERATING INSTRUCTIONS

5.1. Starting the Ride-On

1. Ensure the battery is fully charged.
2. Locate the power switch, usually on the dashboard or near the seat. Turn it to the "ON" position.

5.2. Driving Forward and Backward

The ride-on is equipped with a directional control button, typically located on the handlebars or dashboard.

- Press the button forward to move the ride-on forward.
- Press the button backward to move the ride-on in reverse.
- Release the button to stop the ride-on.

5.3. Steering

Use the handlebars to steer the ride-on left or right. Ensure the child has a firm grip on the handlebars during operation.

5.4. Lights and Sounds

The ride-on features integrated front lights and various sound effects. These can usually be activated by dedicated buttons on the dashboard or handlebars.

6. MAINTENANCE

6.1. Battery Care

- Recharge the battery after each use, even if only for a short period.
- Do not allow the battery to completely discharge.
- If storing the ride-on for an extended period, charge the battery fully once a month to prolong its lifespan.
- Store the battery in a cool, dry place.

6.2. Cleaning

Wipe the ride-on with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto electrical components.

6.3. General Inspection

Periodically check the following:

- All screws and fasteners are tight.
- Wheels are securely attached and free from damage.

- Electrical connections are secure.
- The body of the ride-on for cracks or damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Ride-on does not move.	Battery is low or not charged. Power switch is off. Loose battery connection.	Charge the battery fully. Turn the power switch to "ON". Check and secure battery connections.
Ride-on moves slowly.	Low battery charge. Overloaded (too much weight). Operating on an unsuitable surface.	Recharge the battery. Ensure rider weight is within limits. Use on flat, hard surfaces.
Lights or sounds not working.	Low battery. Loose wiring. Damaged component.	Charge the battery. Check for loose wires (adult only). Contact customer support if component is damaged.

If troubleshooting steps do not resolve the issue, please contact United customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	United
Model Number	6689-BRJ
Color	Blue
Material	Plastic
Power Source	Battery
Battery Type	6V
Product Dimensions (L x W x H)	54 x 32 x 27.5 cm
Item Weight	6 kg
Minimum Manufacturer Age	24 months (2 years)
Maximum Manufacturer Age	72 months (6 years)
Assembly Required	No (Minimal setup may be needed)

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. Please refer to the product packaging or contact United customer service for details regarding warranty coverage and support.

For further assistance or inquiries, please visit the official United website or contact their customer support line.