

[Manuals.plus](#) /

> [MEDION](#) /

> MEDION MD12031 Microwave Oven User Manual

MEDION MD12031

MEDION MD12031 Microwave Oven with Grill and Hot Air Function

Model: MD12031 | Brand: MEDION

INTRODUCTION

Thank you for choosing the MEDION MD12031 Microwave Oven. This versatile appliance combines microwave, grill, and hot air functions, offering a wide range of cooking possibilities. With a generous 23-liter capacity, 900 watts of microwave power, 1000 watts of grill power, and 1680 watts of hot air function, it is designed for efficient and convenient meal preparation. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Regularly clean the oven cavity, door, and seals.
- Do not use corrosive chemicals or abrasive cleaners.
- Supervise children closely when the appliance is in use.
- Ensure adequate ventilation around the appliance.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking.

- MEDION MD12031 Microwave Oven
- Glass Turntable (Diameter 28.8 cm)

- Grill Rack
- Instruction Manual (this document)

SETUP

Follow these steps for initial setup of your microwave oven.

1. **Unpacking:** Carefully remove the microwave oven and all packing materials.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight. Ensure there is sufficient space for ventilation (at least 10 cm at the back, 20 cm at the top, and 5 cm on the sides). Do not block air vents.
3. **Turntable Installation:** Place the turntable ring in the center of the oven cavity, then place the glass turntable on top of the ring, ensuring it sits securely.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Operation:** Before first use with food, operate the oven empty for a few minutes on a high setting (e.g., Microwave 900W for 5 minutes) to eliminate any manufacturing odors. Ensure the room is well-ventilated during this process.



Figure 1: Front view of the MEDION MD12031 Microwave Oven, showcasing its sleek black design and control panel.

Des repas chauds sur simple pression d'un bouton



Figure 2: The MEDION MD12031 Microwave Oven positioned on a kitchen counter, ready for use.

OPERATING INSTRUCTIONS

This section details how to use the various functions of your microwave oven.

Control Panel Overview

The control panel features a digital display, function buttons, and a rotary knob for setting time and selecting options.

Une capacité parfaite pour des plats variés

23 litres d'espace intérieur de cuisson

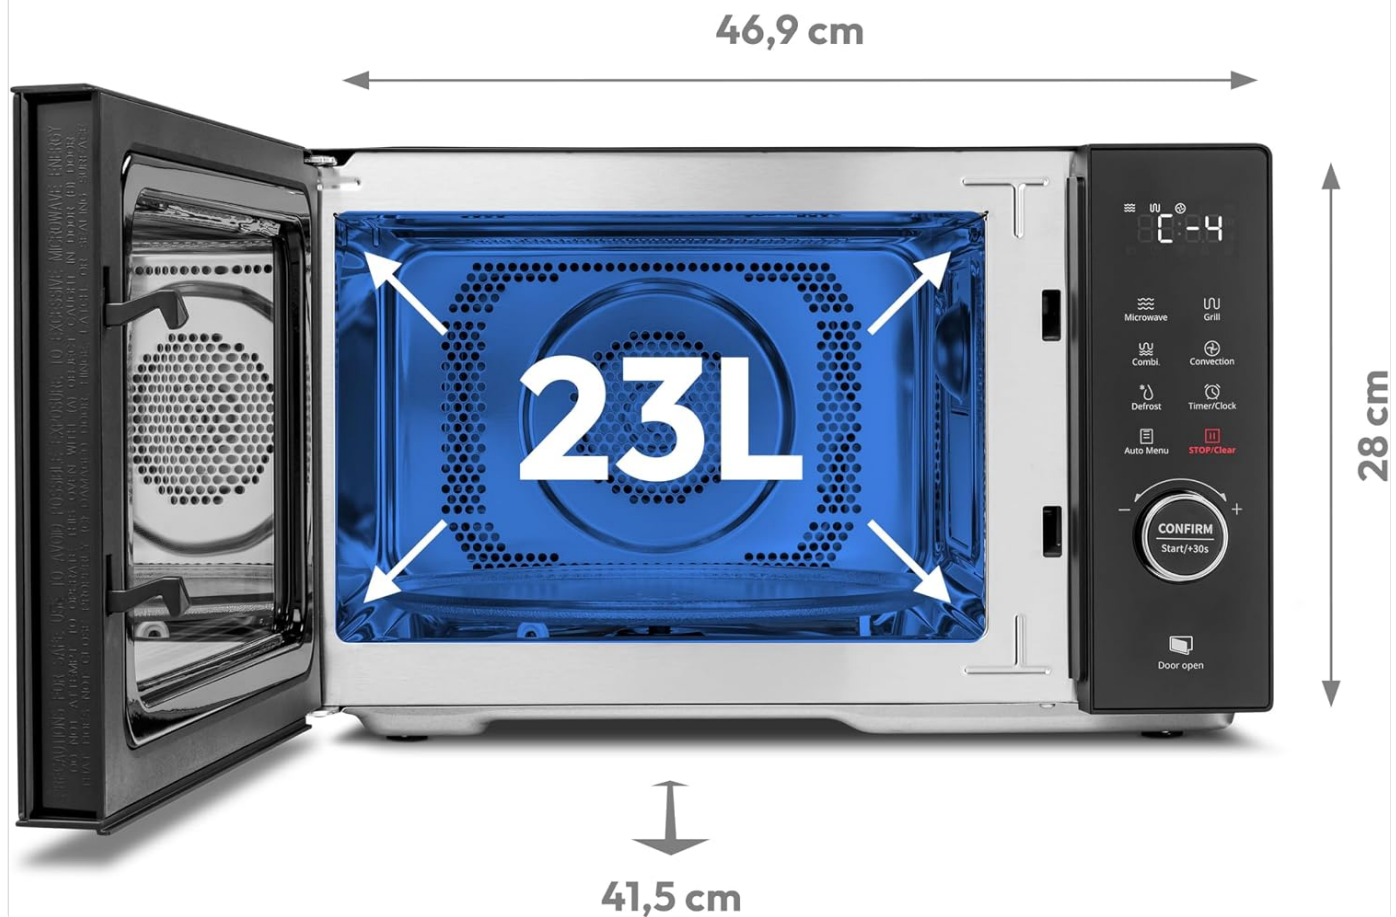


Figure 3: Detailed view of the touch-sensitive control panel, showing icons for Microwave, Grill, Combi, Convection, Defrost, Timer/Clock, Auto Menu, STOP/Clear, and the central CONFIRM/Start/+30s rotary knob.

Microwave Function (900 Watts)

Ideal for reheating, cooking, and defrosting. The oven offers 5 power levels.

1. Place food in a microwave-safe container on the glass turntable.
2. Press the "Microwave" button repeatedly to select the desired power level (P100, P80, P50, P30, P10).
3. Turn the rotary knob to set the cooking time.
4. Press "CONFIRM/Start/+30s" to begin cooking.

Ouverture d'un seul geste

Le micro-ondes s'ouvre en douceur par simple contact et offre un confort maximal, même avec les mains pleines.



Figure 4: The microwave interior showing food being heated, highlighting the 900W microwave power.

Grill Function (1000 Watts)

Perfect for browning and crisping food. Use the included grill rack for best results.

1. Place food on the grill rack, which should be placed on the glass turntable.
2. Press the "Grill" button.
3. Turn the rotary knob to set the grilling time.
4. Press "CONFIRM/Start/+30s" to start grilling.

Des résultats époustouflants avec une puissance de gril de 1000 watt

Puissance élevée pour des résultats de grillade parfaits et un brunissage uniforme



Figure 5: A perfectly browned lasagna, illustrating the effective grilling capabilities of the oven.

Hot Air (Convection) Function (1680 Watts)

For baking and roasting, providing even heat distribution for crispy results.

1. Place food in an oven-safe dish on the glass turntable or grill rack.
2. Press the "Convection" button.
3. Turn the rotary knob to set the desired temperature.
4. Press "CONFIRM/Start/+30s" to preheat. Once preheated, place food inside and set cooking time.

Circulation de la chaleur à 360

Le flux d'air chaud rotatif garantit des résultats croustillants



Figure 6: Visual representation of the 360-degree hot air circulation inside the oven cavity, ensuring even cooking.

Defrost Function

Defrost food by weight or time, ensuring gentle and even thawing.

1. Place frozen food on the glass turntable.
2. Press the "Defrost" button.
3. Turn the rotary knob to select defrost by weight (dEF1) or time (dEF2).
4. Adjust weight or time using the rotary knob.
5. Press "CONFIRM/Start/+30s" to begin defrosting.

Réchauffage flexible avec 5 niveaux de puissance

De la chaleur douce à la chaleur extra chaude, toujours choisir le niveau approprié



Figure 7: A bowl of frozen peas, demonstrating the gentle and effective defrosting capability.

Automatic Programs (11 Programs)

The oven features 11 pre-set automatic programs for common dishes. Refer to the program chart in the full manual for details on each program.

1. Press the "Auto Menu" button.
2. Turn the rotary knob to select the desired program (A-1 to A-11).
3. Press "CONFIRM/Start/+30s" to start.

Power Levels

The microwave function offers 5 power levels for precise cooking control, from gentle warming to rapid heating.

Décongélation facile

Décongeler en douceur, savourer la fraîcheur



Figure 8: Diverse meal options, illustrating the flexibility provided by the 5 power levels for various cooking needs.

Timer and Clock Setting

Use the "Timer/Clock" button to set the current time or use the timer function for non-cooking tasks.

Door Opening

The oven features a convenient touch-sensitive door opening mechanism.



Figure 9: A hand demonstrating the touch-sensitive 'Door open' button for easy access to the oven cavity.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

- **Interior:** Wipe the interior with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Clean the exterior with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Turntable and Rack:** The glass turntable and grill rack can be washed in warm, soapy water or in a dishwasher.
- **Odor Removal:** To remove odors, combine a cup of water with a few tablespoons of lemon juice in a microwave-safe bowl and microwave on high for 5-7 minutes.



Figure 10: A hand wiping down the stainless steel interior of the microwave, demonstrating proper cleaning technique.

TROUBLESHOOTING

If you encounter issues with your microwave oven, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food not cooking evenly.	Food not stirred or turned; Cooking time/power level incorrect; Turntable not rotating.	Stir or turn food during cooking; Adjust time/power; Ensure turntable is correctly placed and clean.

Problem	Possible Cause	Solution
Excessive steam or condensation.	High moisture content in food.	This is normal for some foods. Wipe interior after use.
Unpleasant odor during first use.	Residual manufacturing oils.	Operate oven empty for a few minutes as described in Setup section. Ensure good ventilation.

TECHNICAL SPECIFICATIONS

Detailed specifications for the MEDION MD12031 Microwave Oven.

Feature	Specification
Brand	MEDION
Model Number	MD12031
Capacity	23 Liters
Microwave Power	900 Watts
Grill Power	1000 Watts
Hot Air (Convection) Power	1680 Watts
Power Levels	5
Automatic Programs	11
Control Type	Sensor Touch
Material	Stainless Steel (interior and exterior accents)
Dimensions (L x W x H)	41.5 x 46.9 x 28 cm
Weight	16.34 kg
Voltage	230 Volts



Figure 11: Dimensions of the MEDION MD12031 Microwave Oven: Length 46.9 cm, Width 41.5 cm, Height 28 cm.

WARRANTY AND SUPPORT

MEDION products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the official MEDION website or contact their customer service directly.

You can also visit the official MEDION store on Amazon for more product information and support: [MEDION Amazon Store](#)

© 2025 MEDION. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DWT6NVM7>

More documents and user manuals: <https://manuals.plus/>