

AN-20250211-01

Generic Cordless Stick Vacuum Cleaner and Mop Combo (Model AN-20250211-01) - User Manual

Model: AN-20250211-01

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Generic Cordless Stick Vacuum Cleaner and Mop Combo, Model AN-20250211-01. This versatile appliance combines vacuuming and mopping functions, featuring 12000Pa suction power and a removable water tank for comprehensive floor cleaning.

Please read this manual thoroughly before first use and retain it for future reference.

1. SETUP AND ASSEMBLY

1.1 Package Contents

Before assembly, ensure all components are present:

- Host body (1)
- Extension Hose (1)
- Small Brush suction nozzle (1)
- Long Flat suction nozzle (1)
- Floor brush (1)
- Cleaning Brush (1)
- Water tank (1)
- Rag (1)
- USB charging cable (1)
- User Manual (1)

1.2 Assembly

1. Attach the extension hose to the main host body.
2. Connect the desired cleaning attachment (e.g., floor brush, small brush suction nozzle, or long flat suction nozzle) to the end of the extension hose.
3. For mopping functionality, attach the water tank and rag to the floor brush assembly.



Large Capacity Water Tank

**Vacuuming and Mopping at the Same Time, One Step Cleaning
You Can Also Add Disinfectant Water, Fine Dust Cleaning Is More
Thorough, Makes Cleaning Easier
Removable Water Tank Can Be Removed and Replaced at Any Time**

Figure 1: The large capacity water tank attaches to the main unit for combined vacuuming and mopping. It is removable for easy filling and cleaning.

1.3 Charging the Battery

The vacuum cleaner is powered by a 2500mAh ternary lithium battery. Before first use, fully charge the battery.

1. Connect the USB charging cable to the charging port on the host body.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. The charging indicator light will illuminate. A full charge typically takes 4-5 hours.
4. Once fully charged, disconnect the charger. The vacuum cleaner is now ready for use.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn off.

2.2 Vacuuming

Select the appropriate attachment for your cleaning task:

- **Floor Brush:** Ideal for hard floors, tile, wood, and low-pile carpets.
- **Long Flat Suction Nozzle:** Suitable for narrow gaps, corners, and hard-to-reach areas.
- **Small Brush Suction Nozzle:** Effective for upholstery, keyboards, and delicate surfaces.
- **Mite Removal Tip:** Designed for deep cleaning of mattresses, sofas, and other fabric surfaces to remove dust and mites.



Figure 2: The vacuum can be used in a handheld configuration for cleaning dust in hidden corners and smaller areas.

Unobstructed net suction Whole house free cleaning

Flexible brush, easy to clean without dead ends~ Snack debris, pet hair scattered in the living room, flour knocked over in the kitchen, all at once!



Slim brush

Not only can clean the floor, but also on marble/floor/short blanket etc.
Even use on multi-material floors



Smart flat mouth suction

Small and flat mouth suction, easy to penetrate the gap without difficulty, no dead ends
Can be cleaned in place



Round mouth brush

Deep cleaning of mattress hair, dander, dust, etc.
Give you a good night's sleep and sweet dreams



Mite removal tip

Can be used to remove dust and mites from sheets, mattresses, curtains, sofas, plush toys

Figure 3: A selection of attachments for different cleaning needs, including a slim brush for floors, a flat mouth suction for gaps, a round mouth brush for deep cleaning, and a mite removal tip.

2.3 Mopping Function

To use the mopping function:


1. Remove the water tank from the floor brush.
2. Fill the water tank with clean water. A small amount of disinfectant can be added if desired.
3. Securely reattach the water tank and ensure the rag is properly fastened.
4. The vacuuming and mopping functions operate simultaneously, providing a one-step cleaning solution for hard floors.

2.4 Maneuverability

The brush head is designed for flexible movement, allowing for thorough cleaning in various spaces:

- It rotates 90° up and down, enabling easy cleaning under furniture.
- It rotates 180° left and right, facilitating navigation around obstacles and into tight corners.

Flexible Rotation, Full Cleaning

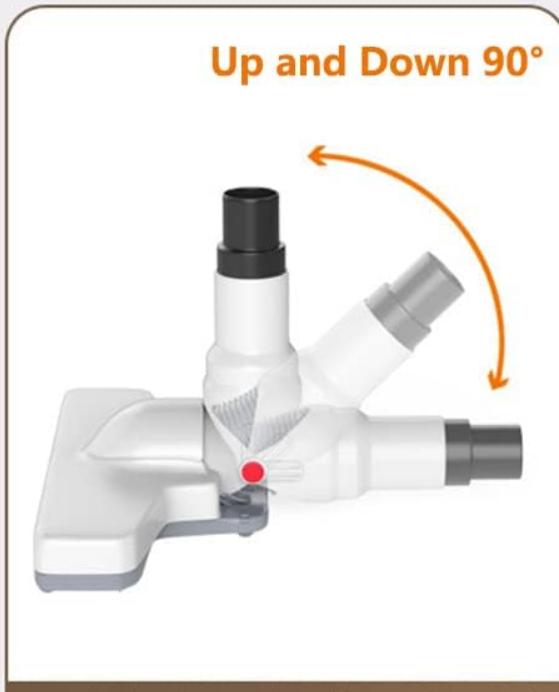

Up and Down 90°

Up and Down 90°
The Front Part of the Brush Head Can Enter the Bottom of the Furniture Horizontally



Left and Right 180°

Left and Right 180°
Easy to Cope with Narrow Areas Such As Corners and Corners Along Walls

Figure 4: The brush head offers flexible rotation, allowing it to move 90 degrees vertically and 180 degrees horizontally for comprehensive cleaning.

3. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

3.1 Emptying the Dustbin

Empty the dustbin after each use or when it reaches its maximum capacity. To empty:

1. Detach the dustbin from the main unit.
2. Open the dustbin lid and dispose of collected debris into a waste bin.
3. Close the lid and reattach the dustbin to the unit.

3.2 Cleaning the HEPA Filter

The HEPA filter is washable and reusable. Clean it regularly to maintain suction power and air filtration efficiency.

1. Remove the HEPA filter from the dustbin.
2. Rinse the filter under running water until clean. Do not use detergents.
3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner.

Ensure it is completely dry to prevent damage to the motor.

Removable HEPA Filter

**HEPA Filter Efficiently Filters Dust and Garbage.
Environmentally Friendly Materials, Washable and Reusable**



Figure 5: The HEPA filter is removable, washable, and reusable, ensuring efficient filtration and preventing secondary pollution.

3.3 Cleaning the Water Tank and Rag

After each mopping session:

1. Empty any remaining water from the water tank.

2. Rinse the water tank thoroughly with clean water.
3. Remove the rag and wash it. Allow both the tank and rag to air dry completely before reassembly.

3.4 General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully (4-5 hours).
Low suction power.	Dustbin is full. HEPA filter is clogged. Obstruction in nozzle or hose.	Empty the dustbin. Clean or replace the HEPA filter. Check and clear any blockages.
Water tank leaks.	Water tank not properly installed. Damaged water tank.	Ensure the water tank is securely attached. Inspect for cracks; replace if damaged.
Short operating time.	Battery not fully charged. Battery degradation.	Ensure battery is fully charged before use. Battery life may decrease over time; consider replacement if significantly reduced.

If the problem persists after trying these solutions, please contact customer support.

5. PRODUCT SPECIFICATIONS

Product Name	Stick Vacuum Cleaner and Mop 2 in 1
Model Number	AN-20250211-01
Brand	Generic
Material	ABS plastic
Suction Power	12000Pa
Battery Type	2500mAh Ternary Lithium Battery
Working Time	Approximately 30 minutes
Charging Time	4 - 5 hours (USB charging)
Cleaning Area	Up to 150

Filter Type	HEPA Filter (washable and recyclable)
Product Dimensions	8.7"L x 5.9"W x 45.3"H
Item Weight	1.32 pounds
Color	Black
Surface Recommendation	Hardwoods, Tile, Wood Floor, Low-pile Carpet

6. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. For warranty claims or inquiries, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty-related services.

7. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need further support regarding your Generic Cordless Stick Vacuum Cleaner and Mop Combo, please contact the customer service department of your retailer or the manufacturer. Please have your model number (AN-20250211-01) and purchase details ready when contacting support.

For general inquiries, you may also visit the manufacturer's website (if available) for FAQs and additional resources.