

Timco JE8723DB

Timco JE8723DB Digital Electric Kettle User Manual

Model: JE8723DB

[Safety
Instructions](#)

[Product
Overview](#)

[Setup
Specifications](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the Timco JE8723DB Digital Electric Kettle.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- Ensure the lid is securely closed before operating.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Timco JE8723DB Digital Electric Kettle is designed for precise water heating with its digital control and preset temperature options. It features a 1.7-liter capacity, a durable stainless steel interior, and a convenient keep-warm function.

Components:

- Kettle Body (with stainless steel interior and plastic exterior)
- Lid
- Handle
- Digital Control Panel
- Power Base with Cord



Image 2.1: The Timco JE8723DB Digital Electric Kettle, showcasing its sleek white design and digital control panel.



Image 2.2: A close-up view of the digital control panel, displaying temperature settings and function icons.

3. INITIAL SETUP

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the kettle is placed securely on the power base.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (127 Volts).

4. OPERATING INSTRUCTIONS

The Timco JE8723DB kettle offers precise temperature control for various beverages.

4.1 Filling the Kettle:

- Open the lid.
- Fill the kettle with the desired amount of water. Do not fill below the MIN mark or above the MAX (1.7L) mark to prevent dry boiling or overflow.
- Close the lid securely.

4.2 Selecting Temperature and Heating:

1. Place the filled kettle onto the power base.
2. Press the power button (**U**) on the digital control panel to activate the display.
3. **Preset Temperatures:** The kettle offers four preset temperature options:
 - **Milk (40°C):** Ideal for baby formula or warm milk.
 - **Honey (70°C):** Optimal for dissolving honey without altering its properties.
 - **Tea (80°C):** Perfect for extracting maximum flavor from various teas.
 - **Coffee (90°C):** The ideal temperature for a delicious cup of coffee.

To select a preset, press the corresponding icon on the control panel. The kettle will begin heating to the selected temperature.

4. **Custom Temperature (40°C - 100°C):** If a specific temperature is desired, use the '+' and '-' buttons to adjust the temperature in 5°C increments. Once the desired temperature is set, the kettle will automatically begin heating.
5. The digital display will show the current water temperature as it heats.
6. Once the target temperature is reached, the kettle will beep and automatically shut off.

4.3 Keep Warm Function:

The kettle can maintain the selected temperature for up to 2 hours.

1. After selecting a temperature and the kettle begins heating, press the 'Keep Warm' button (often indicated by three horizontal lines or a similar icon).
2. The kettle will maintain the set temperature for up to 2 hours.
3. To deactivate the keep warm function, press the power button or lift the kettle from its base.

4.4 Automatic Shut-off:

The kettle is equipped with an automatic shut-off feature that activates when the water reaches the set temperature or when the kettle is lifted from its base.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your kettle.







Image 5.1: The interior of the Timco JE8723DB kettle, showing the stainless steel lining.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
3. **Interior Cleaning:** The stainless steel interior can be cleaned with a soft brush or sponge. Rinse thoroughly with clean water.
4. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
 - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Discard the mixture and rinse the kettle thoroughly several times with fresh water.
 - Alternatively, use a commercial descaling solution designed for electric kettles, following the product's instructions.
5. **Storage:** When not in use, store the kettle in a dry place. You can wrap the power cord around the base for neat storage.

6. TROUBLESHOOTING

If you encounter any issues with your Timco JE8723DB kettle, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Kettle does not heat.	No power supply. Kettle not properly seated on base.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on the power base.
Water leaks from the lid or spout.	Kettle is overfilled. Lid is not closed properly.	Do not fill water above the MAX line. Ensure the lid is securely closed before boiling.
Kettle switches off before boiling.	Limescale buildup.	Descale the kettle as described in the Maintenance section.
Water has an unusual taste.	First-time use residue. Limescale buildup.	Perform the initial cleaning steps again. Descale the kettle.

7. TECHNICAL SPECIFICATIONS

- **Model:** JE8723DB
- **Capacity:** 1.7 Liters
- **Power:** 1200 Watts
- **Voltage:** 127 Volts

- **Material:** Stainless steel interior, Plastic exterior
- **Control Type:** Digital with LED display
- **Temperature Settings:** 4 preset (40°C, 70°C, 80°C, 90°C), adjustable from 40°C to 100°C
- **Special Features:** Automatic shut-off, Rapid boil, Keep warm function (up to 2 hours)
- **Dimensions:** Approximately 25.5 x 22.1 x 17.7 cm
- **Weight:** Approximately 1 kg

8. WARRANTY INFORMATION

This Timco product is covered by a manufacturer's warranty against defects in materials and workmanship under normal household use. The specific duration and terms of the warranty may vary by region. Please refer to the warranty card included with your purchase or contact Timco customer support for detailed information.



The warranty does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair.





9. CUSTOMER SUPPORT

For any questions, assistance, or to report an issue with your Timco JE8723DB Digital Electric Kettle, please contact Timco customer support. Contact information can typically be found on the product packaging, the official Timco website, or your purchase receipt.

When contacting support, please have your product model number (JE8723DB) and proof of purchase readily available.

Related Documents - JE8723DB

	<p>Timco S-85A Petroolilämmitin: Käyttöohje ja Turvallisuusopas</p> <p>Kattava käyttöohje Timco S-85A 2,4kW petroolilämmittimelle. Opi turvallinen käyttö, sytytys, liekin säätö ja huolto varmistaaksesi tehokkaan ja turvallisen lämmityksen. Sisältää tärkeät turvallisuusvaroitukset ja tekniset tiedot.</p>
	<p>TIMCO ATV 28T Käyttöohje ja Turvallisuusopas</p> <p>Tämä käyttöohje tarjoaa yksityiskohtaiset ohjeet TIMCO ATV 28T -halkomakoneen kokoamiseen, käyttöön, huoltoon ja turvallisuuteen. Opi käyttämään laitetta turvallisesti ja tehokkaasti.</p>

 <p>Timco Oil-Free Compressor Käyttöohje</p> <p>ISO 9001 CE</p> <p>Timco Työtaso yhden ovella ja kuudella laatikolla 160 x 60 x 85 cm - Kokoamisohjeet</p>	<p>Timco Oil-Free Compressor Operating Instructions - Models 103071161, 103071174, 102298050</p> <p>Comprehensive operating instructions for Timco oil-free piston compressors. Covers product structure, safe usage, storage, maintenance, troubleshooting, and includes a pneumatic diagram for models 103071161, 103071174, and 102298050.</p>
 <p>Timco Painevesiautomaatti Käyttöohje</p> <p>Timco Painevesiautomaatti Käyttöohje: Mallit 103580596, 103580598, 103580608</p>	<p>TIMCO Painevesiautomaatti Käyttöohje: Mallit 103580596, 103580598, 103580608</p> <p>Lataa TIMCO Painevesiautomaatti käyttöohje. Tämä opas sisältää tärkeät turvallisuusohjeet, asennus-, käyttö- ja huoltotiedot TIMCO-pumppumalleille 103580596, 103580598 ja 103580608.</p>
 <p>Timco CLE5500SDG / TCLE5500SDG Diesel Generaattori Käyttöopas</p> <p>Timco CLE5500SDG (230V) ja TCLE5500SDG (400V) diesel-generaattoreiden kattava käyttöopas. Sisältää turvallisuusohjeet, tekniset tiedot, osaluettelon, käyttö- ja huolto-ohjeet sekä vianetsintäoppaan.</p>	<p>TIMCO CLE5500SDG / TCLE5500SDG Diesel Generaattori Käyttöopas</p> <p>TIMCO CLE5500SDG (230V) ja TCLE5500SDG (400V) diesel-generaattoreiden kattava käyttöopas. Sisältää turvallisuusohjeet, tekniset tiedot, osaluettelon, käyttö- ja huolto-ohjeet sekä vianetsintäoppaan.</p>
 <p>Timco Työtaso yhden ovella ja kuudella laatikolla 160 x 60 x 85 cm - Kokoamisohjeet</p> <p>Kattavat kokoamisohjeet Timco-työtasolle, jossa on yksi ovi ja kuusi laatikkoa (160 x 60 x 85 cm). Sisältää turvallisuustiedot, osaluettelon ja vaiheittaiset asennusohjeet.</p>	<p>Timco Työtaso yhdellä ovella ja kuudella laatikolla 160 x 60 x 85 cm - Kokoamisohjeet</p> <p>Kattavat kokoamisohjeet Timco-työtasolle, jossa on yksi ovi ja kuusi laatikkoa (160 x 60 x 85 cm). Sisältää turvallisuustiedot, osaluettelon ja vaiheittaiset asennusohjeet.</p>