

[Manuals.plus](#) /

› [Jura](#) /

› Jura ENA 4 Automatic Coffee Machine User Manual

Jura ENA 4

Jura ENA 4 Automatic Coffee Machine

Model: ENA 4 | Brand: Jura

1. INTRODUCTION AND OVERVIEW

Welcome to the user manual for your Jura ENA 4 Automatic Coffee Machine. This machine is designed to deliver high-quality coffee and espresso beverages with ease. Featuring an Aroma G3 grinder, it processes fresh whole beans to create a rich and aromatic brew. Its compact design makes it suitable for various kitchen spaces, while its eco-friendly operation ensures efficient energy use.

The Jura ENA 4 offers a streamlined coffee experience, allowing you to enjoy your favorite drinks, including espresso and coffee, quickly and conveniently. It also supports the use of pre-ground beans for added flexibility.



Figure 1: Front view of the Jura ENA 4 Automatic Coffee Machine, showcasing its sleek design and a freshly brewed espresso.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating the Jura ENA 4. Retain this manual for future reference. Failure to follow these instructions may result in injury or damage to the appliance.

- Ensure the machine is connected to a properly grounded outlet with the correct voltage (120 Volts AC).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the machine from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep hands and cords away from hot surfaces.

- This appliance is not dishwasher safe. Refer to the cleaning instructions for proper maintenance.

3. SETUP

3.1 Unpacking and Placement

- Carefully remove all packaging materials.
- Place the machine on a stable, level surface, away from heat sources and direct sunlight. Ensure adequate ventilation around the appliance.
- The compact design (20.1 x 17.2 x 12.3 inches) allows for flexible placement.

3.2 Filling the Water Tank

The Jura ENA 4 features a 37 fluid ounce water tank. For optimal coffee quality, use fresh, cold water. The water tank also accommodates a water filter (replacement instructions in Maintenance section).

- Remove the water tank from the side of the machine.
- Fill the tank with fresh, cold water up to the 'MAX' mark.
- Reinsert the water tank securely into the machine.



Figure 2: The transparent water tank on the side of the machine, ready for filling.

3.3 Filling the Bean Container

The bean container has a capacity of 4.4 ounces. For the freshest taste, use high-quality whole coffee beans.

- Open the lid of the bean container located on top of the machine.
- Pour whole coffee beans into the container.

- Close the lid firmly to preserve freshness.



Figure 3: Top view of the Jura ENA 4, showing the bean container filled with whole coffee beans.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- Press the power button to turn the machine on. The machine will perform an automatic rinse cycle.
- To turn off, press the power button again. The machine will perform another rinse cycle before shutting down.

4.2 Selecting Your Beverage

The Jura ENA 4 offers various beverage options, including Espresso and Coffee. You can also adjust the strength and volume of your drink.

- Place a cup under the coffee spout.
- Select your desired beverage (e.g., Espresso, Coffee) from the control panel.
- Use the control panel to adjust coffee strength and water volume to your preference. The machine features programmable water amounts.



Figure 4: Close-up of the Jura ENA 4 dispensing coffee, showing the adjustable spout.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Jura ENA 4. The machine is not dishwasher safe; clean components manually as instructed.

5.1 Cleaning the Drip Tray and Coffee Grounds Container

The drip tray collects excess water, and the coffee grounds container stores used coffee pucks. Empty and clean these regularly.

- When prompted by the machine, or as needed, remove the drip tray and coffee grounds container.
- Empty the coffee grounds and rinse both components with warm water.
- Reinsert them correctly into the machine.

5.2 Replacing the Water Filter

Regularly replacing the water filter ensures optimal water quality and helps prevent limescale buildup.

5.3 Descaling the Machine

Descaling is crucial for maintaining machine performance and extending its lifespan, especially in areas with hard water.

6. TROUBLESHOOTING

If you encounter issues with your Jura ENA 4, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine not turning on	No power supply	Check power cord connection and wall outlet.
Coffee not dispensing	Water tank empty, bean container empty, or spout blocked.	Fill water tank/bean container. Clean coffee spout.
"Red Warning" light/message	Indicates a specific issue requiring attention (e.g., empty water, full grounds, descaling needed).	Consult the machine's display for the specific warning and follow the on-screen instructions.

7. SPECIFICATIONS

Feature	Detail
Brand	Jura
Model Name	ENA 4
Item Model Number	15518S9FR
Color	Black
Product Dimensions	20.1 x 17.2 x 12.3 inches
Item Weight	23.2 pounds
Water Tank Capacity	37 Fluid Ounces
Bean Container Capacity	4.4 ounces
Voltage	120 Volts (AC)
Operation Mode	Fully Automatic
Special Feature	Integrated Coffee Grinder, Programmable Water Amounts
Coffee Input Type	Beans
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

Your Jura ENA 4 Automatic Coffee Machine includes a user manual with detailed information. For specific warranty details, product registration, or technical support, please refer to the official Jura website or contact their customer service directly. This product is from a small business brand.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question