

[Manuals.plus](#) /

› [Gabba Goods](#) /

› Gabba Goods Coors Light Portable Bluetooth Speaker (Model CL-MTLG-CLC) User Manual

Gabba Goods CL-MTLG-CLC

Gabba Goods Coors Light Portable Bluetooth Speaker User Manual

Model: CL-MTLG-CLC

INTRODUCTION

Thank you for purchasing the Gabba Goods Coors Light Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- Gabba Goods Coors Light Portable Bluetooth Speaker
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the speaker's buttons and ports for easy operation.

Play Your Way

Choose how you listen with Bluetooth 5.0, USB, AUX, TF card, or FM radio. Seamless connections up to 10 meters ensure uninterrupted fun.

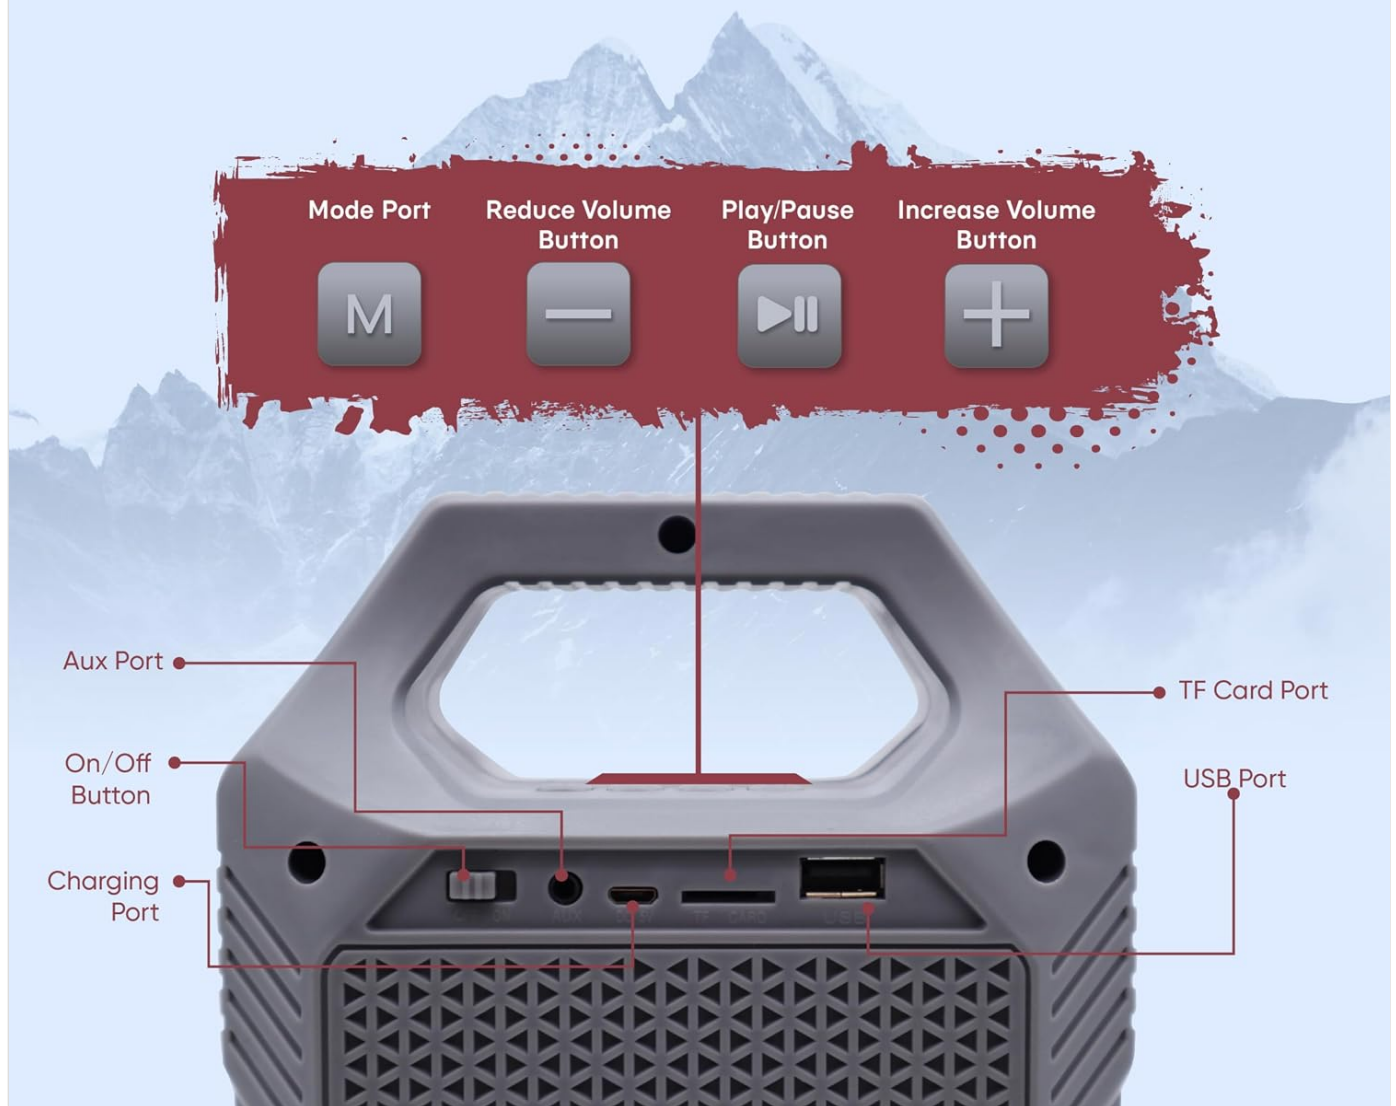


Image: Front view of the speaker highlighting the control buttons and various input ports including AUX, TF Card, and USB, along with the charging port and On/Off switch.

1. **Mode Button (M):** Press to switch between Bluetooth, FM Radio, AUX, and USB/MicroSD modes.
2. **Reduce Volume Button (-):** Press to decrease volume. Hold to go to the previous track.
3. **Play/Pause Button (▶||):** Press to play or pause audio. Press to answer/end calls. Hold to reject calls.
4. **Increase Volume Button (+):** Press to increase volume. Hold to go to the next track.
5. **Aux Port:** For connecting external audio devices via a 3.5mm audio cable.
6. **On/Off Button:** Power the speaker on or off.
7. **Charging Port:** USB-C port for charging the speaker.
8. **TF Card Port (MicroSD):** Insert a MicroSD card for direct audio playback.
9. **USB Port:** Insert a USB drive for direct audio playback.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged. A full charge takes approximately 4 hours.

2. Powering On/Off

Press and hold the **On/Off Button** to power the speaker on or off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **Mode Button (M)** until you hear a Bluetooth prompt.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Gabba Goods Speaker" from the list.
4. Once paired, the speaker will indicate a successful connection.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

Powerful Sound, Compact Design



Crystal-Clear Sound:
5W output delivers powerful, immersive audio.



Seamless Connectivity:
Bluetooth 5.0 ensures stable connections up to 10 meters.



Vibrant LED Lights:
Set the perfect mood with colorful, dynamic lighting.



Multi-Mode Playback:
Choose USB, AUX, TF card, FM radio, or Bluetooth.



Portable Design:
Lightweight and easy to carry for parties anywhere.



Image: The Gabba Goods Coors Light Portable Bluetooth Speaker, showcasing its compact design and Coors Light branding, ready for use.

4. Other Connectivity Options

- **AUX Mode:** Connect an external audio device using a 3.5mm audio cable to the **Aux Port**. Press the **Mode Button (M)** to switch to AUX mode.
- **MicroSD/TF Card Mode:** Insert a MicroSD card into the **TF Card Port**. The speaker will automatically switch to MicroSD mode and begin playing audio files.
- **USB Mode:** Insert a USB drive into the **USB Port**. The speaker will automatically switch to USB mode and begin playing audio files.

OPERATING INSTRUCTIONS

Basic Controls

- **Volume Adjustment:** Press the **Increase Volume Button (+)** to increase volume. Press the **Reduce Volume**

Button (-) to decrease volume.

- **Track Navigation:** Hold the **Increase Volume Button (+)** for the next track. Hold the **Reduce Volume Button (-)** for the previous track.
- **Play/Pause:** Press the **Play/Pause Button (▶ ||)** to play or pause audio.
- **Mode Switching:** Press the **Mode Button (M)** to cycle through Bluetooth, FM Radio, AUX, MicroSD, and USB modes.

FM Radio Operation

1. Press the **Mode Button (M)** to switch to FM Radio mode.
2. Press the **Play/Pause Button (▶ ||)** once to automatically scan and save available FM stations.
3. Use the **Increase Volume Button (+)** and **Reduce Volume Button (-)** (hold for track navigation) to switch between saved stations.

Hands-Free Calling

When connected via Bluetooth to your smartphone:

- **Answer/End Call:** Press the **Play/Pause Button (▶ ||)** once.
- **Reject Call:** Press and hold the **Play/Pause Button (▶ ||)**.

LED Lights

The speaker features integrated LED lights. These lights typically activate automatically when the speaker is powered on. Refer to the product's specific features for any controls related to light modes, if available (not explicitly detailed in provided data).



6 Hours of Non-Stop Party

Keep the party alive with 6 hours of uninterrupted music. From sundown to the final cheers, the Coors Miller Mini Party Speaker powers your celebration with non-stop sound. No interruptions, no limits—just pure party vibes all night long!

Image: The speaker illuminated with LED lights, positioned on a table in a dimly lit room with people socializing in the background, demonstrating its use in a party environment.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully depleting the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided USB-C cable.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in Bluetooth mode. Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters). Forget previous pairings and try again.
No sound.	Volume too low; incorrect mode selected; audio source issue.	Increase speaker and device volume. Ensure correct mode (Bluetooth, AUX, etc.) is selected. Check audio source connection.
FM radio reception is poor.	Weak signal; environmental interference.	Move the speaker to a different location. Re-scan for stations.

SPECIFICATIONS

Brand	Gabba Goods
Model Number	CL-MTLG-CLC
Speaker Maximum Output Power	10 Watts (Dual 5W Drivers)
Connectivity Technology	Bluetooth 5.3, AUX, MicroSD, USB, FM Radio
Bluetooth Range	Up to 10 meters (33 feet)
Audio Output Mode	Stereo
Battery Capacity	400 mAh
Battery Average Life	Up to 2 hours (advertised), 1.5 hours (specification)
Battery Charge Time	Approximately 4 hours
Item Dimensions (D x W x H)	8"D x 4"W x 11"H
Item Weight	2 Pounds
Material	Plastic
Additional Features	Built-in Microphone, LED Light
Waterproof	No

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty card included in your product packaging or contact Gabba Goods customer support directly. Keep your purchase receipt as proof of purchase.

Return Policy: The buybox winner indicates a 30-day return policy for refund/replacement. Please check with your retailer

for their specific return terms.

SUPPORT

For further assistance, technical support, or inquiries about your Gabba Goods Coors Light Portable Bluetooth Speaker, please visit the official Gabba Goods website or contact their customer service department.

Manufacturer: M&S Accessory Network

Brand Store: [Gabba Goods Store on Amazon](#)

© 2026 Gabba Goods. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question