

[Manuals.plus](#) /

› [Tangkula](#) /

› Tangkula 10x20 Ft Canopy Tent Instruction Manual

Tangkula AM10381HM

Tangkula 10x20 Ft Canopy Tent Instruction Manual

Model: AM10381HM

INTRODUCTION

This manual provides essential instructions for the safe and effective assembly, operation, and maintenance of your Tangkula 10x20 Ft Canopy Tent. Please read all instructions carefully before setup and retain this manual for future reference. This canopy tent is designed for temporary outdoor use, providing shelter for social gatherings, parties, and events.

SAFETY INFORMATION

Important Safety Notice:

- This party tent is intended for temporary use only.
- Do not leave the tent set up overnight or under adverse weather conditions, including strong winds, heavy rain, or snow.
- Always secure the tent properly with all provided wind ropes and ground stakes to ensure stability.
- Ensure the setup area is clear of overhead obstructions and uneven ground.
- Keep all flame and heat sources away from the tent fabric.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Canopy Cover (PE material)
- Frame Poles (Alloy Steel, various lengths)
- Connectors/Joints
- 4 Removable Sidewalls with Transparent Windows
- Wind Ropes

- Ground Stakes
- Carrying Bag (for storage)

ASSEMBLY INSTRUCTIONS

Assembly requires at least two people to ensure stability and ease of setup. No additional tools are required as tubes feature buckles for connection.

Step 1: Unpack and Organize Components

Carefully unpack all parts and lay them out. Group similar poles and connectors together. Refer to the included diagram for component identification.

Step 2: Assemble the Roof Frame

Connect the shorter frame poles using the appropriate connectors to form the rectangular roof structure. Ensure all buckles are securely fastened. It is crucial to keep the frame steady during this process.

Step 3: Attach the Canopy Cover

Drape the canopy cover over the assembled roof frame. Ensure it is centered and aligned correctly. Secure the canopy to the frame using any integrated ties or fasteners.

Step 4: Install Leg Poles

Attach the longer leg poles to the roof frame connectors. With assistance, carefully lift the frame and insert the leg poles into their respective connectors. Ensure all connections are firm.

Step 5: Secure the Tent

Once the frame is fully assembled and standing, secure it to the ground. Use the provided ground stakes to anchor each leg. Attach the wind ropes to the designated points on the canopy and stake them firmly into the ground at an angle, away from the tent base, to provide maximum stability against wind.




Note: Our Outdoor Canopy Tent Must Be Secured with Wind Ropes & Ground Nails(Included)

Image: Proper securing of the canopy tent using wind ropes and ground stakes (included).

Step 6: Attach Sidewalls (Optional)

If desired, attach the 4 removable sidewalls to the tent frame. The sidewalls feature transparent windows to allow light and visibility. They can be easily attached or removed based on weather conditions or preference for air circulation.

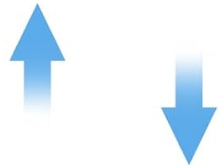

Bright

Clear and transparent windows ensure enough brightness and exquisite visibility



Breathable

All the sidewalls can be removed for good air circulation



Built-to-last

Made of high-quality material, strong and durable

4 Removable Sidewalls

Image: The canopy tent with all four sidewalls attached, highlighting the transparent windows for brightness and the option for removal for air circulation.

OPERATION

Your Tangkula canopy tent provides a spacious area for various outdoor activities. The 10' x 20' dimensions offer ample room for guests and furniture.

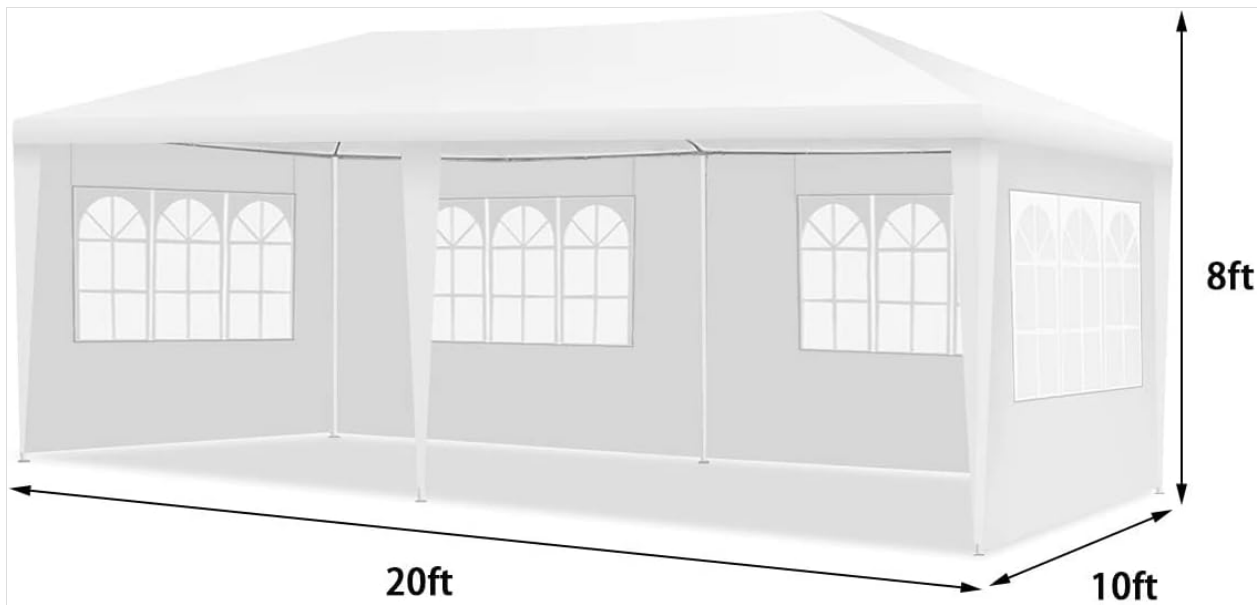 


Image: Diagram illustrating the dimensions of the 10x20 Ft canopy tent, with an 8ft peak height.

Sidewall Usage

The 4 removable sidewalls can be used to provide additional warmth, privacy, or protection from light wind and sun. The transparent windows allow natural light into the tent. For improved air ventilation, the sidewalls can be easily removed.

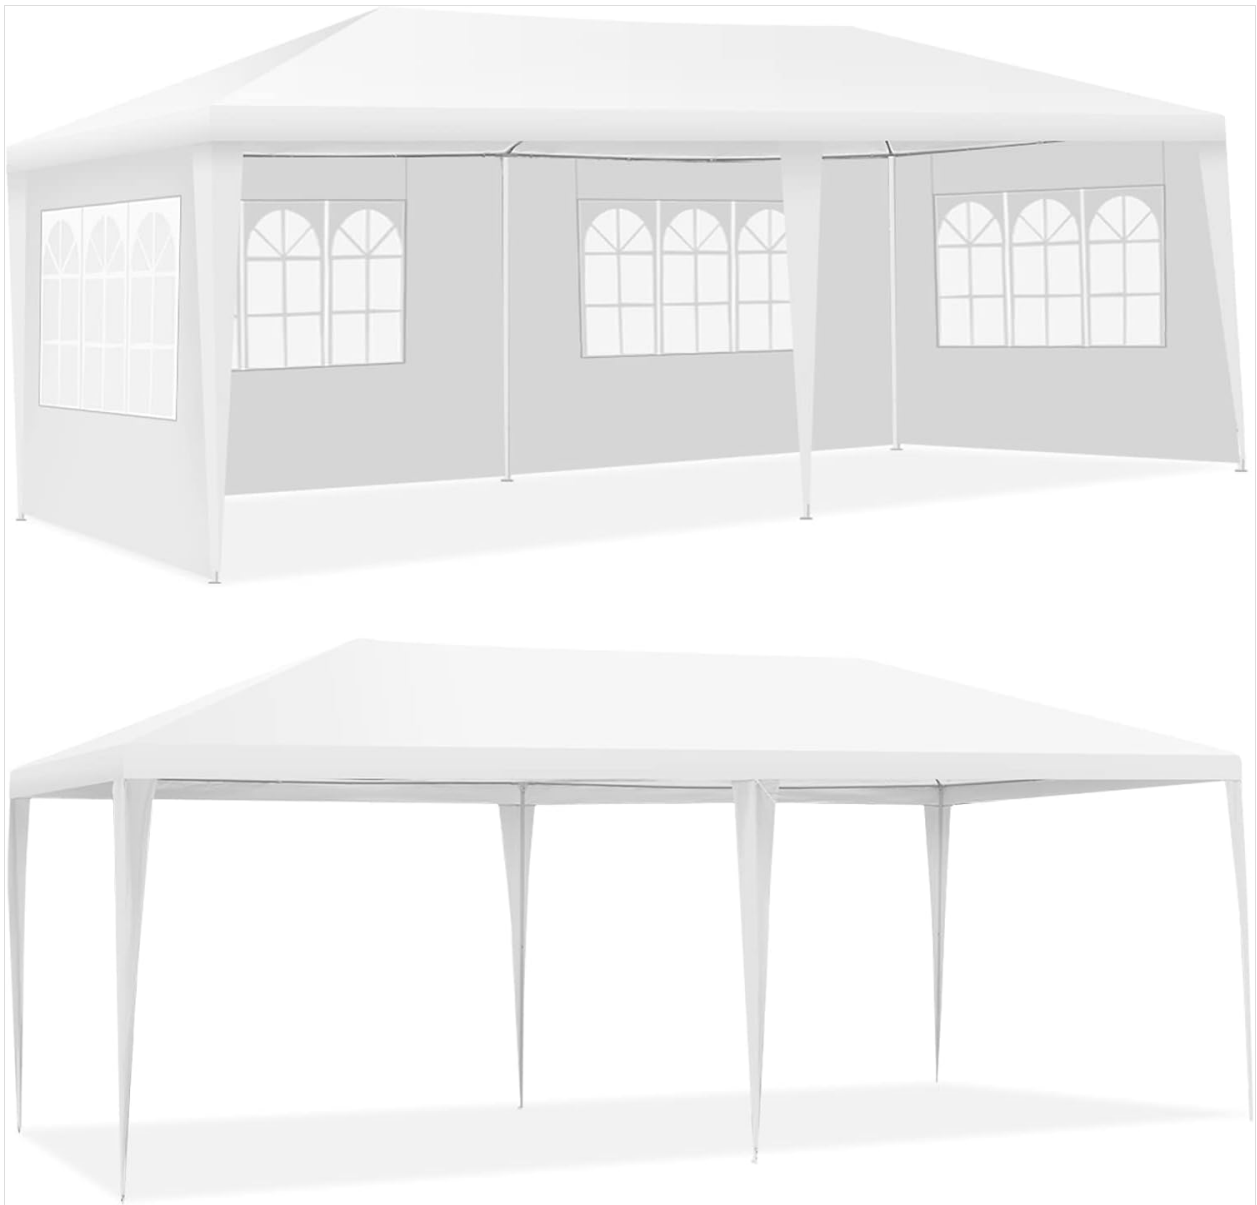 


Image: The canopy tent shown with and without its sidewalls, demonstrating its versatility.

Weather Resistance

The canopy cover is made from PE fabric, which is water-resistant and designed to withstand sunlight for long-term outdoor use. However, it is not designed for extreme weather conditions.



Image: Visual representation of the all-weather PE fabric, highlighting its waterproof and sunlight resistant properties.

CARE AND MAINTENANCE

Cleaning

Clean the canopy cover and sidewalls with a mild soap solution and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric. Rinse thoroughly and allow to air dry completely before storage.

Storage

When not in use, disassemble the canopy tent and store all components in the provided carrying bag. Store the bag in a cool, dry place, away from direct sunlight and extreme temperatures, to prolong the life of the product.



Convenient Storage Bag

When not in use, the canopy tent can be disassembled and stored into the carrying bag, which makes the storage and transport quite effortless.

Image: The canopy tent components neatly packed into the convenient storage bag for effortless transport and storage.

TROUBLESHOOTING

- **Tent Instability:** Ensure all frame poles are securely buckled and connected. Verify that all ground stakes are fully inserted into the ground and wind ropes are taut and properly anchored. In windy conditions, additional weights (e.g., sandbags, not included) may be necessary for enhanced stability.
- **Water Pooling on Roof:** If water collects on the canopy, gently push up from underneath to release the water. Ensure the canopy is stretched tightly over the frame during assembly to minimize sagging.
- **Difficulty with Assembly:** Ensure all parts are correctly identified and oriented according to the diagrams. Assembly is easier with at least two people. Do not force connections.

SPECIFICATIONS

Feature	Detail
Brand	Tangkula

Model Number	AM10381HM
Material	Alloy Steel (Frame), Polyethylene (PE) (Canopy/Sidewalls)
Color	White
Product Dimensions (L x W x H)	240"L x 120"W x 96"H (10' x 20' x 8')
Floor Area	200 square feet
Sidewalls	4 Removable, with Transparent Windows
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	Yes
Closure Type	Buckle (for frame connections)

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Tangkula customer service directly. Refer to your purchase documentation for specific contact details.