

SICOTAS DR113

SICOTAS 7-Drawer Rattan Dresser Instruction Manual

Model: DR113 | Brand: SICOTAS

1. INTRODUCTION

Thank you for choosing the SICOTAS 7-Drawer Rattan Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Key Features:

- **Abundant Storage:** Seven spacious drawers for organizing clothing, accessories, and other items.
- **Certified Safety:** Crafted from FSC-certified wood and passed ASTM 2057 - 2023 certification for stability.
- **Bohemian Design:** Features trendy rattan drawer fronts with a natural oak panel and golden handles.
- **Versatile Usage:** Suitable for bedrooms, living rooms, closets, or nurseries, and can function as a TV stand.
- **Smooth Operation:** Equipped with high-quality steel ball-bearing slides for effortless drawer movement.



Image 1.1: The SICOTAS 7-Drawer Rattan Dresser, showcasing its design and finish.

Your browser does not support the video tag.

Video 1.1: A brief overview of the SICOTAS 7-Drawer Rattan Dresser, highlighting its stylish appearance and spacious storage capabilities.

2. SAFETY INFORMATION

WARNING: Furniture tip-over hazard. Serious or fatal crushing injuries can occur from furniture tip-over. To prevent tip-over, this furniture must be permanently attached to the wall.

- Always use the provided anti-tip kit to secure the dresser to a wall.
- Do not place heavy objects on top of the dresser, especially towards the front edge.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Open only one drawer at a time to maintain stability.
- Ensure all screws and fasteners are tightened securely during assembly and periodically check for looseness.

- This dresser is made from FSC-certified wood, ensuring responsible sourcing.



Image 2.1: Illustration of the anti-tip device installation, emphasizing the 45-degree angle for screw insertion into the back panel for enhanced stability.

3. SPECIFICATIONS

Feature	Detail
Model Name	Dresser
Model Number	DR113
Dimensions (D x W x H)	17.72" x 56.88" x 31.34"
Color	Reclaimed Light Oak
Material	Engineered Wood
Number of Drawers	7
Item Weight	118.8 pounds (54 Kilograms)
Assembly Required	Yes
Safety Certification	ASTM 2057 - 2023

Overall Dresser Dimensions



Image 3.1: Detailed dimensions of the dresser and its drawers.

4. ASSEMBLY INSTRUCTIONS

Please follow these instructions carefully. It is recommended to have two people for assembly. Ensure all parts are present before you begin. A helpful installation video is provided below.

Parts List:

Refer to the assembly video for a visual guide to all numbered parts and hardware components (labeled A-N).

Your browser does not support the video tag.

Video 4.1: Step-by-step guide on how to install the SICOTAS 7-Drawer Rattan Dresser. This video covers the entire assembly process from unboxing to final setup.

General Assembly Steps (Refer to video for detailed visuals):

1. **Prepare the Top Panel:** Attach cam lock screws (A) to the top panel (1).

2. **Attach Anti-Tip Brackets:** Secure anti-tip brackets (J) to the top panel (1) using screws (F).
3. **Prepare Side Panels:** Attach cam lock screws (A) to the side panels (2 and 3).
4. **Install Drawer Slides (Side Panels):** Secure drawer slides (M2) to side panels (2 and 3) using screws (E).
5. **Prepare Support Bars:** Attach cam lock screws (A) to support bars (5, 6, and 7).
6. **Assemble Drawer Dividers:** Attach cam lock screws (A) to drawer dividers (4 and 9).
7. **Install Drawer Slides (Dividers):** Secure drawer slides (M2) to drawer dividers (4 and 9) using screws (E).
8. **Connect Side Panels and Dividers:** Use wooden dowels (C) to connect side panels (2 and 3) with support bars (5, 6, 7) and drawer dividers (4 and 9). Secure with cam locks (B).
9. **Attach Back Panel:** Slide the back panel (11) into the grooves.
10. **Secure Top Panel:** Place the top panel (1) onto the assembled frame and secure with cam locks (B).
11. **Assemble Drawers:** Follow the video instructions for assembling the small drawers (14) and large drawers (15, 16) using cam lock screws (A), cam locks (B), and drawer slides (M1). Attach handles (G) with screws (E).
12. **Install Casters (Optional):** If desired, attach casters (L) to the bottom of the dresser using screws (F).
13. **Insert Drawers:** Carefully insert the assembled drawers into their respective slides. Ensure the drawer slides are properly aligned and engaged.
14. **Final Safety Step:** Secure the dresser to the wall using the anti-tip kit (J, K, D) as shown in the safety section.

5. OPERATING INSTRUCTIONS

Drawer Usage:

- To open a drawer, gently pull the handle.
- To close a drawer, push it firmly until it is fully seated. The ball-bearing slides ensure smooth operation.
- Avoid forcing drawers open or closed, as this can damage the slides.
- For safety, open only one drawer at a time to prevent the dresser from tipping.

Ample Storage Space



Image 5.1: An open drawer demonstrating the ample storage capacity for various items.

Your browser does not support the video tag.

Video 5.1: Demonstrates the ample storage space within the SICOTAS 7-Drawer Dresser, showing how various items can be organized.

Versatile Placement:

- This dresser can be used in various rooms, including bedrooms, living rooms, and nurseries.
- Its wide top surface is suitable for holding a television, making it a functional media console.



Image 5.2: The dresser functioning as a TV stand, illustrating its versatility.

6. MAINTENANCE

Cleaning:

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- For the rattan sections, use a soft brush or vacuum with a brush attachment to remove dust.

Care:

- Keep the dresser away from direct sunlight and heat sources to prevent fading or warping.
- Avoid placing hot or wet items directly on the surface; use coasters or protective pads.
- Periodically check all fasteners and tighten them as needed to ensure stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned drawer slides or debris in the tracks.	Check alignment of slides on both the drawer and the dresser frame. Clean tracks of any dust or obstructions. Ensure screws are not overtightened.
Dresser feels wobbly.	Loose fasteners or uneven floor.	Tighten all cam locks and screws. Ensure the dresser is on a level surface; use shims if necessary. Verify anti-tip kit is securely installed.
Missing parts or damaged components.	Shipping damage or packaging error.	Contact SICOTAS customer support with your purchase details for assistance.

8. WARRANTY AND SUPPORT

SICOTAS products are designed for quality and durability. If you encounter any issues with your dresser, or if you have questions regarding assembly, parts, or general use, please do not hesitate to contact our customer support team. We are committed to providing assistance and ensuring your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the official SICOTAS website.