

[Manuals.plus](#) /

> [Nutricook](#) /

> Nutricook NC-ICY510S Ice Maker: Instruction Manual

Nutricook NC-ICY510S

Nutricook NC-ICY510S Ice Maker: Instruction Manual

Model: NC-ICY510S

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Nutricook NC-ICY510S Ice Maker. Keep this manual for future reference.

- Ensure the appliance is connected to a grounded power outlet with the correct voltage (220-240V).
- Do not immerse the power cord, plug, or any part of the appliance in water or other liquids.
- Unplug the ice maker from the power outlet before cleaning or when not in use.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep children away from the ice maker during operation.
- Use only potable water in the water reservoir.
- Do not block ventilation openings on the appliance.
- Place the ice maker on a flat, stable surface, away from direct sunlight or heat sources.

2. PACKAGE CONTENTS

Carefully unpack your new Nutricook NC-ICY510S Ice Maker and ensure all items are present and in good condition.

- Nutricook NC-ICY510S Ice Maker Unit
- Ice Scoop
- User Manual

3. PRODUCT DIAGRAM

Familiarize yourself with the components of your ice maker.



Figure 3.1: Top-down view of the Nutricook NC-ICY510S Ice Maker, showing the ice basket, water reservoir, and control panel.



Figure 3.2: Detailed view of the control panel, indicating functions for ice size selection, cleaning, and status alerts.

4. SETUP

Follow these steps for the initial setup of your ice maker.

1. **Unpack:** Remove all packaging materials and check for any damage.
2. **Placement:** Place the ice maker on a level, stable surface. Ensure there is at least 10 cm of space around the unit for proper ventilation. Avoid placing it near heat sources or in direct sunlight.
3. **Clean:** Before first use, clean the interior of the ice maker as described in the 'Maintenance and Cleaning' section.
4. **Fill Water Reservoir:** Open the lid and fill the water reservoir with potable water up to the 'MAX' fill line. Do not overfill.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Learn how to make ice and utilize the various functions of your Nutricook NC-ICY510S Ice Maker.

5.1 Making Ice

1. **Power On:** Press the **ON/OFF** button on the control panel to turn on the ice maker.
2. **Select Ice Size:** Press the **SELECT** button to choose between 'small ice' or 'large ice' bullet shapes. The corresponding indicator light will illuminate.
3. **Start Production:** The ice maker will automatically begin the ice-making cycle. The first batch of ice typically takes about 7 minutes.
4. **Ice Full Indicator:** When the ice basket is full, the 'ice full' indicator light will turn on, and the machine will pause operation. Remove ice to resume.
5. **Add Water Indicator:** If the water level in the reservoir is too low, the 'add water' indicator light will turn on. Add more water to the reservoir to continue ice production.
6. **Power Off:** Press the **ON/OFF** button to turn off the ice maker when finished.



FAST ICE MAKER

Figure 5.1: The ice maker produces 8 bullet-shaped ice pieces per cycle and can produce up to 12kg of ice per day.



2 SIZE BULLET ICE - LARGE & SMALL

Figure 5.2: The machine offers two sizes of bullet ice: small and large, suitable for various beverages.

5.2 Low Noise Operation

The Nutricook NC-ICY510S is designed for quiet operation, ensuring minimal disturbance in your home or office environment.



LOW NOISE

Figure 5.3: Visual representation of the ice maker's low noise feature.


6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your ice maker.

6.1 Self-Cleaning Function

The ice maker features a convenient self-cleaning function.

1. **Empty Water:** Ensure the water reservoir is empty.
2. **Add Water:** Fill the reservoir with clean water up to the 'MAX' line.
3. **Activate Self-Clean:** Press and hold the **CLEAN** button (or a combination of buttons as indicated on your specific model's control panel, typically the 'SELECT' button for 5 seconds) until the 'clean' indicator light illuminates. The machine will run a cleaning cycle.
4. **Drain Water:** Once the cycle is complete, drain the water from the reservoir by removing the drain plug located at the bottom of the unit.
5. **Rinse:** Rinse the reservoir with fresh water and drain again.

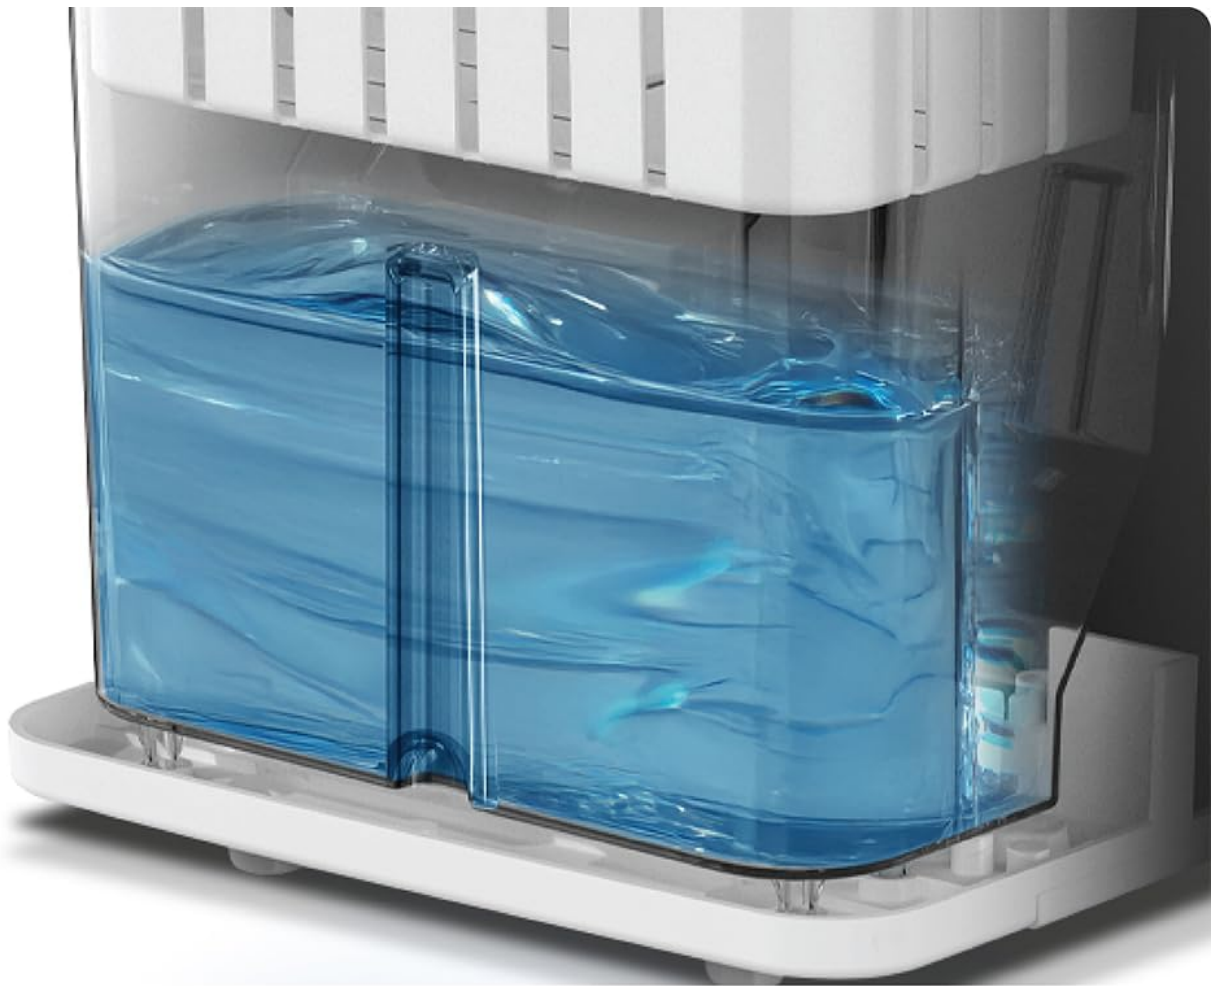

SELF CLEANING

Figure 6.1: The self-cleaning function circulates water to clean internal components, simplifying maintenance.

6.2 Manual Cleaning

- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior:** For a more thorough cleaning, remove the ice basket and wipe the interior with a solution of mild detergent and water. Rinse thoroughly.
- **Descaling:** If mineral deposits build up, use a descaling solution suitable for kitchen appliances, following the product's instructions.
- **Storage:** If storing the ice maker for an extended period, drain all water, clean and dry the unit thoroughly, and store it in a cool, dry place.

7. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Ice maker not turning on	No power supply	Check if the power cord is securely plugged in and the outlet is functional.
"Add Water" indicator is on	Water reservoir is empty or low	Add potable water to the reservoir up to the MAX line.
"Ice Full" indicator is on	Ice basket is full	Remove ice from the basket.
Ice production is slow or ice is too thin	Room temperature too high; water temperature too high; ventilation blocked	Ensure the room temperature is within recommended limits (10-32°C). Use cold water. Ensure proper ventilation around the unit.
Unusual noise during operation	Unit not level; internal component issue	Ensure the ice maker is on a level surface. If noise persists, contact customer support.

8. SPECIFICATIONS

Technical details of the Nutricook NC-ICY510S Ice Maker.

Feature	Detail
Brand	Nutricook
Model Name	NC-ICY510S
Dimensions (D x W x H)	20.8 cm x 29.2 cm x 28.1 cm
Water Reservoir Capacity	1 Liter
Power	150 Watts
Voltage	220 Volts (AC)
Materials	Stainless Steel (exterior), Plastic (interior)
Item Weight	7 kg
Ice Shape	Bullet
Ice Production Time	Approx. 7 minutes per cycle

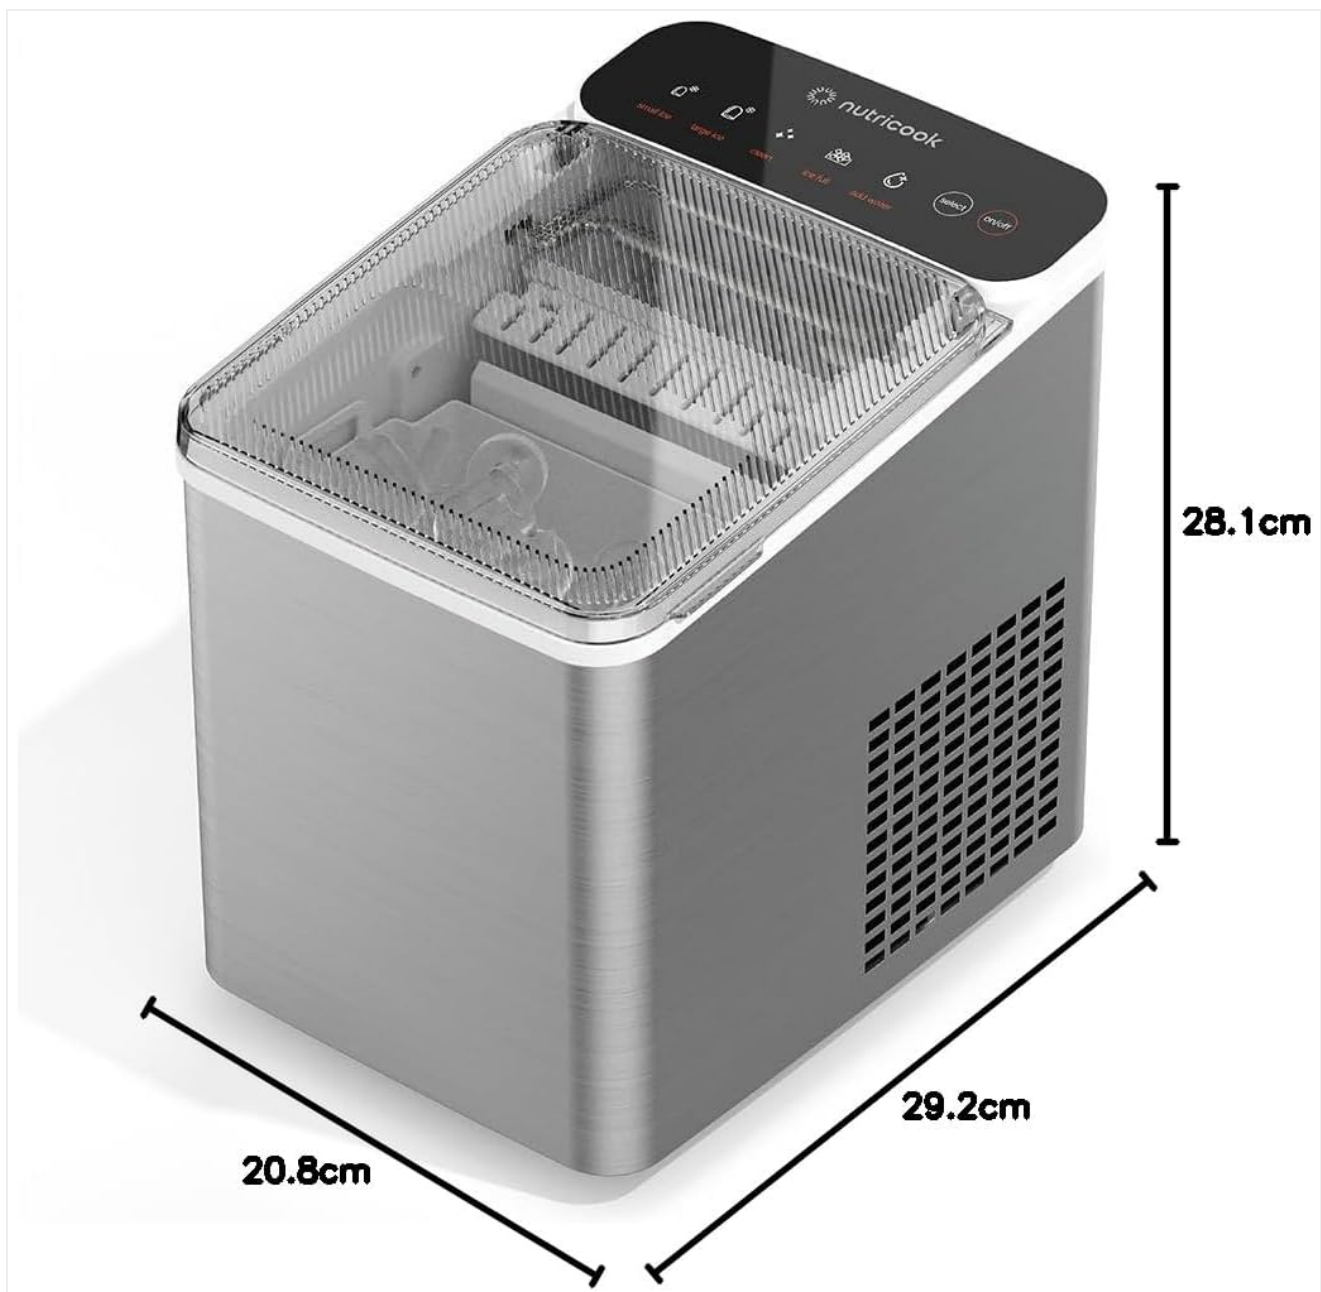


Figure 8.1: Dimensions of the Nutricook NC-ICY510S Ice Maker.

9. WARRANTY AND SUPPORT

Your Nutricook NC-ICY510S Ice Maker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

- **Warranty Claims:** For warranty service, please retain your proof of purchase.
- **Customer Support:** If you have any questions, require technical assistance, or need to report a problem, please contact Nutricook customer support. Contact details can typically be found on the official Nutricook website or on the warranty card.
- **Online Resources:** Visit the official Nutricook website for FAQs, product registration, and additional support resources.