

[Manuals.plus](#) /

› [DORTALA](#) /

› DORTALA Tilt Out Trash Can Cabinet (Model DO57448CKCA) Instruction Manual

DORTALA DO57448CKCA

DORTALA Tilt Out Trash Can Cabinet (Model DO57448CKCA) Instruction Manual

Model: DO57448CKCA | Brand: DORTALA

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- Always mount the cabinet securely to the floor using the provided anti-tipping kit. This prevents accidental tipping and ensures stability.
- Do not overload the cabinet or its components beyond their stated load capacities. The trash bin cabinet can support up to 209 lbs. The countertop has a load capacity of 100 lbs.
- Keep the cabinet away from direct heat sources, open flames, and excessive moisture.
- Never use the cabinet for purposes other than its intended use as a storage and trash bin cabinet to avoid potential hazards.
- Ensure all electrical connections for the charging station are properly made and that the power cord is not pinched or damaged.

Anti-Tipping Device

Avoid accidental tipping and protect your family

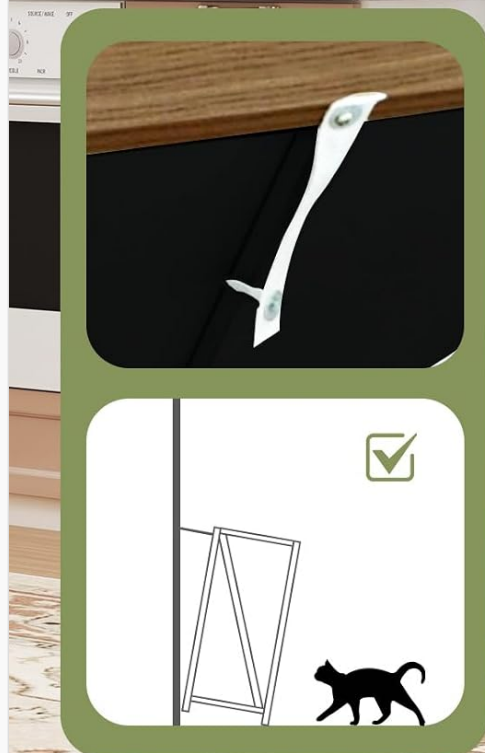


Figure 1: Illustration of the anti-tipping device installation. Securely attach the cabinet to the wall to prevent accidental tipping.

2. SETUP AND ASSEMBLY

This DORTALA cabinet requires assembly. A detailed user guide with step-by-step instructions and diagrams is included in the packaging. Please follow the instructions carefully.

2.1 Before You Begin

- Unpack all components and verify against the parts list in the included user guide.
- Ensure you have all necessary tools as specified in the user guide (typically a screwdriver and hammer).
- Assemble on a soft, clean surface to prevent scratching the cabinet parts.

2.2 Assembly Steps Overview

1. Follow the numbered steps in the provided user guide for frame construction.

2. Install the drawers and their slides according to the instructions.
3. Attach the tilt-out door mechanism and ensure smooth operation. The universal wheel prevents the cabinet door from sagging or getting stuck.
4. Install the adjustable shelves in your desired positions.
5. Mount the charging station into the designated slot on the countertop and connect the power cord.
6. Securely install the anti-tipping kit to a wall stud to prevent the cabinet from falling over.

Product Dimensions




Figure 2: Product dimensions and internal measurements for assembly reference.

3. OPERATING INSTRUCTIONS

3.1 Tilt-Out Trash Can Holder

The cabinet features a tilt-out mechanism designed to conceal a trash can and minimize odors. It is recommended for garbage cans (not included) measuring approximately 14"L x 9"W x 20"H, with a capacity of up to 9.25 gallons.

 - To open: Gently pull the top of the tilt-out door forward. The door will open at a 25-degree angle for easy access.
- To close: Push the door back until it is flush with the cabinet front.
- To replace bags: Open the tilt-out door, remove the full trash can, replace the bag, and reinsert the can.

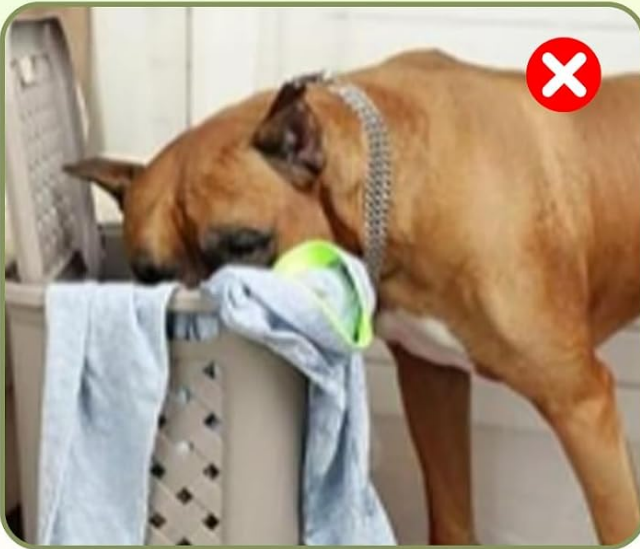

Tilt Out Trash Cabinet

Avoid pets digging trash and bad smell leaking out



 
Garbage



Dirty Clothes



Pet Food

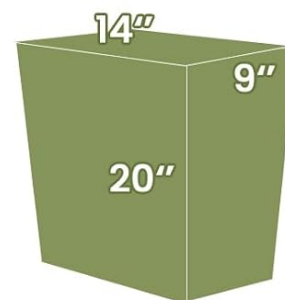

Fit 9.25 gallon trash bin (not included)

Figure 3: The tilt-out trash cabinet in use, illustrating its pet-proof design and recommended trash bin dimensions.

3.2 Built-in Charging Station

The integrated charging station provides convenient power access for your devices. It includes 2 standard 125V/12A power outlets and 2 5V/2.1A USB ports. The 4.9 ft power cord allows for flexible placement.

- Plug the cabinet's power cord into a standard wall outlet.
- Use the 125V/12A outlets for small appliances or chargers.
- Use the 5V/2.1A USB ports to charge compatible USB devices.
- Utilize the back cable hole for efficient wire management, keeping your countertop organized.

Practical Countertop Charge Station



Back Cable Hole



125V/12A
2 Outlets



5V/2.1A
2 USB Ports



4.9 FT
Power Cord

Figure 4: The integrated charging station on the countertop, showing power outlets and USB ports.

3.3 Storage Features

The cabinet offers various storage options to help organize your kitchen or laundry room.

- **Spacious Countertop:** Use the top surface for food preparation, small appliances, or decorative items.
- **Drawers:** Two large drawers provide concealed storage for utensils, linens, or other small items.
- **Adjustable Shelves:** The enclosed cabinet features two shelves, one of which is adjustable across three positions, allowing you to customize storage for items of various sizes.
- **Side Shelves:** Two side shelves with 2-inch high guardrails are ideal for storing spice jars, condiments, or other frequently used items, keeping them within easy reach.



Figure 5: Overview of the cabinet's storage compartments, including adjustable shelves and drawers.

4. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or moisture damage to the engineered wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Anti-Tipping Kit:** Regularly inspect the anti-tipping device to ensure it remains securely attached to both the cabinet and the wall.
- **Electrical Components:** Ensure the charging station and power cord are free from damage. Do not use if any part is frayed or broken.

5. TROUBLESHOOTING

If you encounter any issues with your DORTALA Tilt Out Trash Can Cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; uneven floor; anti-tipping kit not installed or loose.	Ensure all screws are tightened. Place shims under the cabinet legs if the floor is uneven. Verify the anti-tipping kit is correctly installed and secured to a wall stud.
Tilt-out door does not open/close smoothly or makes noise.	Hinges are loose or misaligned; obstruction; universal wheel issue.	Check and tighten hinge screws. Ensure no items are obstructing the door's path. Inspect the universal wheel for any damage or debris and clean if necessary.
Drawers stick or are difficult to open/close.	Overpacked drawer; misaligned slides; debris in slides.	Reduce contents of the drawer. Check if drawer slides are properly aligned and secured. Clean any dust or debris from the drawer slides.
Charging station not working.	Power cord not plugged in; wall outlet not functioning; damaged charging station.	Ensure the cabinet's power cord is fully plugged into a working wall outlet. Test the wall outlet with another device. If still not working, contact customer support.
Parts missing or damaged during assembly.	Manufacturing defect; shipping damage.	Refer to the included user guide for contact information to request replacement parts.

6. SPECIFICATIONS

Feature	Detail
Brand	DORTALA
Model Name	Tilt Out Trash Can Cabinet
Item Model Number	DO57448CKCA
Color	Black
Material	Engineered Wood
Product Dimensions (D x W x H)	14"D x 39.5"W x 36"H
Item Weight	73 Pounds
Weight Limit (Total Cabinet)	209 lbs
Weight Limit (Countertop)	100 lbs
Storage Volume (Trash Can)	9.25 Gallons (Trash can not included)
Recommended Trash Can Size	14"L x 9"W x 20"H
Charging Station	2x 125V/12A Outlets, 2x 5V/2.1A USB Ports

Feature	Detail
Power Cord Length	4.9 ft
Number of Shelves	3 (1 adjustable)
Assembly Required	Yes
Special Features	Adjustable Shelf, Built-In Charging Station, Tilt Out Trash Can Cabinet, Anti-Tipping Kit

7. WARRANTY AND SUPPORT

DORTALA stands behind the quality of its products. For warranty information, replacement parts, or technical support, please refer to the contact details provided in the user guide included with your purchase or visit the official DORTALA website.

When contacting support, please have your model number (DO57448CKCA) and purchase date available.

© 2025 DORTALA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DWXFJ3ZT>

More documents and user manuals: <https://manuals.plus/>