

ZWP T6

ZWP Replacement Remote Control User Manual

For Robot Vacuums: Vexilar T6, T7, T8; AZQQ S2; PSUK W7, W11; Vactidy Cleanova Nimble T6

1. INTRODUCTION

This manual provides instructions for the ZWP Replacement Remote Control. This remote is designed to operate various robot vacuum cleaner models, offering convenient control over your device's functions. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your remote control.

2. COMPATIBILITY

This remote control is compatible with the following robot vacuum cleaner models:

- Vexilar Robot Vacuum T6, T7, T8
- AZQQ Robot Vacuum S2
- PSUK Robot Vacuum W7, W11
- Vactidy Cleanova Nimble T6 Robot Vacuum

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.


Note: The remote control does not require any programming. Once batteries are installed, it is ready for use with compatible robot vacuum models.



Image: Front and back view of the ZWP Replacement Remote Control. The image highlights the soft silicone buttons on the front and the battery compartment on the back, indicating where batteries should be inserted.

4. OPERATING INSTRUCTIONS

The remote control features intuitive buttons for various functions. Refer to the diagram below for button identification and their corresponding actions.

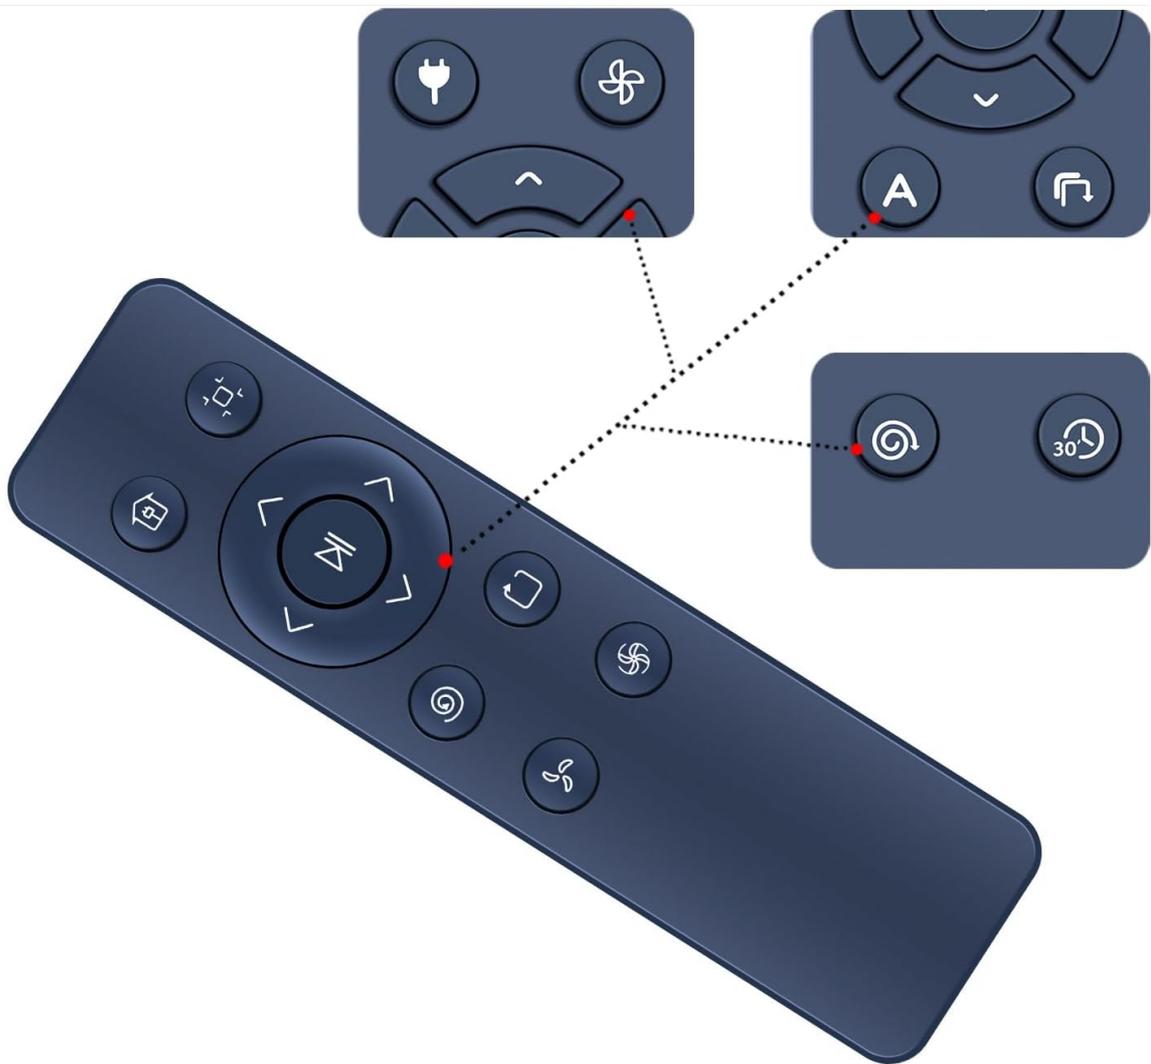

**For remote control with the same buttons,
please distinguish carefully when purchasing**

Image: Detailed view of the ZWP Replacement Remote Control, with specific buttons highlighted to indicate their functions for robot vacuum operation.

4.1 Button Functions

Button Icon	Function	Description
🏠	Home / Return to Charging Dock	Sends the robot vacuum back to its charging station.
▶	Start / Pause Cleaning	Starts or pauses the current cleaning cycle.
▲ ▼ ◀ ▶	Directional Control	Manually steers the robot vacuum in the desired direction.
📍	Spot Cleaning	Initiates a concentrated cleaning in a specific area.
🕒	Schedule / Timer	Activates or adjusts the cleaning schedule. (May vary by vacuum model)

Button Icon	Function	Description
	Fan Speed / Suction Power	Adjusts the fan speed or suction power of the vacuum.
	Settings / Mode	Cycles through different cleaning modes or accesses settings.

4.2 Operational Distance

The remote control operates effectively within a range of up to **8 meters (approximately 26 feet)** from the robot vacuum. Ensure there are no major obstructions between the remote and the vacuum for optimal signal transmission.



Image: The ZWP Replacement Remote Control positioned near a robot vacuum, visually representing the effective operational distance of 8 meters.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance

guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the robot vacuum.
 - Verify that the robot vacuum is powered on and within the operational distance (8 meters).
- **Intermittent Functionality:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure a clear line of sight to the robot vacuum.

7. SPECIFICATIONS

- **Brand:** ZWP
- **Compatible Devices:** Robot Vacuum (Vexilar T6, T7, T8; AZQQ S2; PSUK W7, W11; Vactidy Cleanova Nimble T6)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** High-quality ABS with soft silicone buttons
- **Operational Distance:** Up to 8 meters
- **Color:** Black
- **Item Weight:** Approximately 2.08 ounces
- **Package Dimensions:** 7.5 x 2.6 x 1 inches

8. SUPPORT

If you have any questions or require further assistance with your ZWP Replacement Remote Control, please do not hesitate to contact us. We are committed to helping you resolve any issues you may encounter.