

Philips XV5113/01

Philips OneUp 5000 Series XV5113/01 Electric Mop User Manual

Model: XV5113/01

1. INTRODUCTION

Thank you for choosing the Philips OneUp 5000 Series Electric Mop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- This appliance is for household use only.
- Supervise children to ensure they do not play with the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips OneUp Electric Mop.



Image 1: Philips OneUp 5000 Series Electric Mop, including the main unit, USB charging cable, cleaning pad, and a bottle of floor cleaner concentrate.

1. Main Mop Unit (handle, water tanks, mop head)

2. USB Charging Cable
3. Cleaning Pad (reusable)
4. Floor Cleaner Concentrate (40ml)

4. SETUP

4.1 Assembly

- **Attach Handle:** Insert the upper handle section into the main body until it clicks securely into place.
- **Attach Cleaning Pad:** Align the cleaning pad with the mop head and press firmly to attach it using the hook-and-loop fasteners.

4.2 Charging the Battery

Before first use, fully charge the appliance. A full charge provides approximately 70 minutes of runtime.

1. Locate the charging port on the main unit.
2. Connect the USB charging cable to the appliance and to a suitable USB power adapter (not included).
3. The charging indicator light will illuminate. It will change or turn off when charging is complete.

4.3 Filling the Water Tank

- Locate the clean water tank on the appliance.
- Open the tank cap.
- Fill the tank with clean tap water. For enhanced cleaning, add a small amount of the provided Philips OneUp Floor Cleaner Concentrate (40ml bottle) as per its instructions. Do not overfill.
- Close the tank cap securely.

5. OPERATING INSTRUCTIONS

5.1 Starting the Appliance

- Ensure the battery is charged and the clean water tank is filled.
- Press the power button located on the handle to turn on the appliance.
- The appliance will begin to pump clean water onto the floor and simultaneously suck up dirty water.

5.2 Mopping Technique

- Move the mop slowly and steadily across the floor surface.
- For stubborn stains, hold the mop over the area for a few seconds to allow the cleaning solution to work.
- The appliance is designed to clean and dry simultaneously, leaving floors with minimal moisture.
- Avoid using the mop on unsealed wooden floors or other surfaces that are sensitive to moisture.

5.3 Emptying the Dirty Water Tank

- During operation, the dirty water tank will collect soiled water.
- When the dirty water tank is full (capacity 178ml), or after each cleaning session, turn off the appliance.
- Remove the dirty water tank from the main unit.
- Carefully empty the dirty water into a sink or drain.
- Rinse the dirty water tank with clean water and allow it to air dry before reattaching.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Mop Head and Pads

- After each use, remove the cleaning pad from the mop head.
- The cleaning pad is reusable and can be machine washed with similar colors at a low temperature (e.g., 30°C). Do not use bleach or fabric softener.
- Allow the pad to air dry completely before reattaching or storing.
- Wipe the mop head with a damp cloth to remove any debris.

6.2 Cleaning Water Tanks

- Regularly rinse both the clean and dirty water tanks with fresh water.
- Ensure tanks are completely dry before storage to prevent mold or odor buildup.

6.3 Storage

- Store the appliance in a cool, dry place.
- Ensure the battery is partially charged if storing for extended periods to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Charge the battery fully.
No water dispensed.	Clean water tank is empty.	Refill the clean water tank.
Poor cleaning performance.	Cleaning pad is dirty or worn.	Clean or replace the cleaning pad.
Dirty water tank overflows.	Dirty water tank is full.	Empty and rinse the dirty water tank.

If the problem persists after attempting these solutions, please contact Philips customer support.

8. SPECIFICATIONS

Model: XV5113/01

Brand: Philips

Runtime: Up to 70 minutes

Clean Water Capacity: 281 ml

Dirty Water Capacity: 178 ml

Dimensions: 140L x 35W x 12H cm

Weight: 1.9 kg

Handle Material: Plastic

Head Material: Cotton (for cleaning pads)

Power Source: Rechargeable Battery (USB charging)

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Philips website for your region. For technical support, spare parts, or service, please contact Philips customer support.

Philips Customer Support: www.philips.com/support

