

[manuals.plus](#) /› [Memorex](#) /› [Memorex MX-BTS10\(S\) Bluetooth Speaker User Manual](#)**Memorex MX-BTS10(S)**

Memorex MX-BTS10(S) Bluetooth Speaker User Manual

Model: MX-BTS10(S) | Brand: Memorex

1. INTRODUCTION

Thank you for choosing the Memorex MX-BTS10(S) Bluetooth Speaker. This portable speaker is designed to deliver high-quality wireless audio with versatile playback options, including Bluetooth 5.1, USB, TF card, and FM radio. It also features hands-free calling and dynamic LED lighting to enhance your listening experience. This manual provides detailed instructions to help you get the most out of your device.



Image: The Memorex MX-BTS10(S) Bluetooth Speaker, showcasing its compact design and vibrant LED lighting.

2. WHAT'S IN THE Box

Please check the package contents to ensure all items are present:

- Memorex MX-BTS10(S) Portable Bluetooth Speaker
- Quick Start Guide
- USB-C Charging Cable (not explicitly listed but implied by USB-C charging)

3. SETUP GUIDE

3.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

3.2 Powering On/Off

Press and hold the **Power button** (usually marked with a power symbol) for a few seconds to turn the speaker ON or OFF. A sound prompt or LED indicator will confirm the status change.

3.3 Bluetooth Pairing

1. Ensure the speaker is powered ON and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "MX-BTS10(S)" from the list.
4. Once connected, the speaker will provide an audible confirmation, and the LED indicator will become solid.



Image: The Memorex MX-BTS10(S) Bluetooth Speaker wirelessly connected to a smartphone, demonstrating Bluetooth functionality.

4. OPERATING INSTRUCTIONS

4.1 Mode Selection

Press the **Mode (M)** button to switch between different playback modes: Bluetooth, FM Radio, USB, and TF Card.

4.2 Bluetooth Playback

After successful pairing, open your music application on your device and start playing audio. Use the speaker's **Volume Up (+)** and **Volume Down (-)** buttons to adjust the speaker's volume. Short press **Volume Up (+)** for next track, short press **Volume Down (-)** for previous track.

4.3 USB/TF Card Playback

Insert a USB flash drive or a TF (microSD) card into the respective port. The speaker will automatically switch to USB or TF card mode and begin playing supported audio files (MP3, WMA, APE, FLAC, AAC, MP4, M4A, WAV, AIF, AIFC). Use the **Volume Up (+)** and **Volume Down (-)** buttons for track navigation and volume control.

4.4 FM Radio Operation

1. Switch to FM Radio mode using the **Mode (M)** button.
2. Long press the **Play/Pause button** to initiate an automatic station scan. The speaker will scan and save available FM stations.
3. Use the **Volume Up (+)** and **Volume Down (-)** buttons to navigate between saved stations.

4.5 Hands-Free Calling

When connected via Bluetooth, if a call comes in, press the **Play/Pause button** to answer the call. Press it again to end the call. Long press the **Play/Pause button** to reject an incoming call.

4.6 LED Lighting Effects

The speaker features dynamic LED lighting. The lights will sync to the beat of your music. There is no explicit control for the LED lighting mentioned, implying it operates automatically with audio playback.

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the ports. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** This speaker is not specified as water-resistant. Avoid exposure to water or excessive moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.

Problem	Possible Cause	Solution
No sound from speaker.	Volume too low; incorrect mode; device not connected.	Increase volume on both speaker and connected device. Ensure correct playback mode is selected. Reconnect Bluetooth device.
Bluetooth connection unstable or fails.	Device too far; interference; pairing issue.	Move device closer to speaker. Avoid obstacles. Forget device on your phone and re-pair.
FM radio reception is poor.	Weak signal; environmental interference.	Relocate the speaker to an area with better signal. Perform auto-scan again.
USB/TF card not playing.	Unsupported file format; card/drive not inserted correctly; corrupted files.	Ensure files are supported (MP3, WMA, etc.). Reinsert the card/drive. Try a different card/drive.

7. SPECIFICATIONS

Feature	Detail
Model Number	MX-BTS10(S)
Connectivity Technology	Bluetooth 5.1
Power Source	Corded Electric & Battery Powered (USB-C Fast Charging)
Speaker Maximum Output Power	10 Watts
Product Dimensions	5" L x 5.4" W x 5" H
Tuner Technology	FM Radio
Special Features	Lightweight, Portable, Rechargeable, Hands-Free Calling, LED Lighting
Supported Audio Formats	MP3, WMA, APE, FLAC, AAC, MP4, M4A, WAV, AIF, AIFF
Color	Silver
UPC	838689001335



RECHARGEABLE BATTERY



HANDS FREE



8 HOURS PLAY TIME



USB-C CHARGING PORT



LED LIGHTING



SUPER BASS



Image: Visual representation of key features including rechargeable battery, hands-free, 8 hours playtime, USB-C charging, LED lighting, and super bass.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Memorex website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may also contact the retailer where the product was purchased.

© 2025 Memorex. All rights reserved.

Related Documents - MX-BTS10(S)

 memorex. Bluetooth Clock Radio with USB charging function with MX-CR160 OPERATION MANUAL  ENGLISH	<p><u>Memorex MX-CR160 Bluetooth Clock Radio with USB Charging - Operation Manual</u></p> <p>The Memorex MX-CR160 is a Bluetooth Clock Radio featuring a USB charging function, dual alarms (Wake to Radio/Buzzer), an FM digital tuner with 20 presets, sleep timer, dimmer function, and auxiliary input. This operation manual provides detailed instructions for setup, use, and troubleshooting of the device.</p>
 memorex. TV Speaker Altavoz para televisión altavoz de televisión MX-CLRTV100 OPERATION MANUAL MANUALE D'USO MANUAL DE OPERACIÓN  ENGLISH FRANÇAIS ESPAÑOL	<p><u>Memorex MX-CLRTV100 TV Speaker Operation Manual</u></p> <p>This manual provides comprehensive instructions for operating the Memorex MX-CLRTV100 TV Speaker, covering setup, basic operations, advanced features like Bluetooth and Clear Voice, and technical specifications.</p>
 memorex. Retro Stereo Bluetooth Speaker Altavoz estéreo retro Bluetooth MX-RBT100 OPERATION MANUAL  ENGLISH	<p><u>Memorex MX-RBT100 Retro Stereo Bluetooth Speaker Operation Manual</u></p> <p>This operation manual provides detailed instructions for the Memorex MX-RBT100 Retro Stereo Bluetooth Speaker, covering setup, operation modes (Bluetooth, AUX, USB), device specifications, and troubleshooting.</p>
 memorex. 720p Portable HD Projector with MX-PJ720 OPERATION MANUAL  ENGLISH	<p><u>Memorex MX-PJ720 720p Portable HD Projector Operation Manual</u></p> <p>This operation manual provides comprehensive instructions for the Memorex MX-PJ720 720p Portable HD Projector, covering setup, operation, connections, settings, safety precautions, and specifications.</p>
 PRELIMINARY Memorex Model 630 Disc Drive 000-00000-00000-00000	<p><u>Memorex Model 630 Disc Drive Maintenance Manual</u></p> <p>Comprehensive maintenance manual for the Memorex Model 630 Disc Drive, detailing installation, operation, theory of operation, and adjustment procedures for customer engineers. Includes technical specifications and troubleshooting guidance.</p>
 Memorex MEGA traveldrive User's Guide  ENGLISH	<p><u>Memorex MEGA traveldrive USB 2.0 Portable External Hard Drive User's Guide</u></p> <p>Comprehensive user's guide for the Memorex MEGA traveldrive, covering features, system compatibility, installation, standard operation, troubleshooting, and warranty information for this portable USB 2.0 external storage device.</p>