

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Braun](#) /

› [Braun PurShine WK1500GY Electric Kettle User Manual](#)

Braun WK1500GY

Braun PurShine WK1500GY Electric Kettle User Manual

Model: WK1500GY

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- This appliance is for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Keep the appliance out of reach of children.
- Always place the kettle on a stable, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Do not overfill the kettle beyond the MAX mark or underfill below the MIN mark to prevent boiling dry or water splashing.
- Ensure the lid is securely closed before boiling.
- Avoid contact with steam escaping from the spout or lid during and after boiling.
- Unplug the kettle from the outlet when not in use and before cleaning.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Braun PurShine WK1500GY Electric Kettle:

1. Kettle Body (Stainless Steel)
2. Lid with Release Button
3. Handle
4. Power Switch (On/Off Lever)
5. Water Level Indicator
6. Spout
7. Anti-scale Filter (inside spout)
8. Power Base (360° Rotational)

9. Integrated Cable Winder (under power base)



Figure 1: Braun PurShine WK1500GY Electric Kettle with lid open, showing the water level indicator.

INITIAL SETUP

Before using your new kettle for the first time, follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wipe the exterior of the kettle with a damp cloth. Do not use abrasive cleaners.
3. Fill the kettle with fresh water up to the MAX mark. Boil the water and then discard it. Repeat this process twice to remove any manufacturing residues or odors.
4. Place the power base on a stable, flat, and dry surface.
5. Ensure the power cord is fully unwound from the integrated cable winder under the power base.



Figure 2: Top-down view of the kettle with the lid open, illustrating the wide opening for easy filling.

OPERATING INSTRUCTIONS

Follow these steps to safely operate your electric kettle:

1. **Fill the Kettle:** Press the lid release button to open the lid. Fill the kettle with fresh water, ensuring the water level is between the MIN and MAX marks on the water level indicator. Close the lid securely until it clicks.



Figure 3: Close-up view of the water level indicator, showing markings for liters.

- Place on Power Base:** Place the filled kettle firmly onto the power base. The 360° rotational base allows you to position the kettle from any angle.
- Start Boiling:** Plug the power base into a suitable wall outlet. Press the power switch down. The indicator light will illuminate, signifying that the kettle has started heating.



Figure 4: Detail of the power switch located on the handle of the kettle.

- Automatic Shut-off:** The kettle will automatically switch off once the water reaches boiling point. The indicator light will turn off, and the power switch will return to its original position.
- Pouring:** Carefully lift the kettle from the power base and pour the hot water. The angled spout is designed for comfortable and controlled pouring.



Figure 5: Proper technique for pouring water from the kettle into a cup.

6. **Re-boiling:** If the kettle has just boiled, allow a short cooling period (approximately 30 seconds) before attempting to re-boil to ensure the automatic shut-off mechanism functions correctly.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.

Interior Descaling

Limescale buildup can affect performance and energy efficiency. Descale your kettle regularly, especially in hard water areas.

1. Fill the kettle with a mixture of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling solution according to the product's instructions.
2. Boil the solution.
3. Allow the solution to stand in the kettle for at least one hour, or as recommended by the descaling solution manufacturer.
4. Empty the kettle and rinse it thoroughly several times with fresh water.
5. Boil fresh water in the kettle and discard it to remove any residual taste or odor from the descaling process.

Anti-scale Filter Cleaning

- The anti-scale filter located behind the spout can be removed for cleaning.
- Rinse the filter under running water and gently brush away any mineral deposits.
- Ensure the filter is correctly re-inserted before using the kettle.

TROUBLESHOOTING GUIDE

If you encounter any issues with your kettle, please consult the following guide before contacting customer service:

Problem	Possible Cause	Solution
Kettle does not heat.	No power supply. Kettle not properly seated on base. Power switch not engaged.	Check if the power base is plugged in and the outlet is functional. Ensure the kettle is correctly placed on the power base. Press the power switch down firmly.
Kettle switches off before boiling.	Limescale buildup.	Descal the kettle as described in the 'Maintenance and Cleaning' section.
Water leaks from the kettle.	Lid not closed properly. Kettle overfilled.	Ensure the lid is securely closed. Do not fill the kettle beyond the MAX mark.
Water has an unusual taste or odor.	New appliance residue. Residual descaling solution. Stale water.	Perform initial cleaning steps (boil and discard water). Rinse thoroughly after descaling. Always use fresh water for boiling.

TECHNICAL SPECIFICATIONS

Model: WK1500GY

Capacity: 1.7 Liters

Power: 2200 Watts

Voltage: 240 Volts

Dimensions (L x W x H): 22.4 x 15.3 x 24 cm (approx. 8.8 x 6.0 x 9.4 inches)

Weight: 1.36 kg (approx. 3 lbs)

Features: Automatic Shut-off, Rapid Boil System, 360° Swivel Base, Water Level Indicator, Integrated Cable Winder

WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, please refer to the separate warranty card included with your product. Keep your proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please visit the official Braun website or contact their customer support for your region.