

Tefal EY901N

TEFAL EY901N Dual Easy Fry Essential Air Fryer Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your TEFAL EY901N Dual Easy Fry Essential air fryer. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

PRODUCT OVERVIEW

The TEFAL EY901N Dual Easy Fry Essential is a versatile air fryer designed for healthy cooking with minimal oil. It features two independent cooking zones, allowing you to prepare different foods simultaneously.



Image 1: The TEFAL EY901N Dual Easy Fry Essential air fryer, showcasing its two cooking baskets with a whole chicken in one and fries in the other, demonstrating its dual cooking capability.



Image 2: Front view of the TEFAL EY901N Dual Easy Fry Essential air fryer, highlighting the digital control panel and the two pull-out cooking baskets.



Image 3: The TEFAL EY901N Dual Easy Fry Essential air fryer in use, illustrating how two different dishes (a main course and a side dish) can be cooked simultaneously and finish at the same time using the Sync mode. This feature allows for complete meals for the whole family to be prepared efficiently, offering crispy and healthy cooking with up to 99% less fat.



Image 4: The TEFAL EY901N Dual Easy Fry Essential air fryer with approximate dimensions (43.5 cm length, 47.5 cm width, 34 cm height) indicated. This model saves time and up to 70% energy, requires no preheating, and enables up to 40% faster cooking compared to conventional ovens.

SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Remove any packaging materials, stickers, or labels.
2. **Cleaning:** Before first use, clean the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. Wipe the interior and exterior of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place the appliance against a wall or other appliances.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. **Prepare Food:** Place your ingredients into one or both cooking baskets. Do not overfill the baskets.
2. **Insert Baskets:** Slide the cooking baskets firmly back into the appliance.
3. **Power On:** The appliance will power on when plugged in. The digital display will illuminate.
4. **Select Zone:** Press the '1' or '2' button on the control panel to select the desired cooking zone.
5. **Adjust Temperature:** Use the temperature controls (+/-) to set the desired cooking temperature (e.g., 200°C).
6. **Adjust Time:** Use the time controls (+/-) to set the desired cooking time.
7. **Start Cooking:** Press the 'Start/Stop' button to begin the cooking process.
8. **Shake/Flip (Optional):** For even cooking, some foods may require shaking or flipping halfway through the cooking time. The appliance may beep to remind you. Carefully remove the basket, shake/flip, and reinsert.
9. **Finish Cooking:** The appliance will beep when the cooking time is complete. Carefully pull out the baskets and remove the food.
10. **Power Off:** Unplug the appliance from the wall outlet after use.

Dual Zone Cooking (Sync Mode)

The Dual Easy Fry Essential allows you to cook two different foods at different temperatures and times, ensuring they finish simultaneously.

1. **Prepare Food:** Place different ingredients into each cooking basket.
2. **Set Zone 1:** Select zone '1', set its temperature and time.
3. **Set Zone 2:** Select zone '2', set its temperature and time.
4. **Activate Sync:** Press the 'SYNC' button. The appliance will automatically adjust the cooking times so both zones finish at the same moment.
5. **Start Cooking:** Press the 'Start/Stop' button to begin.
6. **Monitor Progress:** The display will show the remaining time for each zone.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Baskets and Crisper Plates:** The cooking baskets and crisper plates are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. Do not use abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior with a damp cloth.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a working electrical outlet.
Food is not cooked evenly.	Baskets are overfilled; food not shaken/flipped.	Do not overfill baskets. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty ingredients.	Clean the baskets and interior thoroughly. Reduce the amount of oil used or drain excess fat from ingredients.
Appliance smells during first use.	Normal for new appliances.	This is normal and will dissipate after a few uses. Ensure good ventilation.

SPECIFICATIONS

Brand: Tefal

Model Number: EY901N10

Product Dimensions (L x W x H): 43.5 x 47.5 x 34 cm

Item Weight: 11 Kilograms

Material: Plastic

Capacity: 8.3 Liters (total)

Features: Fat-free cooking, frying, grilling, roasting, automatic shut-off, non-slip feet.

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contacts is not available in this manual. Please refer to the warranty card included with your product or visit the official Tefal website for detailed information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question