



[Manuals.plus](#) /

> [HEVIRGO](#) /

> Lawn Mower, 1600W Powerful Electric, Walk-Behind String Trimmer, Self Propelled Lawn Mower, Cordless Push Lawn Mowers with Upgraded Brushless Motor and 30L Grass Tank US

HEVIRGO B0DWZXJF8R

User Manual

HEVIRGO 1600W ELECTRIC CORDLESS PUSH LAWN MOWER

Model: B0DWZXJF8R

Introduction

Thank you for choosing the HEVIRGO 1600W Electric Cordless Push Lawn Mower. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new lawn mower. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1: The HEVIRGO 1600W Electric Cordless Push Lawn Mower, including the main unit, battery, and charger.

Safety Information

WARNING: Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not attempt to override the operation of the start button or bail switch.
- Do not tilt the machine when starting it.
- Keep hands and feet away from or below the turning parts.
- Ensure the discharge container is clean and properly attached.
- Avoid cutting wet grass, as it can be slippery and clog the mower.
- Always wear appropriate personal protective equipment, including eye protection and sturdy footwear.
- Before performing any maintenance or cleaning, ensure the mower is turned off and the battery is removed.

Package Contents

Verify that all items are present in the package:

- 1 x Lawn Mower Unit
- 1 x User Manual (this document)
- 1 x Charger
- (Battery may be included or sold separately, refer to product packaging)

Setup

Follow these steps to assemble and prepare your lawn mower for first use:

1. **Handle Assembly:** Attach the handle sections to the main mower body. Ensure all knobs and fasteners are securely tightened. The handle is designed to be foldable for compact storage.
2. **Grass Collection Box Assembly:** Assemble the 30L grass collection box if it comes in multiple pieces, then securely attach it to the rear of the mower.
3. **Battery Installation:** Locate the battery compartment, typically near the top or rear of the mower. Insert the charged battery firmly until it clicks into place. Ensure the battery is fully charged before first use.
4. **Charging the Battery:** Connect the charger to a standard power outlet and then to the battery. Allow 4 hours for a full charge.



Figure 2: Key components of the lawn mower, illustrating the location of the start switch, handle, and grass box.

Large-capacity lithium battery



Figure 3: The battery compartment, designed for large-capacity lithium batteries.

Operating Instructions

Before operating, ensure the area is clear of debris and obstacles. Wear appropriate safety gear.

1. **Starting the Mower:** Press and hold the start button, then engage the bail switch (handle lever). Release the start button once the mower begins operating.
2. **Adjusting Cutting Height:** The mower features a single lever with 3 positions for height adjustment, ranging from 25mm to 65mm. Adjust the height according to your lawn conditions and desired grass length. Higher blade height is recommended for new or thick grass.
3. **Mowing Technique:** Push the mower at a steady pace. For optimal results, overlap each pass slightly. The 360-degree blade design ensures full coverage cutting.
4. **Stopping the Mower:** Release the bail switch to stop the motor.

1600W

Push the lawn mower

Multi-function walk-behind lawn mower



Figure 4: User demonstrating the operation of the 1600W push lawn mower.

Freely adjust the mowing height

Adjust the height of the chassis according to the lawn conditions



Figure 5: Illustration of the three-level height adjustment mechanism for the cutting deck.

High-quality blades

The blades are made of high-grade alloys
for ultra-high hardness, sharpness, and extra durability.



Figure 6: Visual comparison of a lawn before and after trimming, demonstrating the mower's effectiveness.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Cleaning:** Clean the bottom of the mower deck after each use. Remove grass clippings, leaves, dirt, and other debris. Use a brush or cloth; avoid using water directly on electrical components.
- **Blade Inspection:** Periodically inspect the blades for sharpness and damage. Sharp blades are crucial for efficient cutting. Replace blades if they are dull, bent, or cracked.
- **Grass Box:** Empty the 30L grass collection box regularly to prevent clogging and maintain efficient collection. Clean it as needed.
- **Storage:** Store the mower in a dry, protected area. The ergonomic foldable handle allows for compact storage. Ensure the battery is removed if storing for extended periods.

Grass collection box capacity: 30L



Figure 7: The 30L grass collection box, designed for efficient grass collection.

Troubleshooting

This section addresses common issues you might encounter with your lawn mower.

Problem	Possible Cause	Solution
Mower does not start	Battery not charged or improperly installed; Safety switch not engaged.	Ensure battery is fully charged and correctly inserted. Engage both the start button and bail switch simultaneously.
Poor cutting performance	Dull or damaged blade; Mowing wet grass; Grass box full.	Inspect and sharpen/replace blade. Avoid mowing wet grass. Empty grass collection box.

Problem	Possible Cause	Solution
Excessive vibration	Bent or unbalanced blade; Debris caught in blade area.	Check blade for damage and balance. Clear any debris from under the deck. If vibration persists, contact customer support.

Specifications

Technical specifications for the HEVIRGO 1600W Electric Cordless Push Lawn Mower:

- **Brand:** HEVIRGO
- **Model:** B0DWZXJF8R
- **Motor Power:** 1600W
- **Working Speed:** 3600 RPM
- **Maximum Cutting Diameter:** 32 cm (12.6 inches)
- **Adjustable Height:** Three positions (25mm, 45mm, 65mm)
- **Grass Box Capacity:** 30 Liters
- **Working Time:** Approximately 2 Hours (per charge)
- **Charging Time:** Approximately 4 Hours
- **Material:** Plastic (body), Alloy (blades)
- **Item Weight:** 8.8 kg (19.4 pounds)
- **Product Dimensions:** 90cm (L) x 90cm (W) x 33cm (H) / 35.43" (L) x 35.43" (W) x 12.99" (H)



Material	Blade size	power	rotate speed	height	Straw box capacity	Product dimensions	Product weight
plastics	12.6in	1600W	3600RPM	Three gears 9.8X17.7X25.5in	30L	35.4X13.0X35.4in	8KG

Figure 8: Detailed specifications and dimensions of the lawn mower.

Warranty and Support

For warranty information, technical support, or to order replacement parts, please contact HEVIRGO customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Online Support: Visit the official HEVIRGO website for FAQs and support resources.

Customer Service: [Insert Customer Service Contact Information Here, if available from product packaging or official website]