

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nintendo](#) /

› [Nintendo Switch 2 User Manual \(Japanese Language System\)](#)

Nintendo Switch 2

Nintendo Switch 2 User Manual

Model: Switch 2

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Nintendo Switch 2 console. Please read this manual thoroughly before using the product and retain it for future reference. This product is designed for use in Japan and supports the Japanese language only.

PACKAGE CONTENTS

Verify that all the following items are included in your package:

- Nintendo Switch 2 Console
- Joy-Con 2 (L) Light Blue
- Joy-Con 2 (R) Light Red
- Nintendo Switch 2 Dock
- Joy-Con 2 Grip
- Nintendo Switch 2 AC Adapter
- USB-C Charging Cable
- Joy-Con 2 Straps (x2)
- Ultra High-Speed HDMI Cable



Image: The Nintendo Switch 2 retail box, displaying the console, Joy-Cons, and dock. This image illustrates the complete package contents.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not expose the console or accessories to water or excessive moisture.
- Avoid extreme temperatures, direct sunlight, or dusty environments.
- Use only the provided AC adapter and cables.
- Keep the console and accessories out of reach of small children.
- If the product is damaged, discontinue use and contact customer support.
- Take regular breaks during gameplay to avoid eye strain and fatigue.

SETUP

1. Initial Charging

Before first use, fully charge the Nintendo Switch 2 console and Joy-Con controllers. Connect the Nintendo Switch 2 AC Adapter to the console or the dock, then plug it into a wall outlet.

2. Attaching Joy-Cons

Slide the Joy-Con controllers onto the sides of the console until you hear a click. Ensure the L (left) Joy-Con is attached to the left side and the R (right) Joy-Con to the right side.



Image: The Nintendo Switch 2 console with the Light Blue (L) and Light Red (R) Joy-Con controllers securely attached to its sides.

3. Connecting to a TV (TV Mode)

1. Open the back cover of the Nintendo Switch 2 Dock.
2. Connect the Ultra High-Speed HDMI Cable from the dock's HDMI OUT port to an HDMI input on your TV.
3. Connect the Nintendo Switch 2 AC Adapter to the dock's AC adapter port, then plug it into a wall outlet.
4. Place the Nintendo Switch 2 console into the dock, ensuring the screen faces forward.
5. Select the correct HDMI input on your TV.



Image: The Nintendo Switch 2 console is shown inserted into its black dock, ready for TV mode gameplay.

4. Initial System Setup

Upon powering on for the first time, follow the on-screen prompts to configure settings such as language, time zone, and internet connection. Please note that this product supports only the Japanese language, and only Nintendo Accounts with the region set to Japan can be linked.

OPERATING INSTRUCTIONS

Handheld Mode

With the Joy-Cons attached, the console functions as a portable gaming device. Use the touchscreen or Joy-Con controls to navigate menus and play games.

TV Mode

When docked, the console outputs video and audio to your connected TV. Detach the Joy-Cons and use them wirelessly, or attach them to the Joy-Con Grip for a traditional controller experience.

Charging

The console and Joy-Cons can be charged by connecting the AC adapter directly to the console or by placing the console in the dock while the dock is connected to the AC adapter.

Software Usage

Software can be purchased digitally via the Nintendo eShop or physically via game cards. Please note that software purchased from the Nintendo eShop is restricted to titles available for the Japanese region.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the console and controllers. Do not use liquid cleaners or solvents.
- Storage:** Store the console in a cool, dry place away from direct sunlight when not in use.
- Battery Care:** To maintain battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% every six months.

TROUBLESHOOTING

Console does not power on:

Ensure the AC adapter is securely connected to the console or dock and plugged into a working power outlet. Allow the console to charge for at least 30 minutes before attempting to power it on again.

No display on TV:

Verify that the HDMI cable is correctly connected between the dock and the TV. Ensure the TV is set to the correct HDMI input. Check that the console is properly seated in the dock and the dock's power indicator is lit.

Joy-Cons not responding:

Ensure the Joy-Cons are charged. If used wirelessly, ensure they are paired with the console. Re-attach them to the console to re-sync if necessary.

SPECIFICATIONS

Product Model Number	4902370553024 (BEE-S-KB6CA)
Battery	3 Lithium Ion Batteries (included)
Package Dimensions	22.3 x 21.8 x 10.7 cm
Package Weight	1.57 kg
Release Date	2025/06/05

WARRANTY AND SUPPORT

Warranty information is typically provided with your product purchase. For specific warranty details, please refer to the

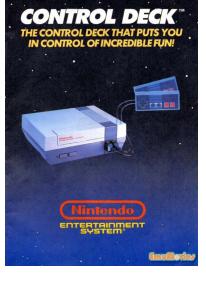
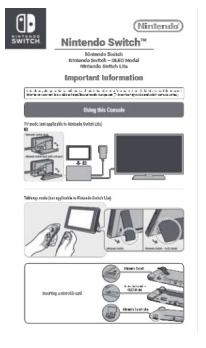
documentation included in your product packaging or visit the official Nintendo support website for your region. For technical assistance or further inquiries, please contact Nintendo customer support.

IMPORTANT REGIONAL INFORMATION

Please be aware of the following regional restrictions for the Nintendo Switch 2:

- This product is a Japanese language and domestic-use only product.
- The only language that can be used on the console is Japanese.
- Only Nintendo Accounts with the "Country/Region" setting set to "Japan" can be linked.
- Software available for purchase on the "Nintendo eShop" is limited to titles targeting the Japanese region.

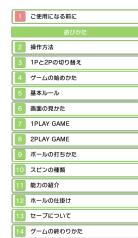
Related Documents - Switch 2

	<p><u>Nintendo Switch 2 Mario Kart World Bundle: მომხმარებლის სახელმძღვანელო და უსაფრთხოების ინფორმაცია</u></p> <p>Nintendo Switch 2 Mario Kart World Bundle-ის ყოვლისმომცველი მომხმარებლის სახელმძღვანელო და უსაფრთხოების ინფორმაცია, რომელიც მოიცავს დაყენებას, გამოყენებას, უსაფრთხოების ზომებს, გარანტიას და ტექნიკურ მახასიათებლებს.</p>
	<p><u>Nintendo Switch 2 Dock Set: Health and Safety Information</u></p> <p>Official health, safety, and usage guidelines for the Nintendo Switch 2 Dock Set, including AC adapter specifications, electrical safety warnings, careful usage instructions, and disposal information.</p>
	<p><u>Nintendo Entertainment System (NES) Instruction Manual and Warranty Information</u></p> <p>Official instruction manual and warranty information for the Nintendo Entertainment System (NES), covering setup, operation, troubleshooting, and parts ordering. Learn how to connect your NES, play games, and understand warranty terms.</p>
	<p><u>Nintendo Switch, Switch OLED Model, and Switch Lite: Important Information and Specifications</u></p> <p>Comprehensive guide to Nintendo Switch, Nintendo Switch OLED Model, and Nintendo Switch Lite consoles, covering setup, safety, parental controls, warranty, and technical specifications.</p>



[Nintendo Switch™ 2 Joy-Con™ 2 - Health and Safety Guide](#)

Comprehensive health, safety, and usage guide for the Nintendo Switch™ 2 Joy-Con™ 2, including warnings, careful usage instructions, activation/deactivation of wireless features, disposal information, and technical specifications.



[Kirby Bowl \(KTR-N-UAWJ-00\) - Official Game Manual](#)

Official game manual for Kirby Bowl (KTR-N-UAWJ-00) on Nintendo 3DS, detailing gameplay, controls, rules, and features. Learn how to play, master abilities, and navigate game modes.