

[Manuals.plus](#) /

› [Claiks](#) /

› CLAIKS Electric Ceiling TV Mount CL-TVS User Manual

Claiks CL-TVS

CLAIKS Electric Ceiling TV Mount CL-TVS User Manual

Model: CL-TVS

INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your CLAIKS Electric Ceiling TV Mount, Model CL-TVS. This motorized flip-down bracket is designed to securely hold 32 to 70-inch flat and curved screens, offering convenient remote-controlled viewing angle adjustments.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before installation and use. Failure to follow these instructions may result in property damage, serious injury, or death.

- Ensure the mounting surface can support the combined weight of the mount and your television.
- Do not exceed the maximum weight capacity of 99 lbs (45 kg).
- Always use appropriate safety equipment during installation.
- Consult a qualified professional if you are unsure about the installation process or ceiling structure.
- Keep children and pets away from the installation area.
- Do not attempt to modify the mount.
- Disconnect power before performing any maintenance or adjustments.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer support.

- Electric Ceiling TV Mount Assembly
- Remote Control (batteries not included)
- Mounting Hardware Kit (screws, anchors, washers)
- TV Mounting Brackets
- Installation Template
- User Manual

SPECIFICATIONS

Model Number	CL-TVS
Mounting Type	Ceiling Mount
Compatible TV Sizes	32 to 70 inches
Maximum Load Capacity	99 lbs (45 kg)
VESA Compatibility	200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm, 600x400mm, 200x400mm
Tilt Angle Range	0-75 degrees
Screen Leveling Adjustment	±2 degrees
Material	Metal
Color	Black

Note: Specifications are subject to change without notice.

SETUP AND INSTALLATION

Follow these steps carefully to install your CLAIKS Electric Ceiling TV Mount. It is recommended to have at least two people for installation.

1. Prepare the Mounting Area

Identify the ideal location on your ceiling. This mount is compatible with both flat and pitched roofs. Ensure the ceiling structure is suitable for mounting and can support the weight. The mount is suitable for wood and concrete ceilings. **Note: Not for ceilings with dual studs.**




Image: The mount is designed for installation on both wood and concrete ceiling types. Ensure your ceiling structure is appropriate for secure mounting.

2. Mount Dimensions and VESA Compatibility

Before drilling, review the mount dimensions and ensure your TV's VESA pattern is compatible. The mount supports VESA patterns including 200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm, 600x400mm, and 200x400mm. For 55", 65", and 70" TVs, ensure to center the VESA holes.

TIPS: FOR 55", 65", AND 70" TVS,
CENTER THE VESA HOLES.

TV Mount Dimensions

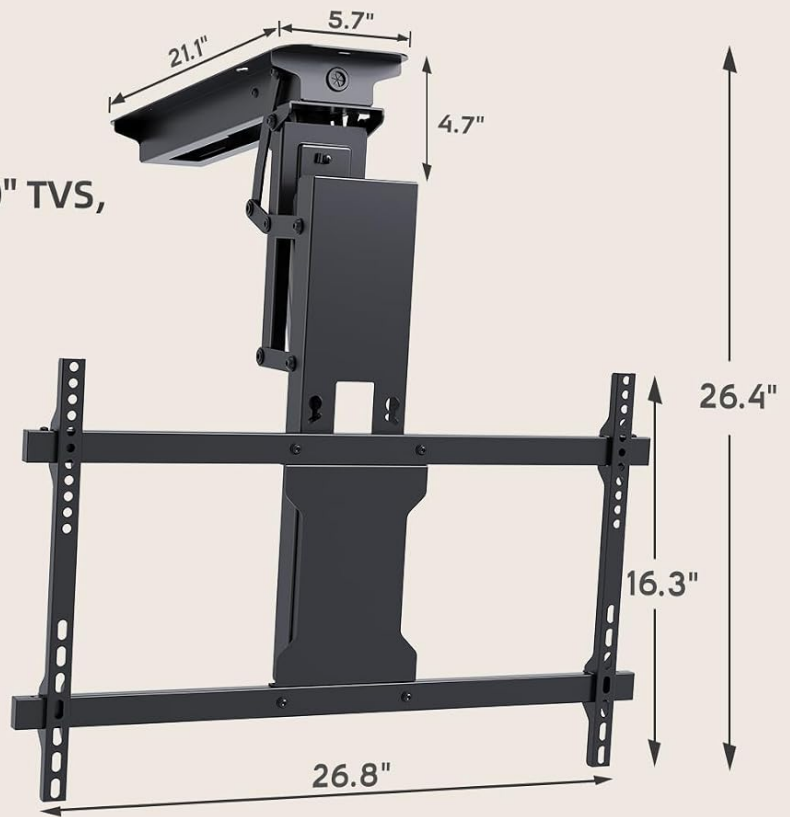

VESA

200X100MM, 200X200MM, 200X400MM, 300X200MM,
300X300MM, 400X200MM, 400X300MM, 400X400MM, 600X400MM,

Image: Detailed diagram illustrating the physical dimensions of the TV mount and supported VESA patterns. This helps in pre-installation planning and ensuring compatibility with your television.

3. Attach TV Brackets

Attach the TV mounting brackets to the back of your television using the provided hardware. Ensure the brackets are securely fastened and aligned with your TV's VESA holes. This mount is compatible with 32-70 inch TVs and can support up to 99 lbs.

Fits TVs 32"-70", Max Load 99lbs

High Load-bearing Capacity for Multiple TV Sizes



Image: The electric ceiling TV mount securely holding a large television, demonstrating its compatibility with TVs ranging from 32 to 70 inches and its robust 99 lbs load capacity.

4. Mount to Ceiling and Connect Power

Use the installation template to mark drilling points on the ceiling. Securely fasten the main mount assembly to the ceiling using appropriate anchors and screws for your ceiling type. Once the mount is secure, carefully lift and attach the TV (with brackets) to the mount. Connect the power cable to a suitable electrical outlet.

OPERATING INSTRUCTIONS

Your CLAIKS Electric Ceiling TV Mount is operated using the included remote control.

1. Remote Control Operation

Insert batteries (not included) into the remote control. Point the remote control towards the mount's receiver. Use the designated buttons to raise or lower the television. The remote allows for precise control over the mount's movement.

Remote Control



Image: A hand holding the remote control, demonstrating its use to adjust the position of the electric ceiling TV mount. The remote allows for convenient operation from a distance.

2. Adjusting Viewing Angle

The mount offers a motorized tilt range of 0 to 75 degrees, allowing you to find the optimal viewing position. Additionally, a ± 2 degree leveling adjustment is available to ensure your screen is perfectly horizontal. All adjustments are made via the remote control.

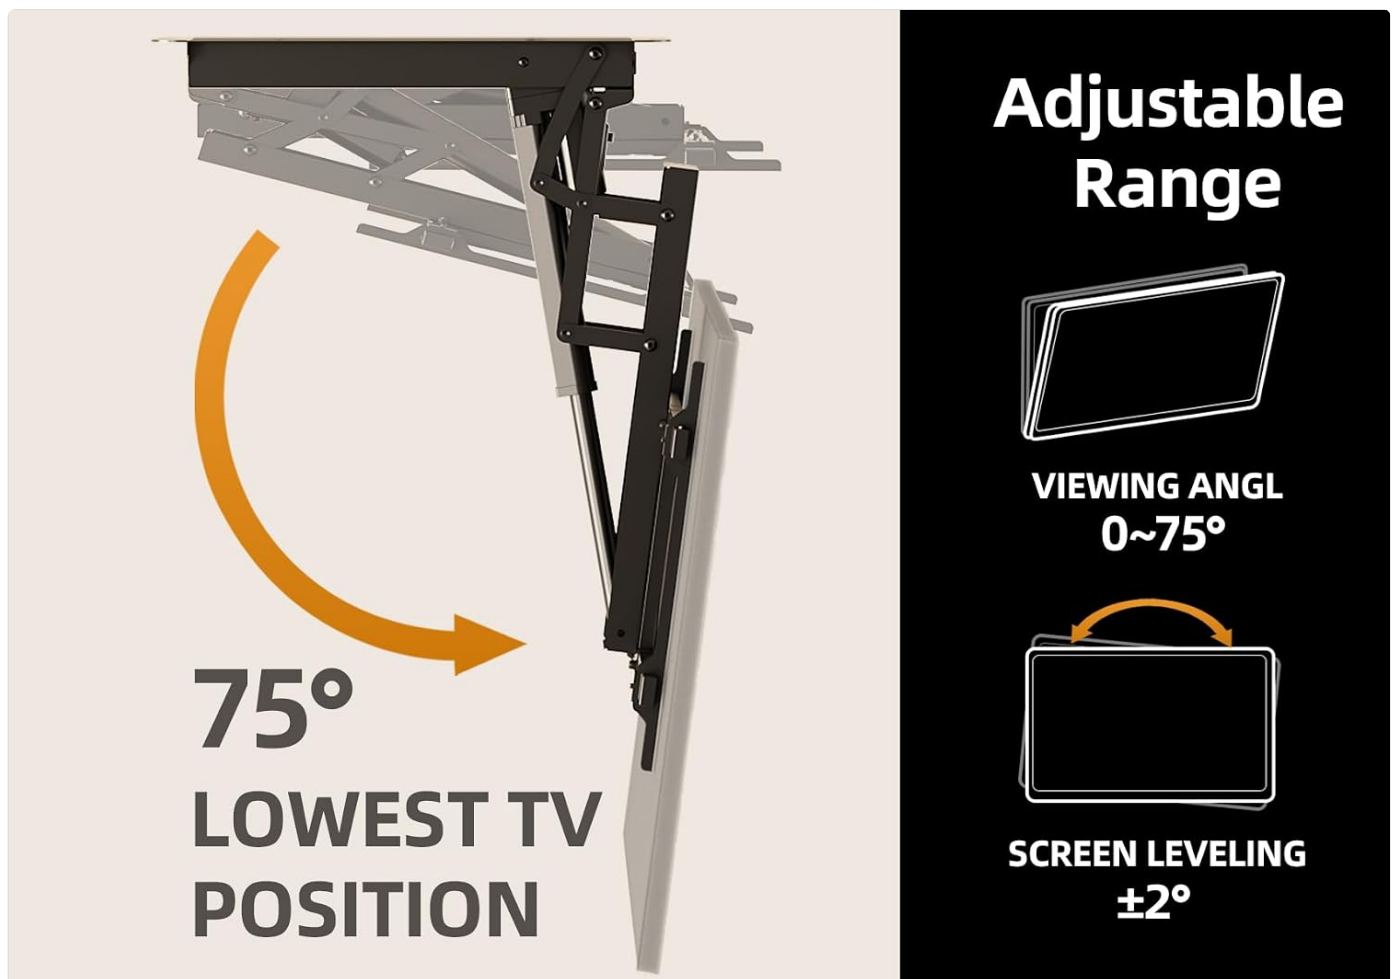


Image: A visual representation of the mount's adjustable range, highlighting the 0-75 degree tilt capability and the ± 2 degree screen leveling feature for customized viewing.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they are tight and secure.
- **Motor:** The motorized mechanism is designed for maintenance-free operation. Do not attempt to lubricate or disassemble the motor.
- **Cables:** Ensure all cables connected to the TV and mount are not pinched or stressed during movement.

TROUBLESHOOTING

If you encounter issues with your CLAIKS Electric Ceiling TV Mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mount does not move.	No power; Remote control batteries are dead; Remote not paired; Wiring issue.	Check power connection to the mount. Replace remote control batteries. Refer to remote pairing instructions (if applicable). Inspect wiring for loose connections.

Problem	Possible Cause	Solution
Mount is noisy during operation.	Normal operation sound; Loose components.	A slight motor sound is normal. Check all mounting screws and TV bracket screws for tightness.
TV is not level.	Needs adjustment.	Use the remote control's leveling adjustment feature (± 2 degrees) to fine-tune the screen's horizontal position.
Mount stops working unexpectedly.	Power interruption; Overload; Internal fault.	Check power supply. Ensure TV weight does not exceed 99 lbs. Disconnect power for 5 minutes, then reconnect. If the problem persists, contact customer support.

WARRANTY AND CUSTOMER SUPPORT

CLAIKS products are designed for quality and reliability. For warranty information or technical assistance, please refer to the warranty card included with your product or visit the official CLAIKS website. You may also contact our customer support team directly for any inquiries or issues.

Contact Information: Please refer to your purchase documentation or the CLAIKS brand store for the most current contact details.