

## BZ\_PANASONIC-1720

# Generic RM-1720 Viera Tool Remote Control User Manual

Model: BZ\_PANASONIC-1720

## 1. INTRODUCTION

---

This manual provides instructions for the Generic RM-1720 Viera Tool Remote Control, designed for use with Panasonic LED LCD TVs. Please read this manual carefully before using the remote control to ensure proper operation and longevity of the device.

**Important: Before use, ensure your existing remote control matches the appearance of the RM-1720 to confirm compatibility. This remote is a generic replacement and may not be compatible with all Panasonic TV models.**

# OLD REMOTE MUST BE SAME



This image illustrates the importance of comparing your current remote control with the RM-1720 to ensure compatibility. The text 'OLD REMOTE MUST BE SAME' highlights this crucial step.

## 2. PRODUCT FEATURES

---

- **Ergonomic & Lightweight Design:** Comfortable grip for effortless control.
- **Responsive & Durable Buttons:** Fast response time for a smooth user experience.
- **Pre-Programmed & Easy to Set Up:** Simple pairing process for hassle-free use.
- **Long Battery Life:** Energy-efficient design for extended usage.
- **Strong Signal Range:** Works from a distance with excellent connectivity.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

## 3.2 Compatibility and Initial Use

This remote control is pre-programmed and generally requires no additional setup for compatible Panasonic LED LCD TVs. Simply insert the batteries and point the remote towards your TV.

Ensure the remote control is pointed directly at the TV's infrared receiver. If the remote does not respond, verify battery installation and check for any obstructions between the remote and the TV.

## 4. OPERATING INSTRUCTIONS

### 4.1 Button Functions

The RM-1720 remote control features a standard layout for easy navigation of your Panasonic LED LCD TV. Refer to the image below for button identification.



This image displays the full layout of the RM-1720 remote control, including power, input, channel, volume, number keys, menu, guide, and media control buttons.

- **POWER:** Turns the TV on or off.
- **INPUT / TV / AV:** Selects the input source (e.g., HDMI, AV, TV tuner).
- **GUIDE:** Displays the electronic program guide.
- **MENU:** Accesses the TV's main menu.
- **OK:** Confirms selections within menus.

- **RETURN / EXIT:** Navigates back or exits current menu/screen.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Buttons (0-9):** Directly selects channels.
- **INFO:** Displays information about the current program.
- **TEXT / STTL / INDEX / HOLD** Functions related to teletext or specific TV features.
- **Media Control Buttons** (Play, Pause, Stop, Rewind, Fast Forward, Record): Controls media playback on compatible devices or TV functions.

## 5. MAINTENANCE

---

### 5.1 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries with new ones of the same type (AAA) to ensure consistent performance.

### 5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## 6. TROUBLESHOOTING

---

### 6.1 Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with correct polarity (+/-) and are not depleted. Replace with new batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 7 meters).
- **TV Power:** Confirm the TV is powered on and not in standby mode.

### 6.2 Intermittent Response

- **Battery Level:** Batteries may be low. Replace them with fresh ones.
- **Interference:** Other electronic devices (e.g., fluorescent lights, certain wireless devices) might be causing infrared interference. Move them away if possible.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Generic

Feature	Detail
Model	BZ_PANASONIC-1720
Compatible Devices	Television (Panasonic LED LCD TVs)
Special Feature	No Programming Required
Connector Type	Infrared
Material	Plastic
Number of Items	1
Country of Origin	India
Max Number of Supported Devices	1

## 8. WARRANTY AND SUPPORT

---

This product is a generic replacement remote control. For specific warranty information, please refer to the retailer or manufacturer's terms of sale at the time of purchase.

For technical support or inquiries regarding this remote control, please contact your point of purchase or the seller directly.