

## ECONTROLLY Replacement TV Remote Control

# ECONTROLLY Replacement TV Remote Control Instruction Manual

For Philips Smart Android/Google TV Models

## 1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ECONTROLLY Replacement TV Remote Control. This remote is designed to be compatible with a wide range of Philips Smart Android/Google TV models, offering a straightforward, infrared-based control solution without the need for complex programming.

Please read this manual thoroughly to ensure proper use and to maximize your experience with the remote control.

## 2. PRODUCT FEATURES

- **Infrared Technology:** Operates using standard infrared signals, ensuring broad compatibility with specified Philips TV models.
- **No Programming Required:** Ready to use directly out of the package; no setup or pairing process is needed for basic functions.
- **Dedicated App Buttons:** Features direct access buttons for popular streaming services like Netflix, YouTube, Google Play, and Tubi for quick navigation.
- **Comprehensive Control:** Includes all standard TV remote functions such as power, volume, channel, input selection, and navigation.
- **Durable Design:** Constructed from durable ABS material for longevity.







Figure 1 : Front view of the ECONTROLLY Replacement TV Remote Control, showcasing its layout and dedicated app buttons.

## 3. SETUP

---

### 3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

**Important: Do not use rechargeable batteries. Only AAA ALKALINE batteries are recommended for optimal performance and to prevent potential damage.**



Figure 2: Angled view of the remote control, showing its ergonomic design and button placement.

## 4. OPERATING INSTRUCTIONS

---

The ECONTROLLY Replacement TV Remote Control is designed for immediate use with compatible Philips Smart Android/Google TVs. No complex pairing or programming is required for its primary functions.

### 4.1. Basic Operation

- **Power Button (⏻):** Press to turn your TV on or off.
- **Navigation Pad (OK, Up, Down, Left, Right):** Use to navigate menus, select options, and browse content. The **OK** button confirms selections.
- **Volume Control (VOL +/-):** Adjusts the TV's volume level.
- **Channel Control (CH +/-):** Changes TV channels.
- **Input Button (INPUT):** Cycles through available input sources (HDMI, AV, etc.).

- **Mute Button** (⏸): Mutes or unmutes the TV audio.
- **Back Button** (←): Returns to the previous screen or menu.
- **Home Button** (⌂): Accesses the TV's home screen or main menu.
- **Guide Button (GUIDE)**: Opens the electronic program guide (EPG).
- **Options Button (OPTIONS)**: Displays context-sensitive options for the current screen.

## 4.2. Dedicated App Shortcuts

The remote features dedicated buttons for quick access to popular streaming applications:

- **NETFLIX**: Launches the Netflix application.
- **YouTube**: Launches the YouTube application.
- **Google Play**: Launches the Google Play Store or Google Play Movies & TV.
- **tubii**: Launches the Tubi application.



Figure 3: The remote control from an angle, clearly showing the dedicated app buttons for Netflix, YouTube, Google Play, and

### 4.3. Compatibility

This remote control is compatible with the following Philips Smart Android/Google TV models:

- 55PFL5704/F7, 55PUL7672/F7, 50PFL5766/F6, 43PFL5604/F7, 55PUL7552/F7, 65PFL5604/F7, 43PUL7652/F7, 55PFL5604/F7, 43PFL5766/F6
- 65PFL5504/F7, 50PUL7672/F7, 50PFL5704/F7, 50PUL7552/F7, 65PUL7672/F7, 65PUL7552/F7, 70PUL7553/F7, 75PFL5604/F7, 75PUL7552/F7
- 50PFL5604/F7, 43PUL7672/F7, 65PFL5704/F7, 55PFL5766/F6, 65PFL5766/F7, 65PFL5766/F6, 32PFL5505/F7, 50PFL5806/F7, 75PFL5704/F7, 55PFL5766/F7
- 43PFL5704/F7, 43PFL5766/F7, 50PFL5766/F7, 75PFL5604/F7A, 75PFL5604/F7E, 50PFL5604/F7A, 65PFL5604/F7A, 55PFL5604/F7A, 55PFL5766/F7E, 75PFL5704/F7A
- 70PUL7553, 65PUL7552, 50PFL5604, 65PFL5504, 75PUL7552, 65PUL7672, 50PFL5806, 75PFL5704, 50PFL5766, 43PFL5604, 55PFL5604, 65PFL5704, 43PFL5704, 43PFL5766, 65PFL5604, 55PFL5704, 75PFL5604, 55PFL5766, 75PFL5604A, 50PFL5704, 55PUL7672, 55PUL7552, 50PUL7672, 50PUL7552, 43PUL7672, 43PUL7652, 65PFL5766, 32PFL5505

If your TV model is not listed, please verify compatibility with the product listing or contact customer support.

Your browser does not support the video tag.

Video 1: An overview of the ECONTROLLY Replacement TV Remote Control, demonstrating its features and compatibility with Philips Smart TVs.

Your browser does not support the video tag.

Video 2: Demonstration of the ECONTROLLY Replacement TV Remote Control's quick response and durable design.

Your browser does not support the video tag.

Video 3: A detailed overview of the remote's layout and functionality.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with fresh AAA ALKALINE batteries.
- Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- Move closer to the TV to rule out range issues.

- **Specific buttons not working:**

- Verify that the button is clean and not stuck.
- Some advanced functions or voice control features may not be supported by this replacement remote if your original remote had them. This remote is an infrared replacement and does not feature voice control.

- **Interference:**

- Bright sunlight or strong artificial light sources can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

## 6. SPECIFICATIONS

---

|                                 |                                              |
|---------------------------------|----------------------------------------------|
| Brand                           | ECONTROLLY                                   |
| Product Dimensions              | 6.55 x 1.91 x 0.56 inches                    |
| Item Weight                     | 1.76 ounces                                  |
| Color                           | Black                                        |
| Special Feature                 | Pre Programmed                               |
| Max Number of Supported Devices | 1                                            |
| Compatible Devices              | Television (Philips Smart Android/Google TV) |



6.5 inch



Figure 4: Visual representation of the remote control's dimensions (6.5 inches length, 1.9 inches width).

## 7. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote becomes unresponsive or its range decreases, replace the batteries promptly. Remove batteries if the remote will not be used for an extended period to prevent leakage.

## 8. WARRANTY AND SUPPORT

---

Information regarding specific warranty terms and customer support contact details is not provided in the product description. For warranty inquiries or technical assistance, please refer to the original product packaging or contact the seller directly through the platform where the purchase was made.