

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Voice Replace Remote Control User Manual for FPD Canvas Series 4K UHD LED TV

ECONTROLLY B0DX1LTV7B

ECONTROLLY Voice Replace Remote Control User Manual

Model: B0DX1LTV7B

1. INTRODUCTION

Thank you for choosing the ECONTROLLY Voice Replace Remote Control. This manual provides essential instructions for setting up, operating, and maintaining your new remote control. This remote is designed to be compatible with various FPD Canvas Series 4K UHD LED TVs with Smart Google TV functionality.

Compatible TV Models:

- CG50-C3
- CG75-C3
- CG43-C3
- CG55-C1
- CA32-P3
- CA43-P3
- CG40-P3
- CG43-P3
- CG65-C3
- CG32-P3





Image 1.1: The ECONTROLLY Voice Replace Remote Control, a black remote with various buttons for TV operation and voice control.

2. SETUP

2.1 Battery Installation


The remote control requires AAA ALKALINE batteries for operation. Rechargeable batteries are not supported and should not be used. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2.2 Pairing the Remote Control

This remote control requires pairing with your FPD Canvas Series TV before use, especially for voice control functionality. Follow these steps to pair the remote:

1. Ensure your TV is powered on and functioning correctly.
2. Point the remote control towards your TV.
3. Simultaneously press and hold the **"Back"** button and the **"Home"** button for 3 seconds or more.
4. Release the buttons once a pairing confirmation message appears on your TV screen, or the remote's indicator light flashes.
5. Test the remote's functions to confirm successful pairing.

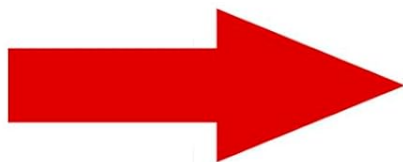

Our Replace Remote

Original Remote

Image 2.1: A visual comparison showing the ECONTROLLY remote on the left and a typical original remote on the right, highlighting the replacement nature.

3. OPERATING THE REMOTE CONTROL

This section outlines the basic functions and special features of your ECONTROLLY remote control.

3.1 Standard Functions

- **Power Button (Red):** Turns the TV on or off.
- **Volume Up/Down (+/- VOL):** Adjusts the TV's volume.
- **Channel Up/Down (P +/-):** Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's home screen or main menu.

- **Mute Button:** Mutes or unmutes the TV audio.
- **Netflix, YouTube, Prime Video, YouTube Music Buttons** Direct access to streaming applications.
- **Number Pad (0-9):** Direct channel input.

3.2 Voice Control Feature

The remote control includes a voice search function, allowing you to control your TV and search for content using voice commands. This feature requires successful pairing of the remote with your TV.

1. Press the **Microphone Button** (usually located near the center of the remote).
2. Speak clearly into the microphone located on the remote control.
3. Examples of commands include: "Open Netflix," "Search for action movies," "What's the weather like?"
4. The TV will process your command and respond accordingly.





Image 3.1: The remote control with a prominent microphone icon, indicating the voice control feature.



Image 3.2: A user holding the remote control, pointing it towards a television, demonstrating typical usage.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality, clean it regularly.

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always use new AAA ALKALINE batteries.

- Follow the battery installation steps outlined in Section 2.1.
- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding to TV.	Low or dead batteries, remote not paired, obstruction between remote and TV, remote out of range.	◦ Replace batteries with new AAA ALKALINE batteries. ◦ Ensure the remote is paired (refer to Section 2.2). ◦ Remove any obstructions between the remote and the TV's sensor. ◦ Move closer to the TV.
Voice control not working.	Remote not paired, microphone obstructed, TV settings.	◦ Ensure the remote is correctly paired (Section 2.2). ◦ Check if the microphone on the remote is clear of debris. ◦ Verify TV's voice control settings are enabled.
Buttons are sticky or unresponsive.	Dirt or liquid residue under buttons.	◦ Clean the remote control (refer to Section 4.1). ◦ Avoid spilling liquids on the remote.

6. SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY
Model Number (ASIN)	B0DX1LTV7B
Product Dimensions	7.15 x 1.87 x 0.56 inches
Item Weight	1.76 ounces
Color	Black
Special Feature	Voice Search
Max Number of Supported Devices	1
Compatible Devices	Television (FPD Canvas Series 4K UHD LED TV with Smart Google TV)
Power Source	2 x AAA ALKALINE Batteries (not included)



7.1 inch



Image 6.1: A visual representation of the remote control's dimensions, showing its length and width.

7. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support contacts for the ECONTROLLY Voice Replace Remote Control is not provided in the product details. For any issues or inquiries, please refer to the seller or the platform where the product was purchased.

© 2025 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DX1LTV7B>

More documents and user manuals: <https://manuals.plus/>