

[Manuals.plus](#) /

› [Xspeedonline](#) /

› Xspeedonline WB7X7189 Oven Door Handle End Cap Instruction Manual

Xspeedonline WB7X7189, 268078, AH256619

Xspeedonline WB7X7189 Oven Door Handle End Cap Instruction Manual

Model: WB7X7189, 268078, AH256619

Brand: Xspeedonline

PRODUCT OVERVIEW

This manual provides detailed instructions for the installation and use of the Xspeedonline WB7X7189 Oven Door Handle End Cap. This part is designed as a direct replacement for various GE oven models, ensuring a secure and functional fit for your appliance's oven door handle.



Image: Two Xspeedonline WB7X7189 Oven Door Handle End Caps. These white plastic caps are designed to fit the ends of an oven door handle, providing both aesthetic finish and structural support. The image displays both the exterior and the internal mounting points of the caps.

COMPATIBILITY

The WB7X7189 oven door handle end cap is compatible with a wide range of GE oven models. It replaces the following part numbers:

- WB7X7189
- 268078
- AH256619
- EA256619
- PS256619
- WB07X7189
- LP14789

Known compatible GE appliance models include, but are not limited to:

- JBP25GS1, JBP25GS2, JBP25GV1, JBP25GV2
- JBP26WT1, JBP26WV1, JBP26WV2
- JBP30WY1, JBP45WW1
- JBP46GIV1, JBP46GS1, JBP46GS2, JBP46GV1, JBP46GV2, JBP46GV3
- JBP56GS1, JBP56GS2

- JBP75WW1, JBP76GIV1, JBP76GS1, JBP76GS2, JBP76GV1, JBP76GV2, JBP76GV3
- JBS06GS1, JBS06GS2, JBS18GS1, JBS18GS2, JBS18GV1, JBS18GV2, JBS18GV3
- JBS27WW1, JBS27WW2
- JGBC17PEW1WH, JGBC17PEW2WH, JGBC18EV1WW, JGBC18EV2WW, JGBC18EV3WW, JGBC18EV4WW



Image: The Xspeedonline WB7X7189 oven door handle end caps displayed in a kitchen setting, demonstrating their intended use and compatibility with standard oven designs. These caps are designed to fit both the right and left sides of the oven door handle.

PRODUCT FEATURES AND QUALITY

The Xspeedonline oven door handle end caps are manufactured from high-quality, durable plastic. They are rigorously tested to ensure long-lasting and effective performance, providing a reliable replacement for your original or broken oven handle end caps. These parts are designed to meet or exceed the performance of original equipment manufacturer (OEM) parts.

OVEN DOOR HANDLE



Image: A detailed view of the Xspeedonline oven door handle end cap, emphasizing its robust construction and seamless integration with an oven handle. The image illustrates the quality of the material and design.

INSTALLATION (SETUP)

Replacing your oven door handle end cap is a straightforward process. Follow these steps carefully:

1. **Safety First:** Before beginning any repair, ensure your oven is completely cool and disconnected from its power source (unplugged or circuit breaker off) to prevent electrical shock or burns.
2. **Assess the Damage:** Identify which end cap needs replacement. If both are damaged, replace both.
3. **Remove Old End Cap:** Carefully inspect how the existing end cap is attached. Most end caps are either snapped into place or secured with small screws. Gently pry off or unscrew the old end cap. Be cautious not to damage the oven door or handle itself.
4. **Clean the Area:** Once the old cap is removed, clean any debris or residue from the handle and the door frame where the new cap will be installed.
5. **Install New End Cap:** Align the new Xspeedonline WB7X7189 end cap with the handle and the mounting points on the oven door. Apply firm, even pressure to snap it into place. If screws were used on the old cap, ensure the new

- cap has corresponding holes and secure it with appropriate screws (not included, typically reused from the old part).
6. **Verify Installation:** Gently tug on the newly installed end cap to ensure it is securely fastened and does not wobble.
 7. **Restore Power:** Once the installation is complete and verified, reconnect your oven to its power source.

If you encounter difficulty, it is recommended to consult a professional appliance technician.

SPECIFICATIONS

Product Specifications

Attribute	Detail
Part Numbers Replaced	WB7X7189, 268078, AH256619, EA256619, PS256619, WB07X7189, LP14789
Color	White
Material	High-quality Plastic
Item Weight	Approximately 1.76 ounces (per pair)
Dimensions (Approximate)	Length: 11.5 cm (4.5 in), Height: 4.5 cm (1.77 in), Width: 2.3 cm (0.9 in)

PRODUCT SIZE

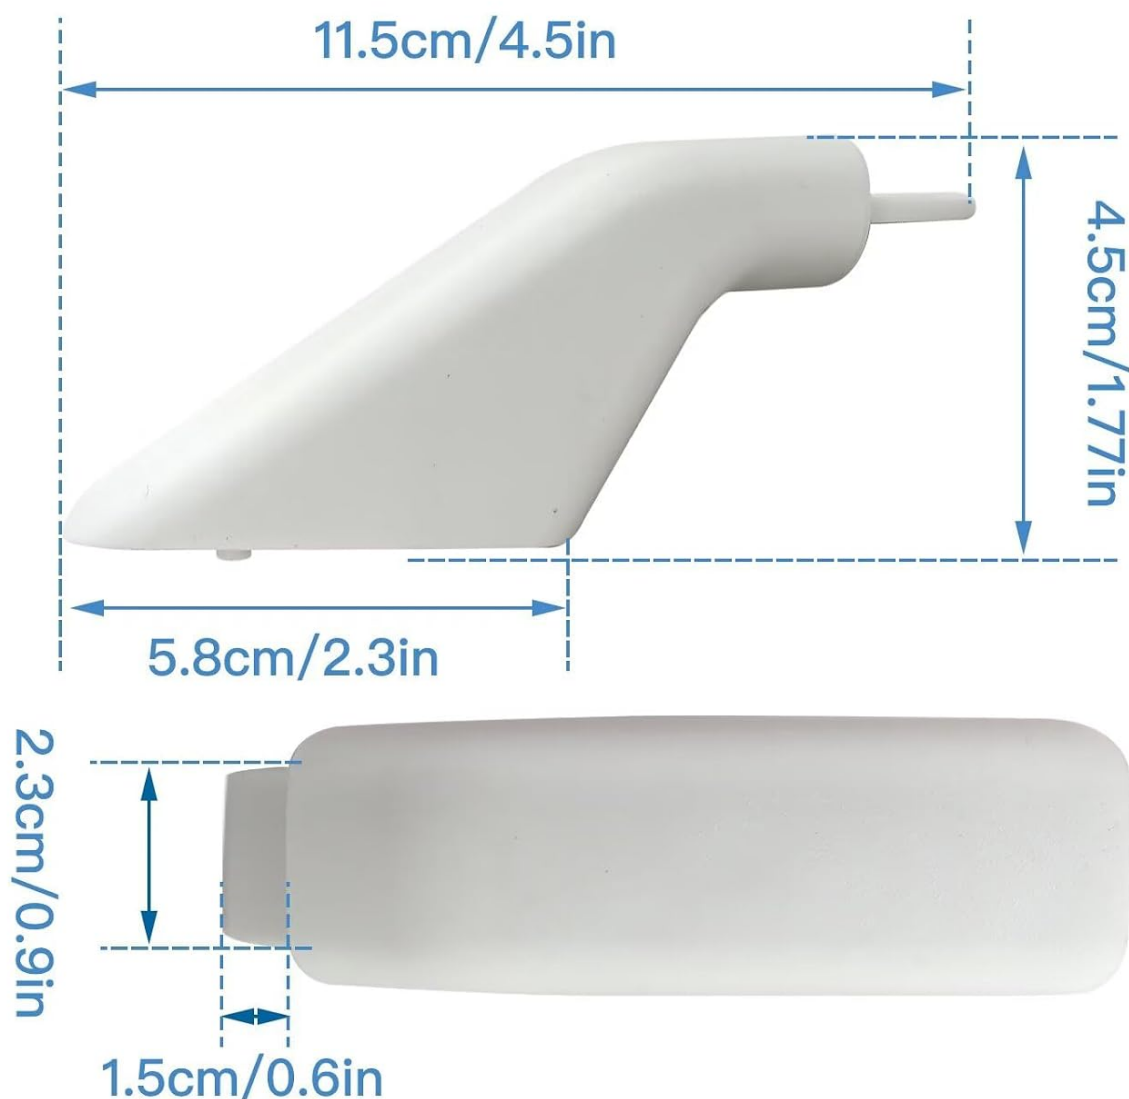


Image: A technical diagram illustrating the precise measurements of the Xspeedonline oven door handle end cap, including length, height, and width, provided in both centimeters and inches for accurate fitment.

TROUBLESHOOTING

Most issues related to the oven door handle end cap are installation-related. If you encounter problems, consider the following:

- **Cap Does Not Fit:** Double-check the model numbers of your oven against the compatibility list. Ensure you have the correct replacement part. Verify that no old plastic pieces or debris are obstructing the mounting points.
- **Cap Feels Loose:** Ensure the cap is fully seated and all clips or screws (if applicable) are properly engaged. Apply firm, even pressure during installation.
- **Damage During Installation:** If the new cap cracks or breaks during installation, it may indicate improper alignment or excessive force. Review the installation steps and ensure correct alignment before attempting again with a new part.

For persistent issues, contact customer support or a qualified technician.

WARRANTY INFORMATION

Specific warranty details for the Xspeedonline WB7X7189 Oven Door Handle End Cap are not provided in this manual. Please refer to the product packaging or contact the manufacturer directly for warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding the Xspeedonline WB7X7189 Oven Door Handle End Cap, please contact Xspeedonline customer service through their official website or the retailer from whom the product was purchased. Please have your product model number and purchase information ready when contacting support.

© 2025 Xspeedonline. All rights reserved.
This manual is for informational purposes only. Always follow safety precautions when performing appliance repairs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question