

Sakugi US651

Sakugi Gold Clothes Rack Instruction Manual

Model: US651

Brand: Sakugi

INTRODUCTION

Thank you for choosing the Sakugi Gold Clothes Rack. This multi-functional wardrobe closet is designed to provide versatile storage for your clothing, shoes, and accessories. Featuring sturdy metal construction, integrated shelves, and smooth-rolling wheels, it offers a practical and organized solution for bedrooms, laundry rooms, balconies, and entryways. Please read this manual carefully before assembly and use to ensure safe and optimal performance of your product.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the rack on a soft, clean surface to prevent scratches.
- Do not exceed the maximum weight recommendation of 300 pounds (136 kg). Distribute weight evenly.
- Keep small parts away from children during assembly to prevent choking hazards.
- Always lock the wheels when the rack is in a stationary position to prevent accidental movement.
- Avoid hanging excessively heavy items on a single hook or section to prevent imbalance.

PACKAGE CONTENTS

Please verify that all components listed below are included in your package.

- Metal Tubes (various lengths)
- Mesh Shelves
- Hanger Rods
- Hooks
- Universal Wheels (2 with brakes, 2 without)
- Connectors/Joints
- Assembly Tools (e.g., Allen wrench)
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Sakugi Gold Clothes Rack. It is recommended to have a clear, spacious area for assembly.

1. **Step 1: Attach Wheels to Base Frame.** Identify the bottom frame tubes. Insert the universal wheels into the designated holes at the bottom of the vertical support tubes. Ensure the two wheels with brakes are positioned on the same side for easier access. Tighten securely.
2. **Step 2: Assemble the Lower Section.** Connect the vertical support tubes to the horizontal base tubes using the provided connectors. Ensure all connections are firm.
3. **Step 3: Install Lower Mesh Shelf.** Slide the first mesh shelf onto the lower horizontal supports. Ensure it sits flush and is securely in place.
4. **Step 4: Attach Lower Hanger Rod.** Insert the lower hanger rod into the designated slots on the vertical support tubes, above the lower shelf.
5. **Step 5: Assemble the Middle Section.** Extend the vertical support tubes upwards by connecting additional tube segments.
6. **Step 6: Install Upper Mesh Shelf.** Slide the second mesh shelf onto the middle horizontal supports.
7. **Step 7: Attach Upper Hanger Rod.** Insert the upper hanger rod into the designated slots on the vertical support tubes, above the middle shelf.
8. **Step 8: Install Top Mesh Shelf.** Place the final mesh shelf on the uppermost horizontal supports.
9. **Step 9: Attach Hooks.** Secure the accessory hooks to the side vertical tubes as desired.
10. **Step 10: Final Check.** Verify that all connections are tight and the rack is stable.





Image: The assembled frame of the Sakugi Gold Clothes Rack, showing its two hanger rods, three mesh shelves, and four universal wheels. This image illustrates the basic structure before items are placed on it.

OPERATING INSTRUCTIONS

- **Loading Clothes:** Hang garments evenly across the hanger rods to maintain balance. Utilize the mesh shelves for folded clothes, shoes, or storage bins. Use the side hooks for bags, hats, or other accessories.
- **Moving the Rack:** To move the rack, unlock the two braked wheels by flipping their levers upwards. Gently push or pull the rack to its desired location.
- **Securing the Rack:** Once the rack is in position, press down the levers on the two braked wheels to lock them, preventing unintended movement.
- **Weight Distribution:** Distribute the weight of items as evenly as possible across the hanger rods and shelves to ensure stability and prevent tipping.





Image: The Sakugi Gold Clothes Rack in use, displaying a variety of clothes on hangers, folded items on shelves, and bags on side hooks. This demonstrates the rack's capacity and multi-functional storage capabilities.

MAINTENANCE

- **Cleaning:** Wipe down the metal frame and mesh shelves with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.
- **Wheel Care:** Keep the wheels free of debris to ensure smooth movement. If wheels become stiff, clean them and apply a small amount of silicone lubricant if needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly/unstable.	Loose connections; uneven weight distribution.	Ensure all screws and connectors are tightened. Redistribute items evenly across the rack.
Wheels do not roll smoothly.	Debris in wheels; wheels locked.	Check for and remove any debris. Ensure wheel brakes are disengaged.
Rack tips over.	Overloaded; uneven weight distribution.	Do not exceed the maximum weight capacity. Distribute weight evenly, placing heavier items on lower shelves.

SPECIFICATIONS

- **Model:** US651
- **Brand:** Sakugi
- **Color:** Gold
- **Material:** Alloy Steel
- **Product Dimensions (D x W x H):** 12.2" x 33.0" x 79.5" (31 cm x 83.8 cm x 201.9 cm)
- **Installation Type:** Free Standing
- **Number of Shelves:** 3
- **Maximum Weight Recommendation:** 300 Pounds (136 kg)
- **Item Weight:** 16.39 pounds (7.43 kg)
- **Assembly Required:** Yes

Detailed Dimensions

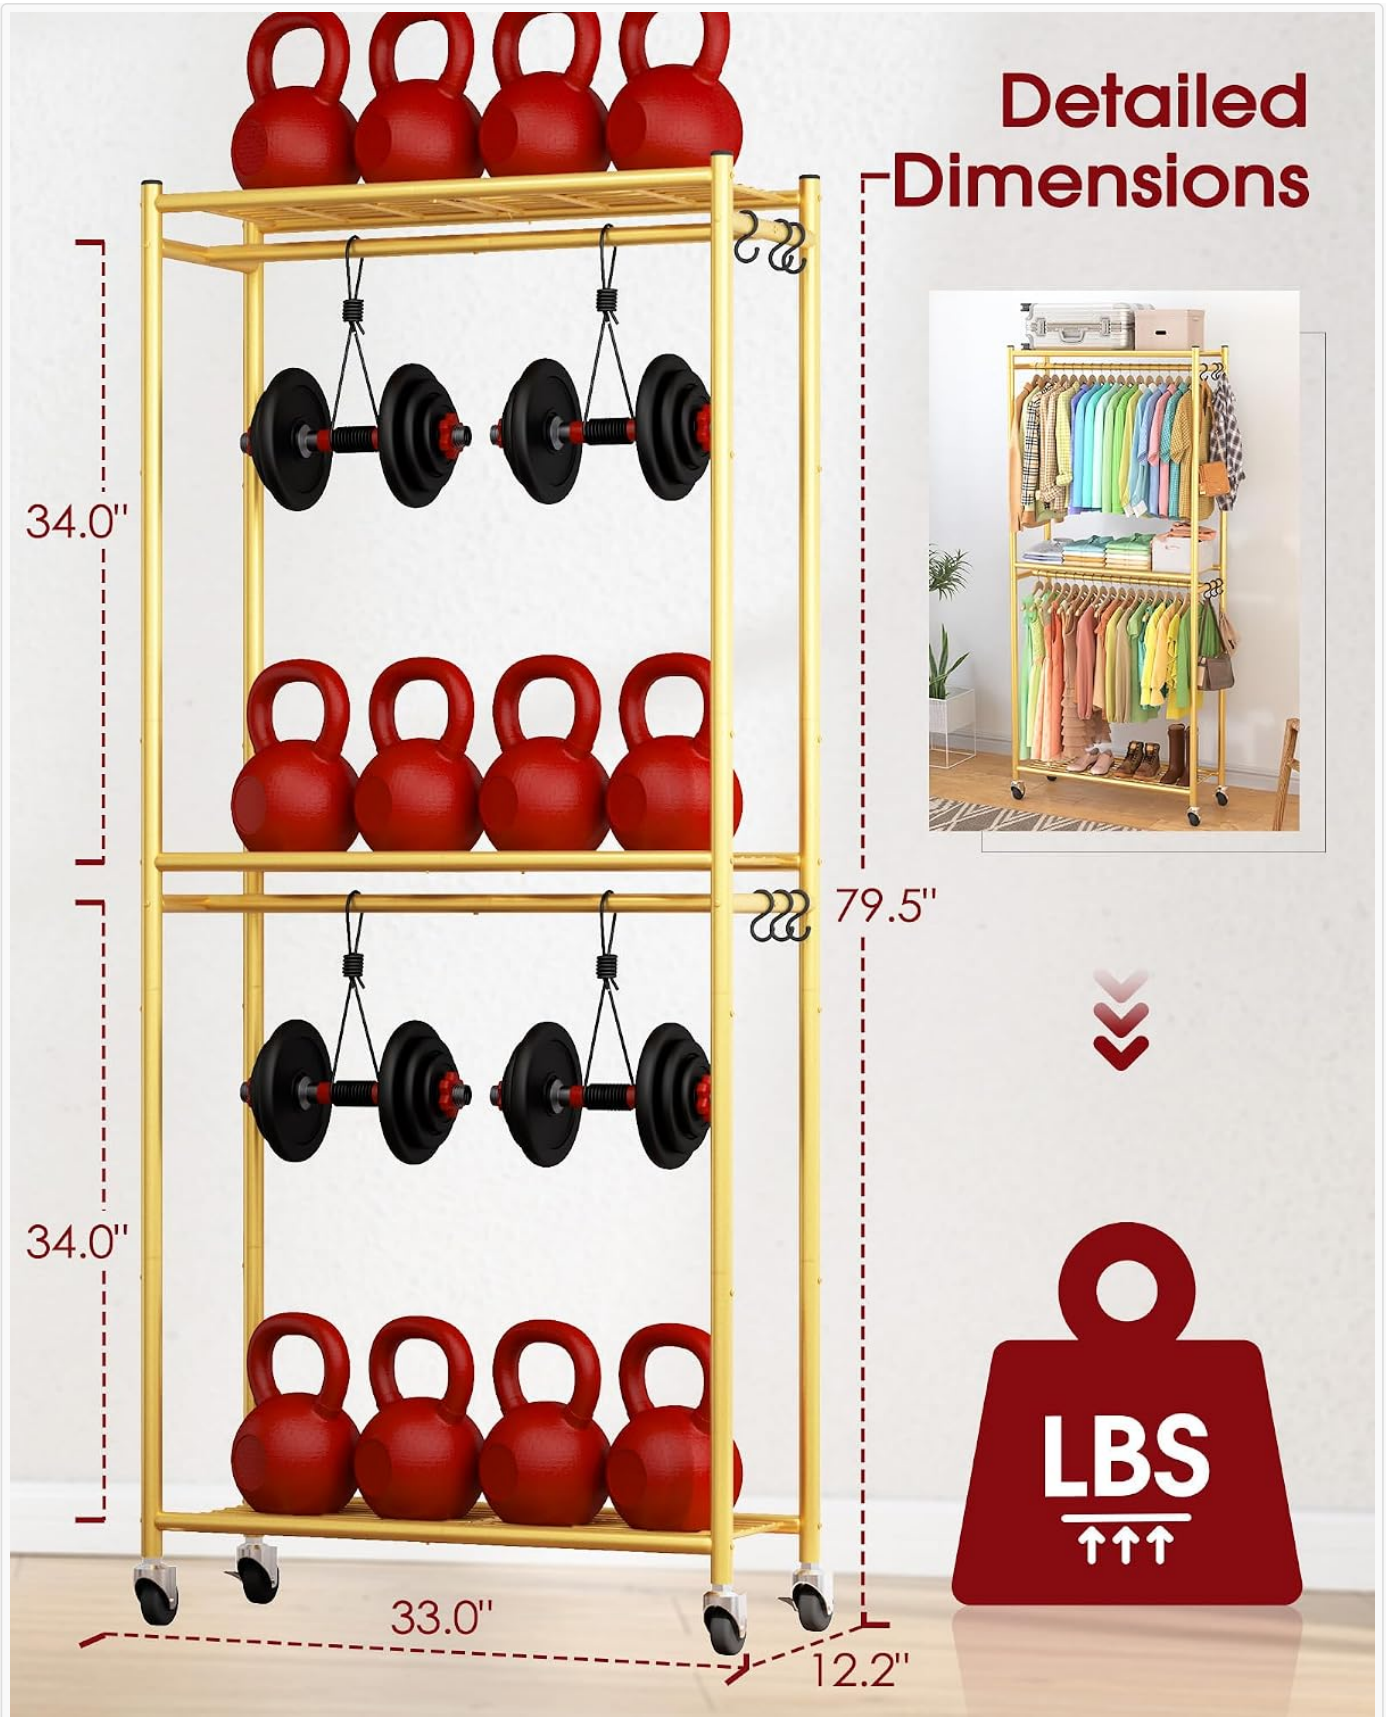


Image: A diagram illustrating the detailed dimensions of the Sakugi Gold Clothes Rack, including its overall height (79.5"), width (33.0"), and depth (12.2"). The image also shows the spacing between shelves and the load capacity.

CUSTOMER SUPPORT

For further assistance, missing parts, or inquiries regarding your Sakugi Gold Clothes Rack, please contact Sakugi customer service.

You can typically find contact information on the product packaging or the official Sakugi website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question