

ECONTROLLY N2QAYB000142

ECONTROLLY N2QAYB000142 Replacement Remote Control User Manual

Model: N2QAYB000142 | Brand: ECONTROLLY

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY N2QAYB000142 replacement remote control. This remote is designed to function as a direct replacement for the original remote control of compatible Panasonic CD Stereo Systems, offering seamless operation without the need for programming.

Please read this manual thoroughly before using the remote control to ensure proper setup and operation.

2. PRODUCT OVERVIEW





Figure 1: Front view of the N2QAYB000142 Remote Control. This image displays the layout of all buttons, including power, disc, number pad, volume, and various function keys.

The ECONTROLLY N2QAYB000142 is an infrared replacement remote control specifically designed for use with various Panasonic CD Stereo Systems. It is pre-programmed and ready to use directly out of the package after battery installation.

Key Features:

- **Direct Replacement:** Functions identically to the original Panasonic remote control.
- **No Programming Required:** Ready for immediate use upon battery insertion.
- **Infrared Technology:** Standard IR signal for reliable communication with your stereo system.

3. COMPATIBILITY

This remote control is compatible with the following Panasonic CD Stereo System models:

- SC-AK450
- SA-AK450
- SB-AK450
- SC-AK350
- SA-AK350
- SB-AK350
- SC-AK250
- SA-AK250
- SB-AK250

Please verify your stereo system's model number to ensure compatibility.

4. SETUP

4.1 Battery Installation

The remote control requires two (2) AA ALKALINE batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Do not use rechargeable batteries. Only use AA ALKALINE batteries for optimal performance and to prevent potential damage.



Figure 2: Angled view of the remote control. This perspective highlights the overall shape and button placement, useful for identifying the battery compartment on the reverse side.

5. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your Panasonic CD Stereo System. Ensure there are no obstructions between the remote and the stereo system.

5.1 Button Functions

Below is a general guide to the functions of the buttons on your N2QAYB000142 remote control. Specific functionality may vary slightly depending on your Panasonic CD Stereo System model.

Button	Function
--------	----------

Button	Function
(Power)	Turns the stereo system on or off.
SLEEP - AUTO OFF	Activates or adjusts the sleep timer function.
CLOCK/TIMER	Sets the clock or timer functions.
PLAY/REC	Initiates playback or recording (if applicable).
DISC	Selects the CD/Disc function.
1-9, 0, ≥10	Numeric keypad for direct track selection, radio station input, or other numerical entries.
PROGRAM	Enters program mode for CD tracks.
PLAY MODE	Changes CD playback modes (e.g., random, repeat).
REPEAT	Repeats current track or entire disc.
DEL	Deletes programmed tracks or entries.
SPACE!"#	Used for text input or special characters.
CD /II	Play/Pause for CD function.
CLEAR	Clears current selection or input.
TAPE	Selects the Tape function.
TUNER/BAND	Selects the Tuner function and switches between AM/FM bands.
EXT-IN	Selects the External Input source.
VOL - / + VOL	Decreases or increases the volume level.
ALBUM	Navigates between albums or folders.
V/REW / ^/FF	Rewind/Fast Forward or track skip.
ENTER	Confirms selections.
TITLE SEARCH	Initiates title search function.
MANUAL EQ	Adjusts equalizer settings manually.
DISPLAY	Changes display information on the stereo system.
DIMMER	Adjusts the brightness of the stereo system's display.
HARD BASS	Activates or deactivates enhanced bass.
PRESET EQ	Cycles through preset equalizer modes.
MUTING	Mutes or unmutes the audio output.

6. MAINTENANCE

6.1 Cleaning the Remote Control

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and then wipe dry immediately. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and markings.

6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA ALKALINE batteries. Refer to Section 4.1 for battery installation instructions.


Caution: Dispose of used batteries according to local regulations. Do not expose batteries to excessive heat or fire.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AA ALKALINE batteries.
 - Check for any obstructions between the remote control and the stereo system's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the stereo system.
- **Intermittent operation:**
 - Batteries may be low. Replace them.
 - Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with infrared signals. Try operating the remote in a different lighting condition.

8. SPECIFICATIONS

Feature	Detail
Model	N2QAYB000142
Brand	ECONTROLLY
Compatibility	Panasonic CD Stereo Systems (SC-AK450, SA-AK450, SB-AK450, SC-AK350, SA-AK350, SB-AK350, SC-AK250, SA-AK250, SB-AK250)
Remote Type	Infrared (IR)
Programming	Not required (Pre-programmed)
Power Source	2 x AA ALKALINE batteries (not included)
Product Dimensions	3.94 x 1.57 x 0.59 inches (approximately)
Item Weight	1.76 ounces (without batteries)
Color	Gray

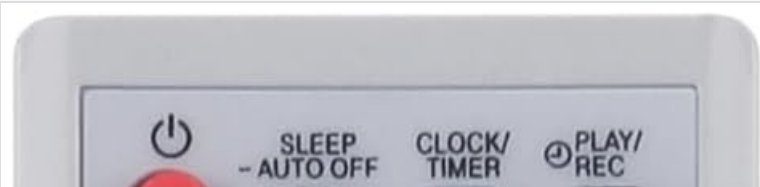



5.7 inch



Figure 3: Remote Control Dimensions. This image shows the remote control with its approximate length (5.7 inches) and width (2.0 inches) marked.

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this ECONTROLLY product is not provided in the product details. For warranty claims or technical support, please refer to the seller or manufacturer's contact information provided at the time of purchase.

Keep your purchase receipt as proof of purchase for any support inquiries.

© 2025 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DX1YYS1B>

More documents and user manuals: <https://manuals.plus/>