



[Manuals.plus](#) /

› [BENPAL](#) /

› BENPAL Smart Karaoke Machine Instruction Manual

BENPAL ka1

BENPAL Smart Karaoke Machine Instruction Manual

Model: ka1

INTRODUCTION

Thank you for choosing the BENPAL Smart Karaoke Machine. This portable PA system features a 14.1-inch HD touch screen, Bluetooth connectivity, and two wireless microphones, designed for an immersive karaoke experience at home or outdoors. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and enjoyment.

PACKAGE CONTENTS

Before you begin, please ensure all items listed below are present in your package:

- BENPAL Smart Karaoke Machine (Main Unit)
- Two Wireless Microphones
- Power Adapter
- USB Charging Cable
- Shoulder Strap
- Party Light (integrated or separate, depending on model variant)
- Warranty Card
- User Manual (this document)



Image: The BENPAL Smart Karaoke Machine with its included accessories: two wireless microphones, power adapter, and USB charging cable.

SETUP GUIDE

1. Power Connection and Initial Charge

1. Connect the power adapter to the DC IN port on the karaoke machine.
2. Plug the power adapter into a standard electrical outlet.
3. Allow the unit to charge fully before first use (approximately 3-4 hours). The charging indicator light will change when fully charged.

2. Screen Positioning

The 14.1-inch touch screen can be rotated up to 270 degrees for optimal viewing angles, whether you are in front of or behind the unit.

- Gently pivot the screen to your desired viewing angle. Ensure it clicks securely into place.



270° Rotating screen

You can enjoy karaoke at any location without having to move the karaoke machine or swap positions with family and friends.

Image: The karaoke machine's 14.1-inch touch screen shown rotating, highlighting its flexibility for different viewing positions.

3. Wireless Microphone Setup

1. Ensure the wireless microphones are charged. They use 9V batteries (included).
2. Turn on the karaoke machine using the power button.
3. Turn on each wireless microphone. They should automatically pair with the main unit. A successful connection is indicated by a stable light on the microphone.

OPERATING INSTRUCTIONS

1. Navigating the Touch Screen Interface

The karaoke machine runs on an Android operating system, providing a familiar and intuitive user experience. Use the touch screen to navigate through apps and settings.

- Tap icons to open applications like YouTube or the pre-installed karaoke app.
- Swipe to scroll through menus and content.
- Access system settings for Wi-Fi, Bluetooth, and display adjustments.

2. Playing Karaoke Songs

The machine offers millions of songs through its built-in apps, with lyrics displayed directly on the screen.

- **Using Built-in Apps:** Connect to Wi-Fi via settings. Open the YouTube app or the dedicated karaoke app to search and play songs.
- **HDMI Output:** Connect an HDMI cable from the machine's HDMI port to your TV or external display to project lyrics and video onto a larger screen.

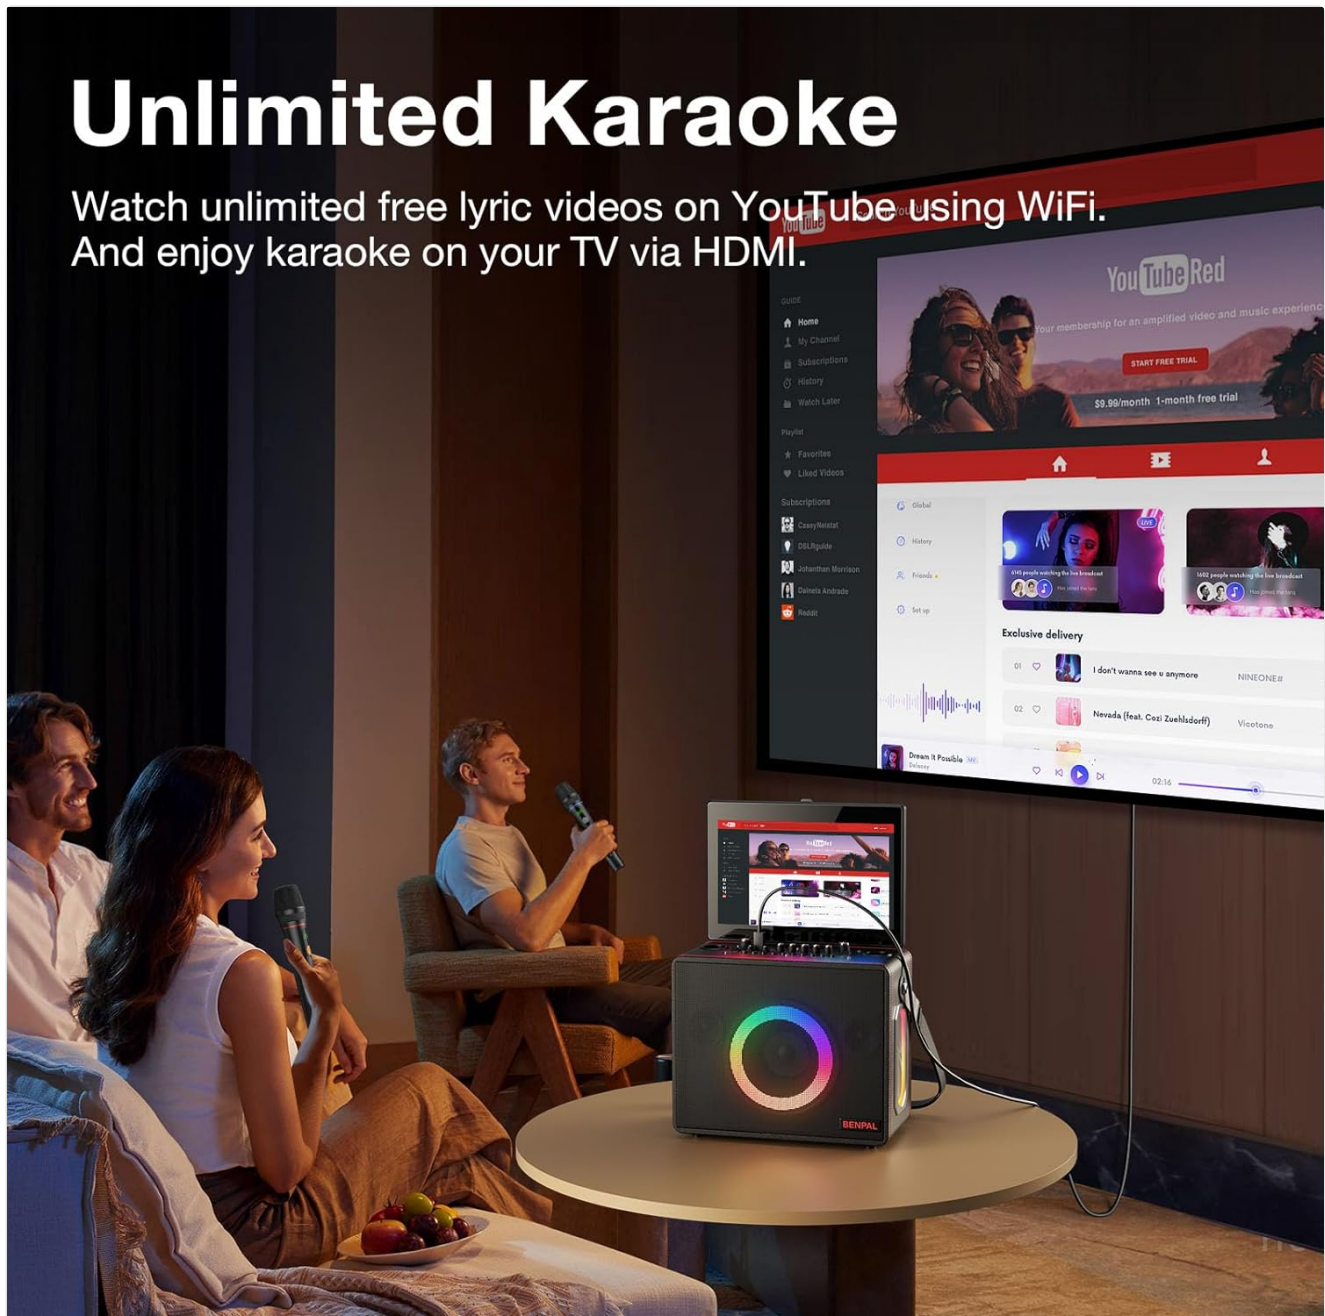


Image: A family enjoying karaoke, with the machine's display mirrored to a large television via HDMI for an enhanced viewing experience.

3. Audio Connectivity

Connect your devices using various input options:

- **Bluetooth:** Enable Bluetooth on your smartphone or tablet and select "BENPAL Karaoke" from the available devices to stream audio wirelessly.
- **USB/TF Card:** Insert a USB drive or TF card into the designated ports to play local audio files.
- **AUX Input:** Use a 3.5mm audio cable to connect external audio sources.

4. Sound Adjustment

Utilize the control panel to fine-tune your audio experience:

- **Master Volume:** Adjust the overall sound output.
- **Music Treble/Bass:** Control the high and low frequencies of the music.
- **Microphone Volume:** Adjust the volume of the wireless microphones.
- **Microphone Echo:** Add echo effect to vocals for a professional karaoke sound.



Image: An internal view diagram illustrating the 60W powerful output, 6000 mAh battery, 2x 2.2-inch tweeters, 5-inch subwoofers, and dual diaphragm technology for enhanced bass.

5. Party Lights

The integrated audio-responsive LED lights enhance the party atmosphere.

- Locate the light control button on the unit.
- Press the button to cycle through different light modes or turn them off. The lights will react to the rhythm of the music.

Audio-Responsive LED Lights

Dancing with light, all-round lighting design, creating a colorful and romantic atmosphere for your party.



Image: Two karaoke machines demonstrating the vibrant, audio-responsive LED lights that create a dynamic party atmosphere.

MAINTENANCE

1. Cleaning

- Wipe the exterior of the machine with a soft, dry cloth.
- For the touch screen, use a microfiber cloth specifically designed for electronics to avoid scratches. Do not use abrasive cleaners.
- Keep the ports free of dust and debris.

2. Battery Care

- To prolong battery life, avoid completely draining the battery frequently.
- If storing the unit for an extended period, charge the battery to about 50% and store in a cool, dry place. Recharge every few months to prevent deep discharge.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------------|---|---|
| Machine does not power on. | Low battery or power connection issue. | Ensure the power adapter is securely connected and the unit is charged. Press and hold the power button for a few seconds. |
| No sound output. | Volume too low, incorrect input source, or muted. | Increase master volume. Check if the correct input source (Bluetooth, USB, AUX) is selected. Ensure the unit is not muted. |
| Wireless microphones not connecting. | Microphone batteries low or not paired. | Replace or charge microphone batteries. Turn microphones off and on again to re-initiate pairing. Ensure they are within range. |
| Touch screen unresponsive. | Temporary software glitch. | Restart the karaoke machine by holding the power button until it shuts down, then power it back on. |
| Cannot connect to Wi-Fi. | Incorrect password or out of range. | Double-check Wi-Fi password. Move the unit closer to the Wi-Fi router. Restart the router if necessary. |

SPECIFICATIONS

| Feature | Detail |
|-----------------------|--|
| Model Number | ka1 |
| Item Weight | 10 pounds |
| Product Dimensions | 17 x 15 x 16 inches |
| Screen Size | 14.1 inches (HD Touch Screen) |
| Operating System | Android |
| Internal Storage | 64GB (for tablet) |
| Speaker Configuration | 1x 6.5 inch subwoofer, 2x 4 inch treble speakers |
| Peak Power Output | Up to 600W |
| Battery Type | Lithium Ion (6000 mAh capacity) |
| Battery Life | 5-6 hours (music and karaoke party time) |
| Connectivity | Bluetooth, Wi-Fi, HDMI, TF Card, USB, AUX, Live Interface |
| Microphones | Two Wireless Microphones (9V batteries included) |
| Special Features | Lightweight, Lyric Display, PA System, Portable, Touch Screen, Audio-Responsive LED Lights |

WARRANTY AND SUPPORT

Your BENPAL Smart Karaoke Machine comes with a warranty. Please refer to the included Warranty Card for detailed terms and conditions regarding coverage and duration.

For any questions, technical assistance, or support needs, please do not hesitate to contact BNPAL customer service. We are committed to providing excellent support for our products.

Contact information can typically be found on the Warranty Card or on the official BNPAL website.