

[Manuals.plus](#) /

› [T-Fal](#) /

› Tefal FP110141 Smart Food Processor Bowl Lid User Manual

T-Fal FP110141

Tefal FP110141 Smart Food Processor Bowl Lid User Manual

Model: FP110141, FP110B30, FS-000078

INTRODUCTION

This manual provides instructions for the proper installation, use, and maintenance of your Tefal FP110141 Smart Food Processor Bowl Lid. This is an original replacement part designed for specific Tefal food processor models, ensuring optimal performance and compatibility.

Key Features:

- Original Replacement Part
- Superior manufacturer quality
- Impact Resistant
- Removable Parts for easy cleaning

PRODUCT OVERVIEW



Image: The transparent Tefal FP110141 Smart Food Processor Bowl Lid, showing its central feeding tube and locking tabs on the sides. The lid is made of clear plastic, allowing visibility into the food processor bowl.

The Tefal FP110141 Smart Food Processor Bowl Lid is a transparent plastic component designed to securely cover the food processor bowl during operation. It features a central feeding tube for adding ingredients while the appliance is running, and locking mechanisms on the sides to ensure a tight seal.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the new bowl lid from its packaging. Inspect it for any signs of damage.
2. **Clean:** Before first use, wash the lid with warm, soapy water and rinse thoroughly. Dry completely.
3. **Position:** Place the food processor bowl onto the motor base, ensuring it is correctly seated and locked into position according to your food processor's main instruction manual.
4. **Attach Lid:** Align the bowl lid with the top of the food processor bowl. Ensure the locking tabs on the lid align with the corresponding slots on the bowl.
5. **Lock:** Rotate the lid clockwise until it clicks securely into place. The food processor will not operate if the lid is not properly locked.

***Note:** Always refer to your specific food processor's main instruction manual for detailed assembly steps, as procedures may vary slightly between models.*

OPERATING INSTRUCTIONS

1. **Secure Lid:** Ensure the bowl lid is firmly locked onto the food processor bowl before starting the appliance.
2. **Add Ingredients:** For ingredients that need to be added during processing, use the central feeding tube. Remove the pusher (if applicable) from the feeding tube, add ingredients, and then replace the pusher.
3. **Safety:** Never attempt to force the lid open or remove it while the appliance is operating. Always wait for the blades to stop completely before removing the lid.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bowl lid.

- **After Each Use:** Disassemble the lid from the bowl.
- **Washing:** The bowl lid is dishwasher safe. Alternatively, it can be washed by hand using warm water and a mild dish soap.
- **Rinsing:** Rinse all parts thoroughly to remove any soap residue.
- **Drying:** Allow the lid to air dry completely or dry with a soft cloth before storing.
- **Storage:** Store the lid in a clean, dry place, away from direct sunlight or extreme temperatures.

***Caution:** Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the plastic surface.*

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not lock securely.	Incorrect alignment or obstruction.	Ensure the lid is correctly aligned with the bowl and rotated until it clicks. Check for any food debris preventing closure.
Food processor does not start with lid attached.	Lid not fully locked or safety mechanism not engaged.	Verify the lid is securely locked. Most food processors have a safety interlock that prevents operation if the lid is not properly closed.

Problem	Possible Cause	Solution
Lid appears damaged or cracked.	Impact or wear over time.	Discontinue use immediately. A damaged lid can compromise safety and functionality. Replace with a genuine Tefal replacement part.

SPECIFICATIONS

Brand: T-Fal
Model Numbers: FP110141, FP110B30, FS-000078
Material: Plastic
Color: Transparent/White
Product Dimensions (D x W x H): 17D x 17W x 13H centimeters
Key Features: Impact Resistant, Removable Parts
Care Instructions: Dishwasher Safe, Hand Wash
Country of Origin: France

WARRANTY AND SUPPORT

As an original replacement part, this Tefal bowl lid is manufactured to high-quality standards. For specific warranty information regarding your food processor and its components, please refer to the warranty documentation provided with your original appliance or contact Tefal customer support directly.

For further assistance, technical support, or to inquire about other genuine replacement parts, please visit the official T-Fal website or contact their customer service department.

[Visit the T-Fal Store on Amazon](#)

© 2023 T-Fal. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DX24YWFY>

More documents and user manuals: <https://manuals.plus/>