



Manuals.plus /

- › Skirfy /
- › Skirfy Space Claw Machine for Kids (Model SK-TKWWJ-PK) - Instruction Manual

## Skirfy SK-TKWWJ-PK

# Skirfy Space Claw Machine for Kids

Model: SK-TKWWJ-PK

## 1. PRODUCT OVERVIEW

---

The Skirfy Space Claw Machine is an electronic game vending machine designed to provide an engaging arcade experience for children. This large, pink-themed machine features a 60-second countdown, precise 3-joystick control, and comes with a variety of prizes. It operates with colorful lights and fun music, enhancing the immersive play experience.



Image: The Skirfy Space Claw Machine, showcasing its pink design, internal prizes, and overall appearance.

## Key Features:

- **60-Second Countdown:** Engage in timed challenges.
- **3-Joystick Control:** Offers precise movement for the claw.
- **Included Prizes:** Comes with 10 plush toys and 10 capsule toys.
- **Game Coins:** Includes 24 game coins for multiple rounds of play.
- **Dual Power Options:** Can be powered by USB connection or 4 AA batteries (not included).
- **Safe Design:** Features smooth, rounded edges for child safety.
- **Interactive Experience:** Enhanced with colorful lights and adjustable music.

## 2. SETUP

### 2.1 Unboxing and Components

Carefully remove all items from the packaging. Ensure all components are present:

- Skirfy Space Claw Machine unit
- 20 assorted prizes (plush toys and capsule toys)
- 24 game coins
- USB power cable
- Small screwdriver (for battery compartment)
- Decorative top figure (space bunny) and side rocket
- Sticker sheet



Image: The included prizes (plush toys and capsule toys) and game coins.

## 2.2 Power Source Installation

The claw machine can be powered by either 4 AA batteries or a USB connection.

### Using Batteries:

1. Locate the battery compartment on the bottom of the machine.
2. Use the provided screwdriver to open the battery compartment cover.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover with the screwdriver.

### Using USB Power:

1. Connect one end of the USB cable to the USB connection port on the back of the machine.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a USB port on a computer.



Image: Illustration of the USB connection port and battery compartment for power options.

## 2.3 Prize Loading

1. Open the top cover of the claw machine.
2. Place the plush toys and capsule toys inside the machine's play area.
3. Close the top cover securely.

## 2.4 Decorative Assembly

1. Attach the space bunny figure to the designated slot on top of the machine.
2. Attach the rocket decoration to the side of the machine.
3. Apply the included stickers to customize your claw machine as desired.



Image: Visual guide for attaching the top figure and loading prizes into the machine.

## 3. OPERATING INSTRUCTIONS

### 3.1 Power On

Locate the ON/OFF switch on the back of the machine and slide it to the 'ON' position. The machine will light up and play music.

### 3.2 Start Game

Insert one of the provided game coins into the coin slot on the front of the machine. This will activate the claw mechanism and start the 60-second countdown.

### 3.3 Controlling the Claw

Use the three joysticks on the front panel to control the claw:

- **Left Joystick:** Moves the claw left and right.
- **Middle Joystick:** Moves the claw forward and backward.
- **Right Joystick:** Moves the claw up and down. Pressing this joystick down will also open and close the claw to grab a prize.



Image: Close-up of the control panel with three joysticks and the coin slot.

### 3.4 Prize Collection

Once you successfully grab a prize, guide the claw over the prize chute on the left side of the machine. The prize will drop into the collection area for retrieval.



Image: The claw machine in action, illustrating the prize chute on the left side.

### 3.5 Sound and Lights

The machine features colorful lights and fun music. A short press of the volume button will cycle through four volume levels: Loud, Medium, Low, and Mute. A long press of the volume button will turn the light effects on or off.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the machine, wipe its exterior with a soft, dry cloth. Do not use water, abrasive cleaners, or harsh chemicals, as these may damage the electronic components or finish.

### 4.2 Battery Care

If using batteries, replace all 4 AA batteries simultaneously when the machine's performance declines. Do not mix old and new batteries or different types of batteries. Remove batteries if the machine will not be used for an extended period to prevent leakage.

## 4.3 Storage

Store the claw machine in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

### 5.1 Claw Not Moving or Responding

- **Check Power Source:** Ensure batteries are fresh and correctly inserted, or the USB cable is securely connected to a working power source.
- **Power Switch:** Verify that the ON/OFF switch on the back of the machine is in the 'ON' position.
- **Obstructions:** Inspect the claw mechanism for any obstructions that might be preventing movement.

### 5.2 No Sound or Lights

- **Power Check:** Confirm the machine is powered on and receiving adequate power (fresh batteries or USB connection).
- **Volume Setting:** Short press the volume button to cycle through volume levels; ensure it is not set to 'Mute'.
- **Light Effects:** Long press the volume button to toggle light effects on/off.

### 5.3 Difficulty Grabbing Prizes

- **Prize Placement:** Ensure prizes are not too heavy or awkwardly positioned for the claw to grasp effectively.
- **Practice:** Precision with the joysticks improves with practice. Try different angles and timing.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Skirfy
Model Number	SK-TKWWJ-PK
Material Type	Plastic
Color	Pink
Power Source	Battery (4 AA, not included), USB
Age Range Description	6+ years
Item Dimensions (LxWxH)	7.48 x 14.17 x 9.45 inches
Item Weight	1.38 Kilograms
Included Components	Claw machine, 20 prizes, 24 game coins, USB cable, screwdriver
Educational Objective	Develop fine motor skills and basic counting concepts

## 7. WARRANTY AND SUPPORT

No specific warranty information is provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the retailer where the product was purchased or visit the official Skirfy website.

