

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Telefunken](#) /

› [Telefunken Full HD 43-Inch DLED Television User Manual TLEDD-43FHDC](#)

Telefunken TLEDD-43FHDC

Telefunken Full HD 43-Inch DLED Television User Manual

Model: TLEDD-43FHDC

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Telefunken Full HD 43-Inch DLED Television (Model TLEDD-43FHDC). Please read it thoroughly before using the product and retain it for future reference. Your Telefunken 43-Inch Full HD DLED Television delivers vibrant colors and sharp images, making it suitable for various entertainment needs. It features multiple connectivity options, including HDMI and USB ports, and an energy-efficient design for an immersive viewing experience.

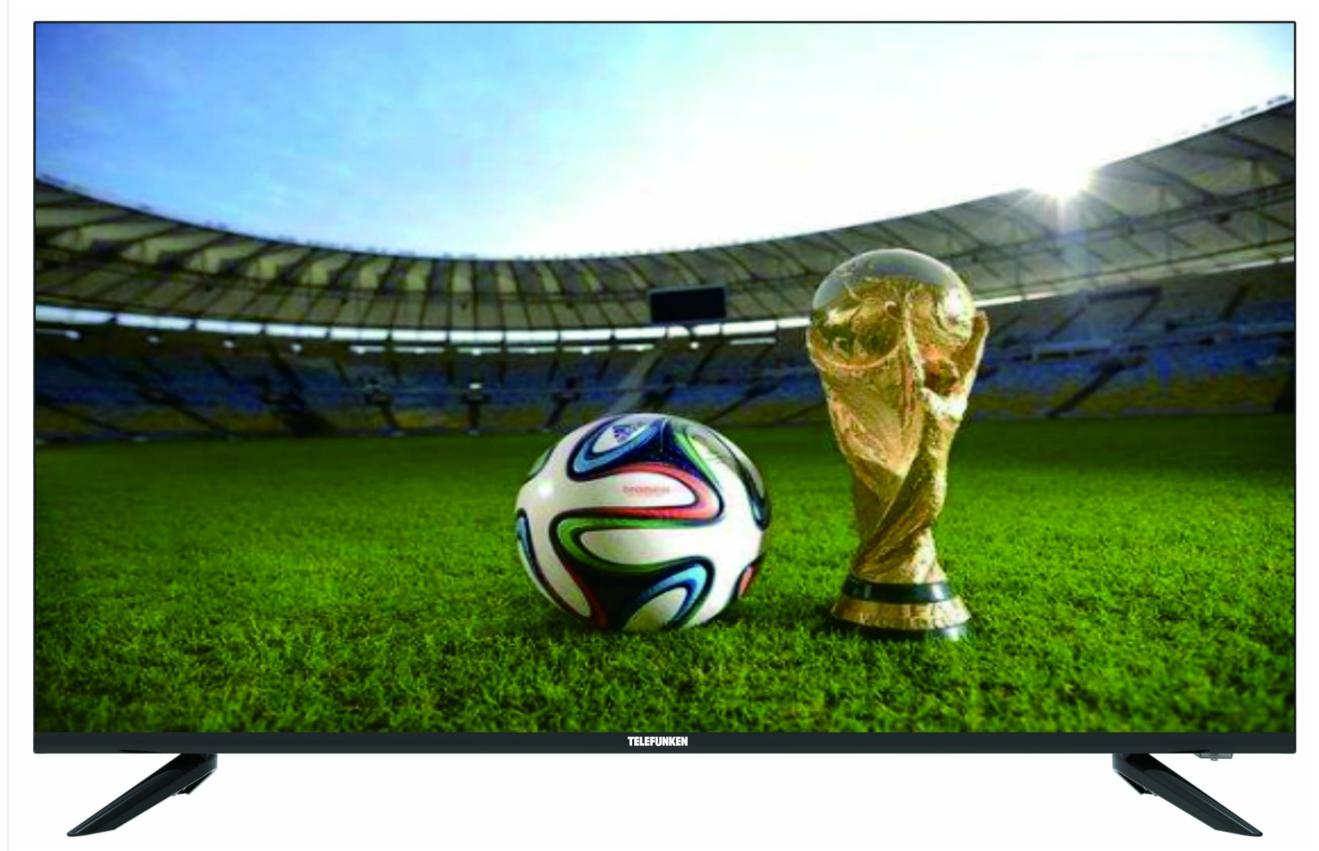


Figure 1: Front view of the Telefunken 43-Inch Full HD DLED Television.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- **Power Source:** Ensure the power supply voltage matches the rating label on the TV.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat:** Keep the TV away from heat sources like radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near strong magnetic fields.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Carefully unpack your television and check that all the following items are included:

- 1 x Telefunken Full HD 43-Inch DLED Television
- 1 x Remote Control
- 1 x Power Cable
- 2 x TV Stands (Left and Right)
- Screws for TV Stands
- 1 x User Manual (this document)

SETUP GUIDE

1. Attaching the TV Stands

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure each stand using the provided screws. Ensure they are tightened firmly.



Figure 2: Front view of the television, showing the location for stand attachment.

2. Connecting External Devices

Your television is equipped with multiple ports for connecting various devices.

- **HDMI Ports:** Connect Blu-ray players, game consoles, or set-top boxes. (Connections: HDMI)
- **USB Ports:** Connect USB storage devices for media playback. (Total USB Ports: 2)
- **Wi-Fi:** Connect to your home network for smart TV features and internet access.

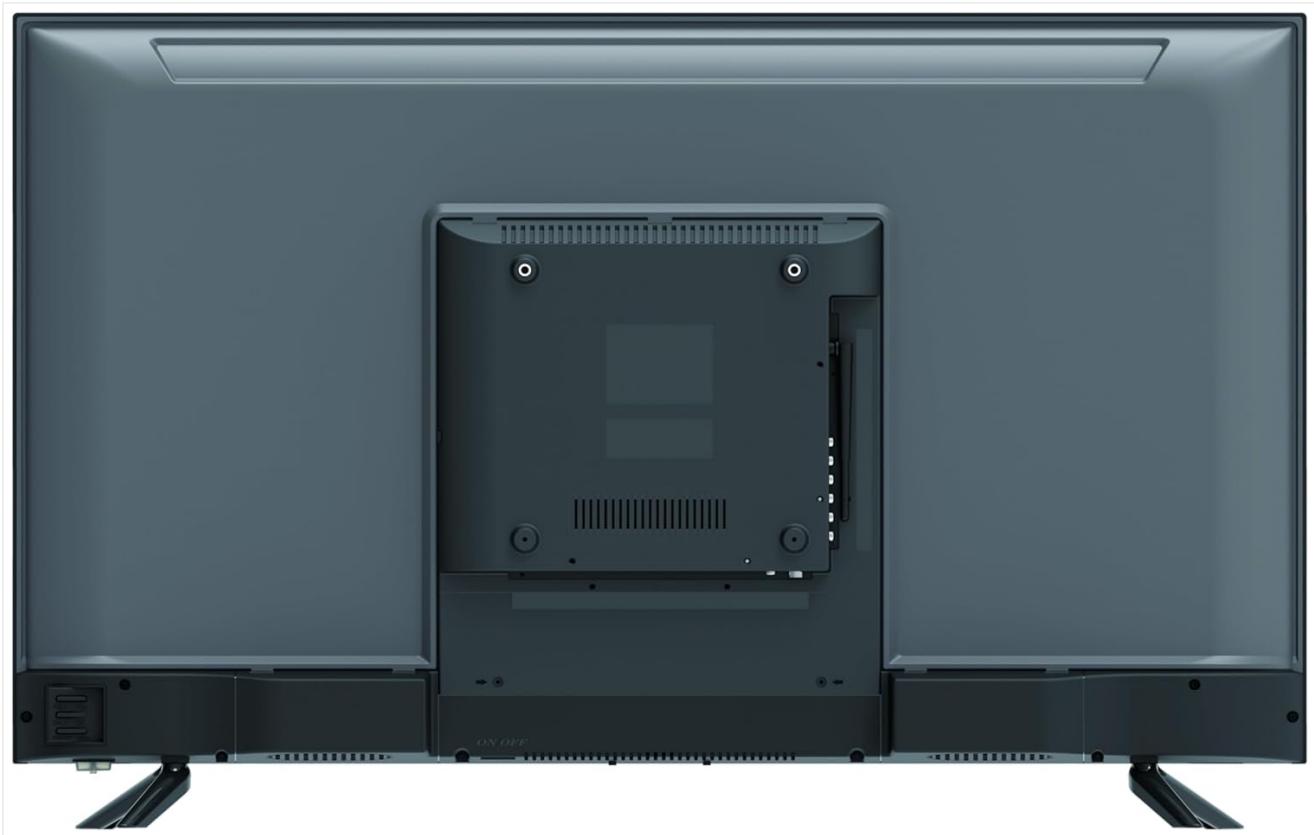


Figure 3: Rear view of the television, highlighting the input/output ports.

3. Powering On for the First Time

1. Connect the power cable to the TV and then to a wall outlet.
2. Press the Power button on the remote control or on the TV itself.
3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection, and channel scanning.

OPERATING YOUR TELEVISION

Remote Control Functions

The remote control allows you to access all the television's features. Familiarize yourself with the main buttons:

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI 1, HDMI 2, USB, etc.).
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH +/-):** Changes channels.
- **Menu:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus.
- **OK/Enter:** Confirms selections.
- **Back/Exit:** Returns to the previous screen or exits the menu.

Basic Functions

- **Changing Channels:** Use the CH +/- buttons or enter the channel number directly.
- **Adjusting Volume:** Use the VOL +/- buttons.
- **Selecting Input Source:** Press the Input button and select the desired source from the list.
- **Accessing Smart TV Features:** As this TV runs on Android, connect to Wi-Fi to access streaming apps and other smart functionalities.

CARE AND MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a specialized screen cleaner (do not spray directly onto the screen).
- **Cleaning the Casing:** Use a soft, dry cloth to wipe the TV casing. Avoid using abrasive cleaners or solvents.
- **Power Off:** When not in use for extended periods, unplug the TV from the power outlet.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working.	Check power cable connection; Try another outlet; Press power button on TV.
No picture, but sound is present	Incorrect input source selected; Loose HDMI/AV cable.	Press the Input button on the remote to select the correct source; Check cable connections.

Problem	Possible Cause	Solution
No sound, but picture is present	Volume is muted or too low; Audio settings incorrect.	Press the Volume + button; Check audio settings in the TV menu.
Remote control not working	Batteries are depleted or inserted incorrectly; Obstruction between remote and TV.	Replace batteries; Ensure clear line of sight to the TV's IR sensor.
Wi-Fi connection issues	Incorrect password; Router issues; TV too far from router.	Verify Wi-Fi password; Restart your router; Move TV closer to router or use a Wi-Fi extender.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Telefunken
Model Number	TLEDD-43FHDC
Screen Size	43 Inches
Display Technology	DLED
Resolution	1080p Full HD (1920 x 1080 pixels)
Refresh Rate	60 Hz
Operating System	Android
Connectivity	HDMI, USB, Wi-Fi
Total USB Ports	2
Aspect Ratio	16:9
Product Dimensions (D x W x H)	19.5D x 96W x 60.7H centimetres
Colour	Black

WARRANTY AND SUPPORT

This Telefunken Full HD 43-Inch DLED Television comes with a **2-year manufacturer's warranty** from the date of purchase.

For technical assistance, troubleshooting beyond this manual, or to make a warranty claim, please contact your authorized Telefunken retailer or the Telefunken customer service department. Please have your model number (TLEDD-43FHDC) and proof of purchase ready when contacting support.