

[manuals.plus](#) /› [Jocoevol](#) /› [Jocoevol W11815 Modern 6-Drawer Dresser with LED Light User Manual](#)

Jocoevol W11815

Jocoevol W11815 Modern 6-Drawer Dresser with LED Light User Manual

Model: W11815 | Brand: Jocoevol

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Jocoevol W11815 Modern 6-Drawer Dresser with LED Light. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Safety Information

- Ensure all parts are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws.
- Always use the anti-tip kit provided to secure the dresser to a wall. This prevents serious injury from tipping furniture.
- Keep small parts away from children during assembly.
- Disconnect power to the LED light strip before cleaning or maintenance.

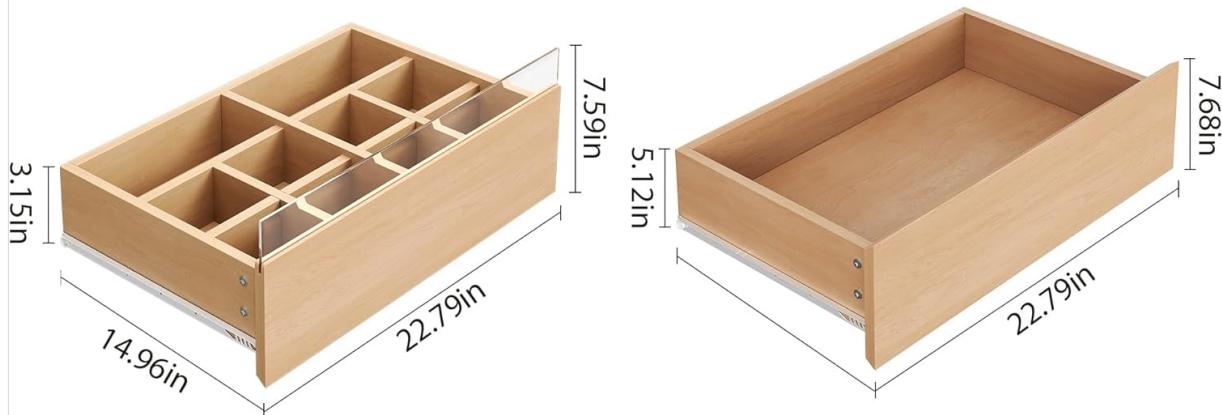


Image Description: A diagram illustrating the dimensions of the dresser (47.24 inches wide, 29.57 inches high, 15.75 inches deep) and two safety warnings. One warning shows a dresser correctly anchored to a wall with a green checkmark, preventing it from tipping. The other shows an unanchored dresser tipping forward, with a red cross, emphasizing the importance of using the anti-tip kit.

PARTS LIST

Please verify that all components listed below are present before starting assembly.

Note: Component labels (e.g., A, B, C) are typically found on the packaging or the parts themselves.

- Top Panel (1)
- Side Panels (2)
- Bottom Panel (1)
- Back Panel (1)
- Drawer Fronts (6)
- Drawer Sides (12)
- Drawer Backs (6)
- Drawer Bottoms (6)
- Drawer Slides (12 pairs)
- LED Light Strip (1)

- Power Adapter for LED (1)
- Remote Control for LED (1)
- Hardware Pack (screws, dowels, cam locks, anti-tip kit)
- Removable Jewelry & Makeup Organizer (1)



Image Description: An exploded view diagram of the dresser showing the arrangement of its six drawers, labeled L, M, N, O, P, Q, indicating their correct installation order. An inset diagram details the smooth sliding rail mechanism for the drawers.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

- 1. Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to components.
- 2. Assemble the Main Frame:**
 - Attach the side panels to the bottom panel using the provided hardware (dowels and cam locks).
 - Secure the top panel to the side panels.
 - Install the back panel into the grooves on the main frame.
- 3. Assemble the Drawers:**
 - For each of the six drawers, attach the drawer sides and back to the drawer front.
 - Slide the drawer bottom into the grooves.
 - Secure the drawer bottom with small nails or screws.
- 4. Install Drawer Slides:**
 - Attach the drawer slides to the inside of the dresser frame and to the sides of each assembled drawer. Ensure they are aligned correctly for smooth operation.

Hidden Handle

No handle, Anti-bumping



Smooth Slide Rail

Smooth push and pull,
Robust

Image Description: A close-up view of an open drawer, highlighting the smooth sliding rail mechanism. Arrows indicate the direction of movement for easy push and pull, emphasizing the robust design.

5. **Insert Drawers:** Carefully slide each assembled drawer into its corresponding slot in the dresser frame.
6. **Install LED Light Strip:**
 - Locate the designated area for the LED light strip, typically under the top panel or within the upper compartments.
 - Peel off the adhesive backing and firmly press the LED strip into place.
 - Connect the LED strip to the power adapter.
7. **Attach Anti-Tip Kit:** Secure the dresser to a wall using the provided anti-tip hardware. Follow the specific instructions included with the anti-tip kit for safe installation.



Image Description: A fully assembled Jocoevol 6-drawer dresser in a natural wood finish, featuring illuminated top drawers with LED lighting. The dresser is styled in a modern bedroom setting, showcasing its aesthetic appeal and functionality.

OPERATING INSTRUCTIONS (LED LIGHT)

The integrated LED light strip offers customizable illumination for your dresser.

Powering On/Off

Connect the power adapter to a standard electrical outlet. The LED light can be turned on or off using the provided remote control or a compatible smartphone application.

Adjusting Brightness and Color

Use the remote control or smartphone app to:

- Adjust the brightness level.
- Select from a wide range of colors (over 60,000 options).
- Choose different lighting modes (e.g., static, dynamic, music sync).

6000+ VIVID LED LIGHT SHOW

Make the room full of unique charm and comfort

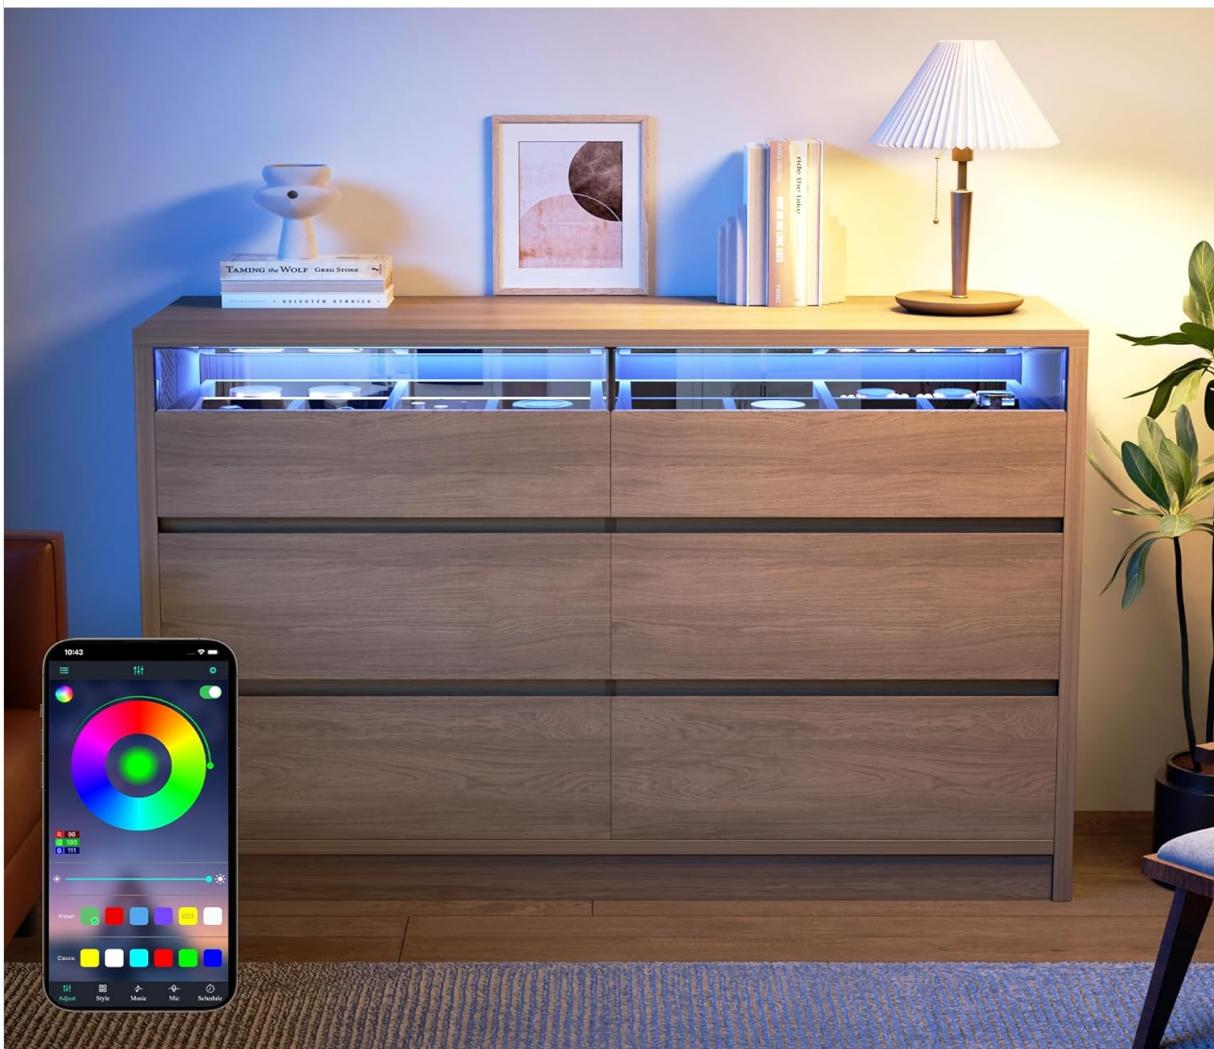


Image Description: The Jocoevol dresser with its LED lights illuminated in a vibrant blue color, creating a distinct ambiance. A smartphone screen in the foreground displays a color wheel interface, indicating control over the LED lighting via a mobile application.

MAINTENANCE

Cleaning

To clean the dresser, wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish. For the LED light strip, ensure power is disconnected before wiping gently with a dry cloth.

Drawer Care

Periodically check drawer slides for smooth operation. If drawers become stiff, a small amount of silicone-based lubricant can be applied to the slides.

Anti-Tip Kit

Regularly inspect the anti-tip kit to ensure it remains securely fastened to both the dresser and the wall.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on	Power adapter unplugged; remote control battery dead; LED strip connection loose.	Check power connection; replace remote battery; ensure LED strip is securely connected.
Drawers stick or do not slide smoothly	Drawer slides misaligned; debris in slides; overtightened screws.	Realign slides; clean slides; loosen screws slightly.
Dresser feels unstable	Screws loose; anti-tip kit not installed or loose.	Tighten all assembly screws; ensure anti-tip kit is correctly installed and secured.

SPECIFICATIONS

- **Model:** W11815
- **Brand:** Jocoevol
- **Dimensions (D x W x H):** 15.94" x 47.24" x 29.72"
- **Material:** E1 grade particle board, 3mm MDF backboard
- **Number of Drawers:** 6
- **LED Light:** Integrated, customizable brightness and colors
- **Assembly Required:** Yes
- **Item Weight:** 91.9 pounds

LARGE STORAGE SURFACE

Convenient for placing items

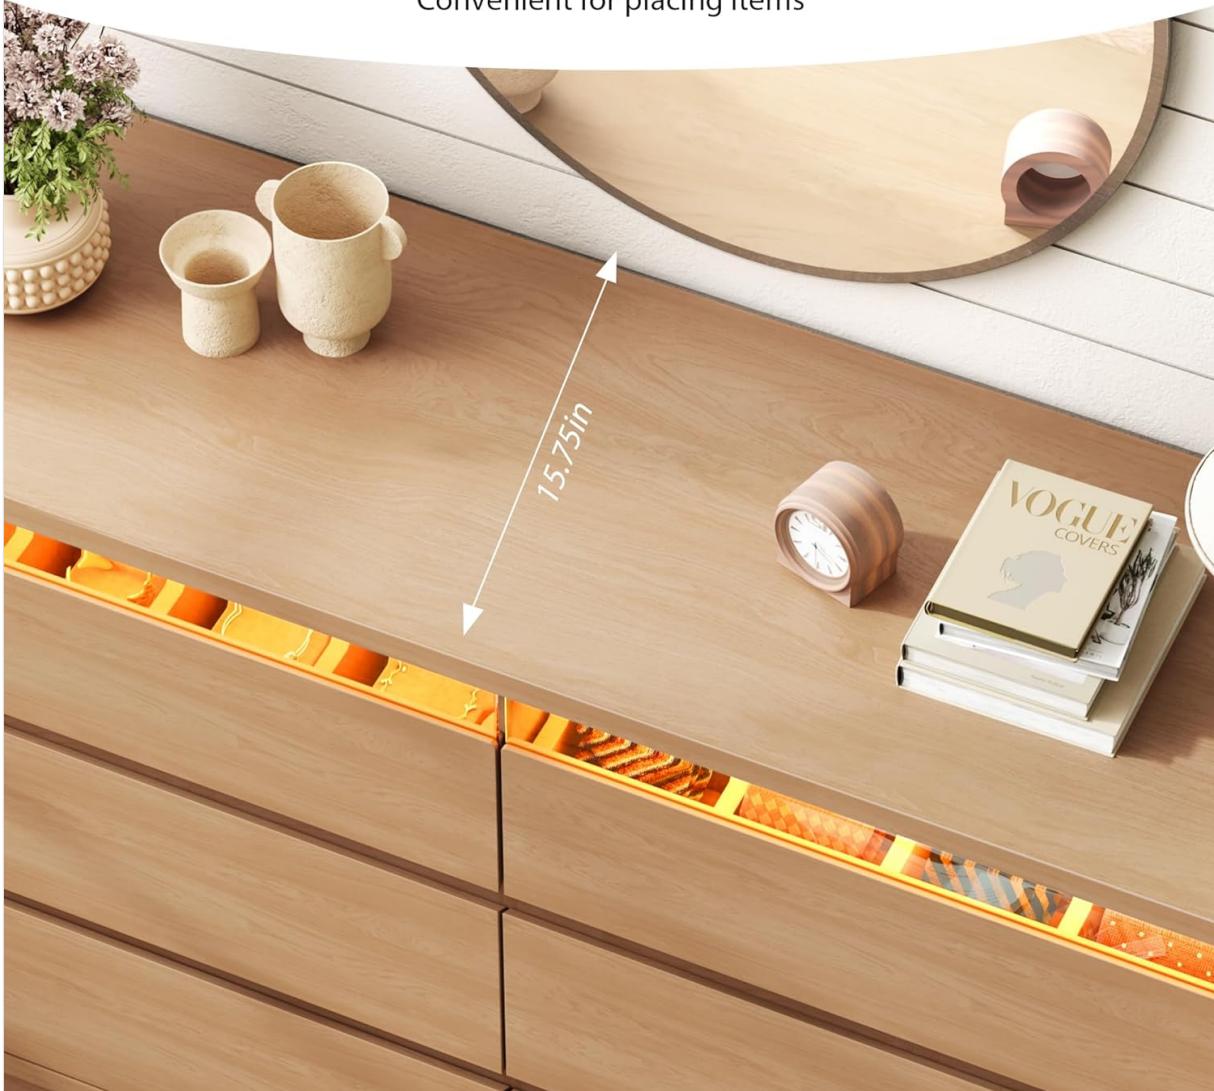


Image Description: A top-down view of the Jocoevol dresser's surface, highlighting its generous depth of 15.75 inches. The surface is adorned with decorative items, demonstrating its utility as a display or storage area for frequently used items.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Jocoevol customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Online Support: Visit the official Jocoevol store on Amazon for product information and support resources:
[Jocoevol Store](#)

Protection Plans: Extended protection plans may be available for purchase. Refer to your retailer for details.