

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs 1080P Digital Camera (Model: Dpofirusmode70cx-15) User Manual

Dpofirs Dpofirusmode70cx-15

Dpofirs 1080P Digital Camera User Manual

Model: Dpofirusmode70cx-15

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Dpofirs 1080P Digital Camera. Please read this manual thoroughly before operating the device and retain it for future reference. This camera is designed for capturing high-resolution photos and videos with ease, featuring an 8X digital zoom and a convenient flip screen.

2. PRODUCT OVERVIEW

2.1 Key Features

- **High Resolution Imaging:** 48MP sensor and 1080P video resolution for detailed photos and videos.
- **Integrated Fill Light:** Built-in LED fill light for enhanced clarity in low-light conditions.
- **Versatile 2.4-inch HD Flip Screen:** Allows for easy selfie-taking and convenient content previewing.
- **8X Digital Zoom:** Capture distant subjects with high-speed autofocus.
- **Multifunctional Capabilities:** Includes 2, 5, 10-second self-timers, timestamping, various filter effects, and loop recording.
- **Long-Lasting Battery:** 800mAh Li-ion battery provides up to 4 hours of continuous recording.

2.2 Package Contents

Upon unpacking, please ensure all items listed below are present:

- 1 x Dpofirs Digital Camera
- 1 x Wrist Strap
- 1 x Charging Cable
- 1 x User Manual



Image: Dpofirs Digital Camera with its accessories, including a wrist strap and a USB charging cable.

2.3 Camera Components

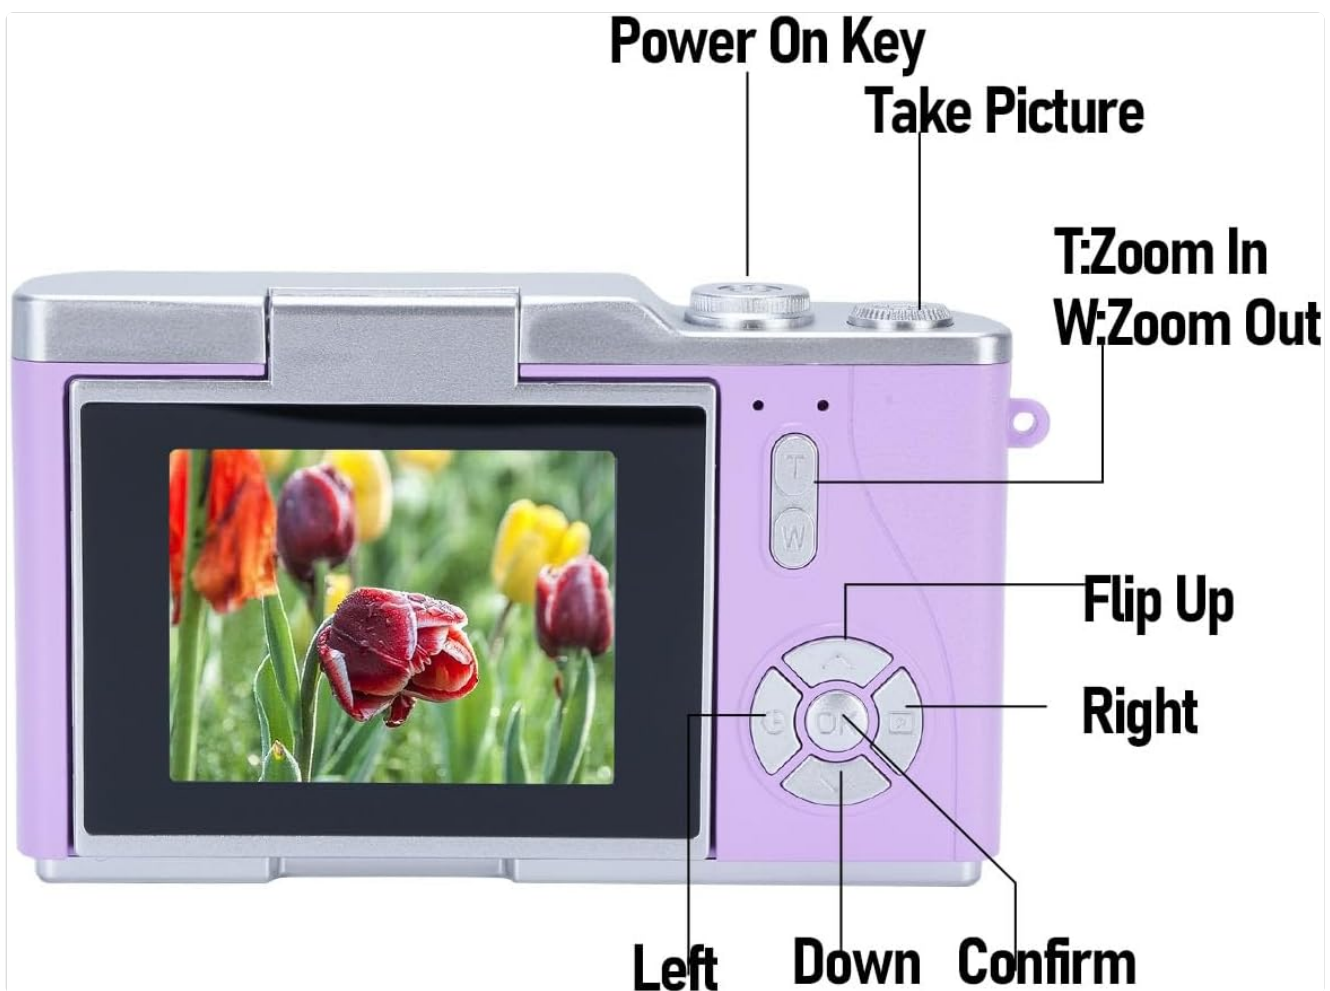


Image: Rear view of the Dpofirs Digital Camera, highlighting the 2.4-inch flip screen and control buttons. Labels indicate 'Power On Key', 'Take Picture', 'T: Zoom In', 'W: Zoom Out', 'Flip Up', 'Right', 'Left', 'Down', and 'Confirm' buttons.

- **Power On Key:** Located on the top right, used to turn the camera on or off.
- **Take Picture Button:** Adjacent to the Power On Key, used to capture photos.
- **T (Zoom In) / W (Zoom Out) Buttons:** Located on the top right, used to adjust digital zoom.
- **Flip Up Screen:** The 2.4-inch display can be flipped upwards for various viewing angles, including selfies.
- **Directional Buttons (Left, Right, Up, Down):** Used for menu navigation and selection.
- **OK/Confirm Button:** Central button within the directional pad, used to confirm selections.
- **Lens:** Front-facing lens for image capture.
- **Fill Light:** Integrated LED light next to the lens.
- **USB Port:** Located on the side for charging and data transfer.
- **Memory Card Slot:** Located on the side for inserting a memory card.

3. SETUP

3.1 Charging the Battery

The camera is powered by an 800mAh Li-ion battery. Before first use, fully charge the battery.

1. Connect the provided charging cable to the camera's USB port.
2. Connect the other end of the charging cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when the battery is full.

3.2 Inserting a Memory Card

A memory card (up to 128GB, not included) is required to store photos and videos.

1. Locate the memory card slot on the side of the camera.
2. Insert the memory card with the metal contacts facing the correct direction (refer to the diagram or markings near the slot).
3. Gently push the card until it clicks into place. To remove, push the card again until it springs out.



Image: Side view of the Dpofirs Digital Camera, clearly showing the USB charging port and the memory card slot.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on, press and hold the **Power On Key** until the screen illuminates.
- To power off, press and hold the **Power On Key** again until the screen turns off.

4.2 Taking Photos

1. Ensure the camera is powered on and in photo mode (usually the default or selectable via menu).

2. Frame your shot using the 2.4-inch flip screen.
3. Press the **Take Picture Button** to capture the image.

4.3 Recording Videos

1. Switch to video recording mode via the camera's menu.
2. Press the **Take Picture Button** to start recording. A timer or indicator will appear on the screen.
3. Press the **Take Picture Button** again to stop recording.

4.4 Using Digital Zoom

The camera features an 8X digital zoom.

- While in photo or video mode, press the **T button** to zoom in.
- Press the **W button** to zoom out.



8X Electronic Zoom

Catch great details in the distance



Image: A visual comparison demonstrating the 8X electronic zoom feature. One image shows a person on a distant rock formation, and the other shows the same person zoomed in, highlighting the camera's ability to capture details from afar.

4.5 Using the Flip Screen

The 2.4-inch HD screen can be flipped to various angles for convenient viewing, especially for selfies.

- Gently lift the screen from its base to adjust its angle.
- Ensure the screen is securely positioned before use.



Image: The Dpofirs Digital Camera in a lavender finish, with its 2.4-inch flip screen rotated upwards, displaying a vibrant image of tulips.

4.6 Advanced Functions

Access these functions through the camera's menu system using the directional and OK buttons.

- **Self-Timer:** Set a delay of 2, 5, or 10 seconds before a photo is taken.
- **Timestamping:** Add date and time information to your photos and videos.
- **Filter Effects:** Apply various visual filters to your images.
- **Loop Recording:** For video, this feature allows continuous recording by overwriting the oldest files when the memory card is full.
- **Fill Light:** Activate the built-in LED fill light for additional illumination in dark environments.

5. MAINTENANCE

5.1 Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove the battery if the camera will not be used for an extended period.

6. TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or not inserted correctly.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Cannot take photos/record videos.	Memory card is full, not inserted, or corrupted.	Insert a memory card. Delete unnecessary files or format the card (this will erase all data). Replace the card if corrupted.
Images are blurry.	Lens is dirty, insufficient light, or camera shake.	Clean the lens. Use the fill light in dark conditions. Hold the camera steady or use a tripod.
Screen is blank or frozen.	Software glitch or low battery.	Power off and restart the camera. Charge the battery.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Item Type	Digital Camera

Feature	Detail
Material	ABS, Metal
Image Quality (Maximum)	48MP
Video Resolution (Maximum)	1080P
Zoom Ratio	8x Digital Zoom
Battery Type	Li-Ion Battery
Battery Capacity	800mAh
Storage Support	Up to 128GB memory card (not included)
Screen Size	2.4 Inch HD Flip Screen
Form Factor	DSLR-like compact
Item Weight	9.7 ounces
Package Dimensions	5.51 x 4.33 x 1.97 inches
Model Number	Dpofirsusmode70cx-15



Image: A diagram illustrating the dimensions of the Dpofirs Digital Camera, showing a length of 117mm (4.61in), a height of 64mm (2.52in), and a thickness of 29mm (1.14in).

8. WARRANTY AND SUPPORT

Dpofirs products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Dpofirs website. Please retain your proof of purchase for any warranty claims.

© 2023 Dpofirs. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DX3BFZK7>

More documents and user manuals: **<https://manuals.plus/>**