

19623

Beautiful 4-Quart Programmable Slow Cooker User Manual

Model: 19623

INTRODUCTION

Thank you for choosing the Beautiful 4-Quart Programmable Slow Cooker. This appliance is designed to simplify your cooking process, allowing you to prepare delicious meals with minimal effort. Please read this manual thoroughly before first use to ensure safe and optimal operation.



The Beautiful 4-Quart Programmable Slow Cooker, featuring a sleek design and touch-activated controls.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the slow cooker from the outlet when not in use and before cleaning.
- Do not immerse the heating base in water or other liquids.
- Ensure the slow cooker is placed on a stable, heat-resistant surface, away from edges.
- Avoid touching hot surfaces. Use oven mitts or pot holders when handling the hot pot or lid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The removable pot and glass lid are dishwasher safe; however, the heating base is not.

SETUP

1. **Unpack:** Carefully remove all packaging materials, including any labels or stickers, from the slow cooker and its components.
2. **Identify Components:** Ensure you have the main heating base, the removable non-stick ceramic pot, the tempered glass lid, and the lid holder.
3. **Initial Cleaning:** Before first use, wash the removable ceramic pot and the glass lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.
4. **Placement:** Place the slow cooker on a dry, level, heat-resistant surface, ensuring adequate ventilation around the unit.



This image illustrates the main components of your slow cooker: the main heating unit, the removable non-stick ceramic pot, and the tempered glass lid with its integrated lid holder.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Place your ingredients into the removable ceramic pot. Do not overfill; ensure there is at least 1 inch of space from the rim.
2. **Insert Pot and Lid:** Place the filled ceramic pot into the heating base. Cover with the tempered glass lid.
3. **Connect Power:** Plug the slow cooker into a 220-volt electrical outlet. The display will illuminate.
4. **Power On:** Touch the **Power** button to turn the unit on.
5. **Select Mode:** Touch the **Mode** button to cycle through the cooking settings: **High**, **Low**, and **Warm**.
6. **Set Time:** Once a cooking mode (High or Low) is selected, choose a preset cooking time by touching the desired duration: **4hrs**, **6hrs**, or **10hrs**. The selected time will begin to count down.
7. **Keep Warm Function:** After the set cooking time elapses, the slow cooker will automatically switch to the **Warm** setting to keep your food at a serving temperature.
8. **Serving:** Use the integrated lid holder to keep your countertop clean while serving.

9. **Power Off:** When cooking is complete and food is served, touch the **Power** button to turn off the unit and unplug it from the outlet.



The touch-activated display allows you to select cooking modes (High, Low, Warm) and preset cooking durations (4 hours, 6 hours, 10 hours) with a simple touch.



This image shows the slow cooker in operation, with food inside and the lid resting securely in its integrated holder, demonstrating its practical use.

MAINTENANCE AND CLEANING

1. **Unplug and Cool:** Always unplug the slow cooker and allow it to cool completely before cleaning.
2. **Removable Pot and Lid:** The ceramic pot and tempered glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. **Heating Base:** Wipe the exterior of the heating base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the heating base in water or any other liquid.
4. **Stubborn Residue:** For stubborn food residue in the ceramic pot, fill it with warm, soapy water and let it soak for a few hours before cleaning.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker in a cool, dry place.



This image demonstrates the ease of use for both cooking and cleaning, featuring the removable stoneware pot and the steel lid holder for a tidy countertop.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the unit is securely plugged into a working 220V outlet. Check household circuit breaker. If problem persists, contact customer support.
Food not cooking properly.	Lid not sealed; incorrect setting; insufficient cooking time.	Ensure the lid is properly sealed. Verify the correct temperature setting (High/Low) and cooking time. Avoid lifting the lid frequently, as this extends cooking time.
Display not responding to touch.	Moisture or debris on display; temporary electronic glitch.	Ensure the display surface is clean and dry. Unplug the unit for 1 minute, then plug back in to reset.

PRODUCT SPECIFICATIONS

Brand: Generic

Model Number: 19623

Color: White Icing

Capacity: 4 Quarts

Product Dimensions: 9.21"D x 9.21"W x 13.9"H

Item Weight: 8 Pounds

Material: Ceramic, Plastic, Stainless Steel, Tempered Glass

Voltage: 220 Volts

Control Method: Touch-Activated Digital

Number of Settings: 3 (High, Low, Warm)

Dishwasher Safe: Yes (Removable Pot and Lid)



This diagram illustrates the physical dimensions of the slow cooker, measuring 9.21 inches in depth, 9.21 inches in width, and 13.9 inches in height.

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to the product packaging or contact the retailer/manufacturer for warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or inquiries regarding your Beautiful 4-Quart Programmable Slow Cooker, please contact the retailer where the product was purchased or refer to the manufacturer's official website for support contact information.

© 2025 Generic. All rights reserved.