



[Manuals.plus](#) /

> [PayLessHere](#) /

> PayLessHere 9-Drawer Fabric Dresser with Metal Frame and Wood Top Instruction Manual

## PayLessHere Fabric Dresser (9-Drawer, Black)

# PayLessHere 9-Drawer Fabric Dresser with Metal Frame and Wood Top Instruction Manual

Model: Fabric Dresser (9-Drawer, Black) | Brand: PayLessHere

## 1. INTRODUCTION

 
---

This manual provides detailed instructions for the assembly, operation, and maintenance of your PayLessHere 9-Drawer Fabric Dresser. Designed for versatile storage, this unit features spacious fabric drawers, a sturdy steel frame, and a water-resistant MDF wood top. Please read all instructions carefully before assembly and use.

## 2. IMPORTANT SAFETY INFORMATION

---

- Always assemble the dresser on a soft, clean surface (e.g., carpet or blanket) to prevent scratches or damage to the product and your floor.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Utilize the provided anti-tipping accessories to secure the dresser to a wall. This is crucial to prevent accidental tipping, especially in households with children or pets.
- Do not overload drawers. Each fabric drawer has a maximum capacity of 15 lbs.
- Do not place heavy items on the wood top exceeding 80 lbs.
- Keep small parts and packaging materials away from children during assembly.

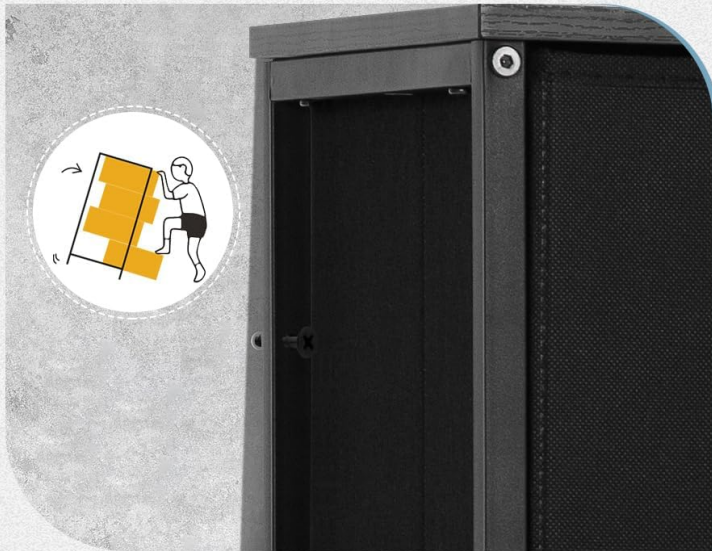

## **Tip-Resistant Kit**

*Secure the product to the wall for enhanced stability and safety.*

## **Adjustable Feet**

*Easily adjust to stay stable on any surface, and protect floors from scratches.*



Figure 1: Illustration of the tip-resistant kit and adjustable feet for enhanced stability and safety.

### **3. PACKAGE CONTENTS**

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

#### **Components:**

- Steel Frame components (various sizes)
- MDF Wood Top
- Fabric Drawers (9 units)
- Easy-Pull Handles (9 units)
- Adjustable Feet
- Anti-Tipping Kit

#### **Hardware:**

- Bolts/Screws (various types, with corresponding labels)
- Hex Key (for assembly)

## 4. SETUP AND ASSEMBLY

---

Follow these steps carefully to assemble your dresser. It is recommended to have a second person for easier assembly.

### Step 1: Assemble the Frame Base

1. Lay the MDF wood top (A) on a soft, flat surface to prevent scratches.
2. Attach the side frames (B&C) to both ends of the wood top using the designated bolts. Ensure the baffle faces are in the same direction.
3. Fix the middle frame (D) to the center of the wood top using the appropriate bolts.

Your browser does not support the video tag.

Video 1: Seller-provided installation guide demonstrating frame assembly.

### Step 2: Install Cross Tubes

4. Install the horizontal cross tubes (E) to the top of the frames (B, C, & D) using the specified bolts.
5. Ensure all connections are firm but do not overtighten until all components are in place.

Your browser does not support the video tag.

Video 2: Seller-provided video showing the assembly of the fabric drawers dresser frame.

### Step 3: Attach Adjustable Feet

6. Carefully turn the assembled frame upright.
7. Screw the adjustable feet into the bottom of the frame. Adjust them as needed to ensure the dresser is stable and level on your floor.

### Step 4: Prepare and Insert Fabric Drawers

8. Unfold each fabric drawer (G). Insert the base board into the bottom of each drawer to provide stability.
9. Attach the easy-pull handles to the front of each drawer using the provided screws.
10. Slide the assembled drawers into their respective compartments in the dresser frame.

## 9 DRAWERS

### THE DRESSER CAN HOLD:



The above data is for reference only 



Figure 2: Visual guide for preparing and inserting the fabric drawers.

#### Step 5: Install Anti-Tipping Kit

11. Position the dresser in its desired location.
12. Using an electric drill, drill holes in the wall at the appropriate height, aligning with the pre-drilled holes on the dresser frame.
13. Insert the expansion tubes into the wall holes.
14. Secure the dresser to the wall using the provided bolts and anti-tipping straps. This step is essential for safety.

#### 5. OPERATING INSTRUCTIONS

- To open a drawer, gently pull the easy-pull handle.
- To close a drawer, push it back into the compartment until it is fully seated.
- Avoid forcing drawers open or closed, as this may damage the fabric or frame.
- Distribute weight evenly within each drawer to maintain stability and prevent sagging.

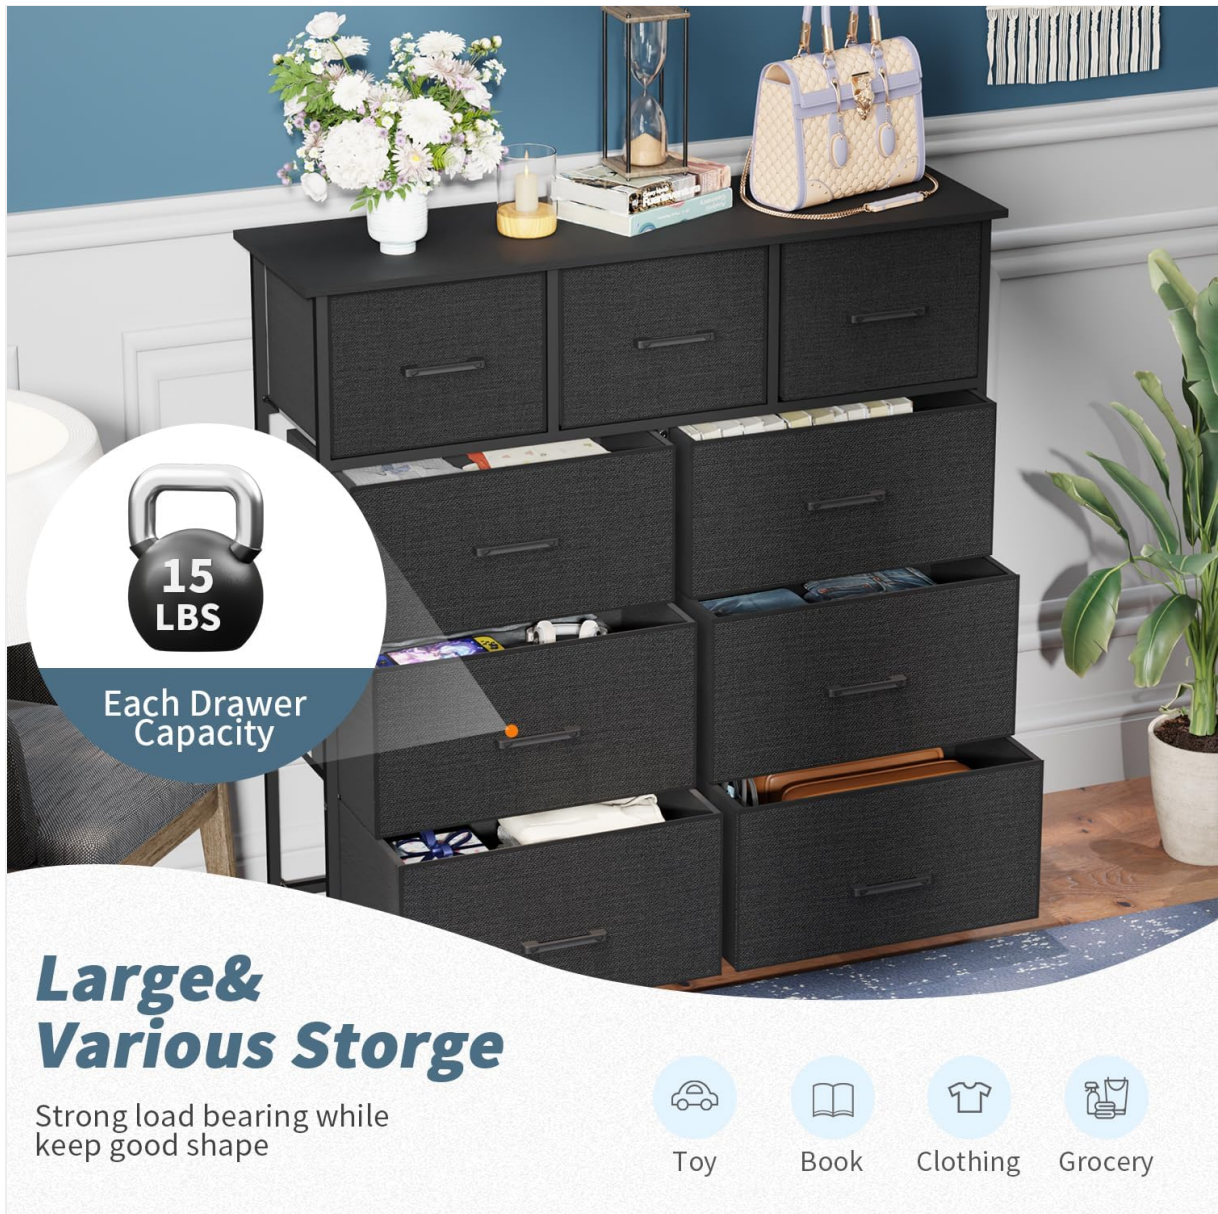 


Figure 3: The spacious fabric drawers offer ample storage, each with a 15 lbs capacity.

## 6. CARE AND MAINTENANCE

- **Cleaning the Wood Top:** The MDF wood top is water-resistant. Wipe spills immediately with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Fabric Drawers:** The fabric drawers are wear-resistant and fade-resistant. For light cleaning, use a lint roller or a soft brush. For deeper cleaning, spot clean with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Frame Care:** Wipe the steel frame with a soft, dry cloth to remove dust.
- **Regular Checks:** Periodically inspect all bolts and connections to ensure they remain tight. Retighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause the fabric to fade over time.

 
**HIGH-QUALITY WOOD TOP**  
DURABLE MATERIAL & SUPERIOR FABRIC



Water-resistant & Easy-to-clean



Wear & Tear Resistance

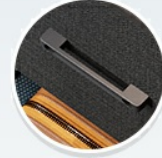

Easy-Pull Handles

Figure 4: The water-resistant MDF wood top is easy to clean with a damp cloth.

**7. TROUBLESHOOTING**

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Uneven floor; loose bolts.	Adjust the adjustable feet until the dresser is level. Check and tighten all assembly bolts. Ensure the anti-tipping kit is installed correctly.
Drawers do not slide smoothly.	Drawer overloaded; fabric snagged; frame misalignment.	Reduce weight in the drawer. Check for any fabric snags or obstructions. Ensure the frame is assembled correctly and all bolts are tightened evenly.
Missing parts.	Packaging error.	Contact PayLessHere customer support with your purchase details for replacement parts.

**8. SPECIFICATIONS**

Feature	Detail
Brand	PayLessHere
Model Name	Fabric Dresser
Color	Black
Material	Fabric, Metal, MDF Wood
Product Dimensions (W x D x H)	39.3" x 11.8" x 40.1"
Number of Drawers	9

Feature	Detail
Drawer Capacity (each)	15 lbs
Wood Top Capacity	80 lbs
Item Weight	29 lbs
Assembly Required	Yes
Special Features	Water-resistant wood top, Adjustable feet, Anti-tipping accessories, Easy-pull handles

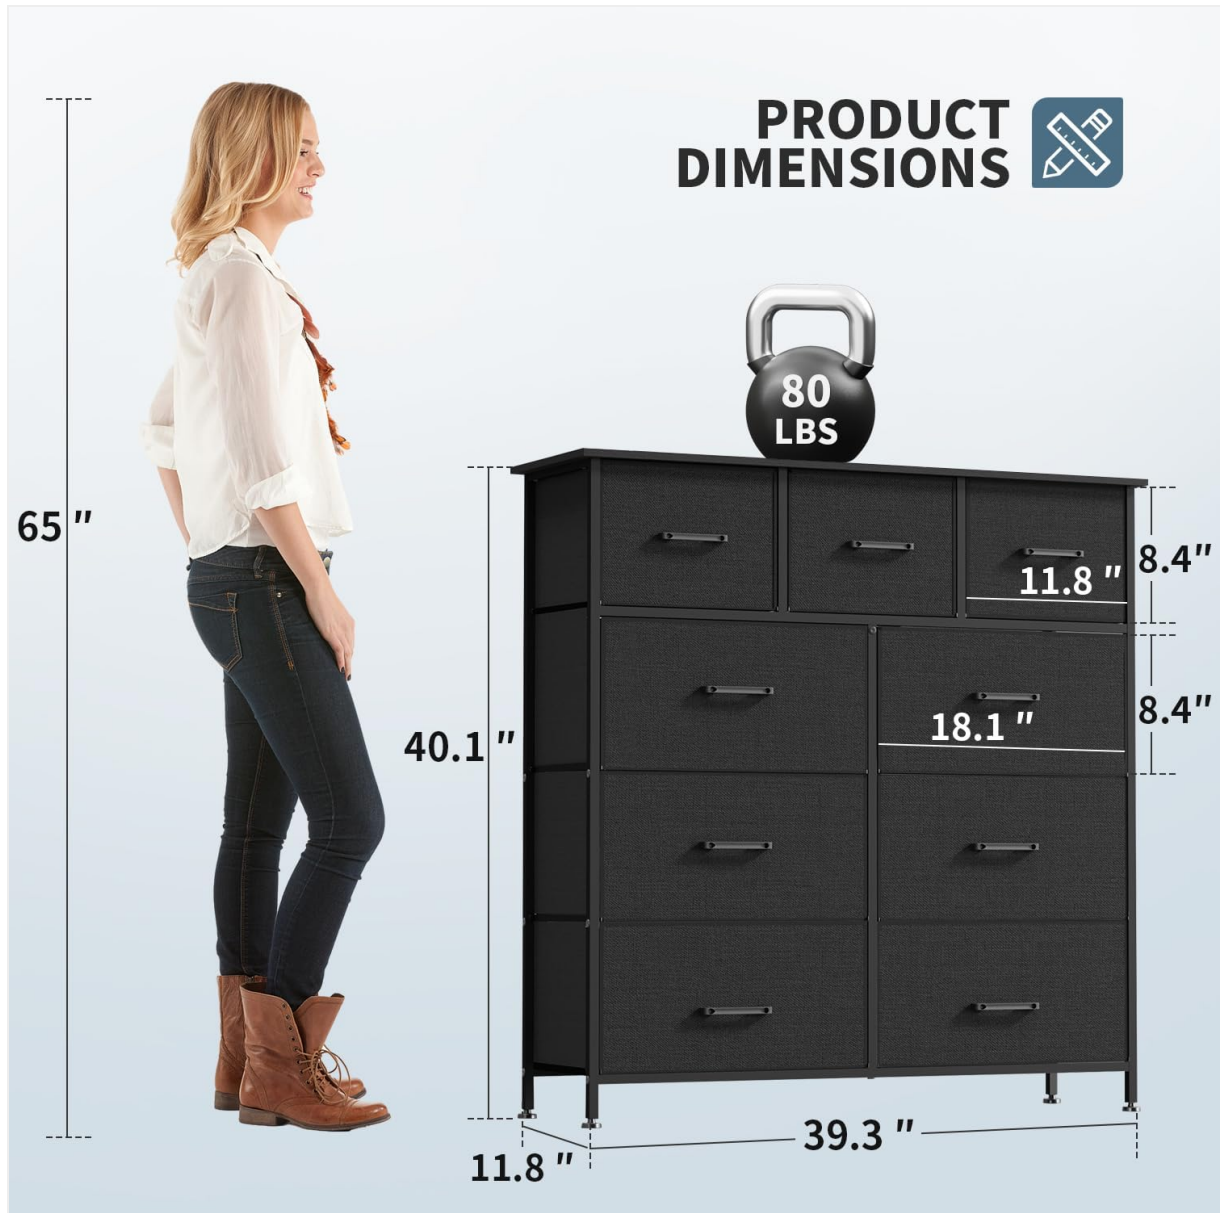 


Figure 5: Detailed product dimensions for the 9-drawer model.

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact PayLessHere customer service. Refer to your purchase documentation for specific contact details.

Please retain this instruction manual for future reference.

