

[Manuals.plus](#) /

› [Caydo](#) /

› Caydo A1 Electric Yarn Winder Instruction Manual

## Caydo A1

# Caydo A1 Electric Yarn Winder Instruction Manual

Model: A1

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

This manual provides instructions for the safe and efficient use of your Caydo A1 Electric Yarn Winder. Please read this manual thoroughly before operating the device and retain it for future reference.



*Image: The Caydo A1 Electric Yarn Winder, shown in pink, actively winding blue yarn into a compact cake.*

## SAFETY INFORMATION

- Ensure the device is placed on a stable, flat surface during operation.
- Keep hands and loose clothing away from moving parts during operation.
- Do not immerse the device in water or other liquids.
- Unplug the device when not in use or before cleaning.
- This device is intended for winding yarn only. Do not use it for other purposes.
- Keep out of reach of children.

## PACKAGE CONTENTS

Verify that all components are present in the package:

- Caydo A1 Electric Yarn Winder Unit
- Yarn Guide Assembly
- Spindle
- Table Clamp
- USB Power Cable
- Instruction Manual (this document)



*Image: All components of the Caydo A1 Electric Yarn Winder laid out, showing the main winding unit, the separate yarn guide, the spindle, and the table clamp.*

## SETUP

Follow these steps to assemble and prepare your electric yarn winder for use:

1. **Fix the Yarn Guide:** Locate the screw hole on the side of the main winder unit. Insert the metal rod of the yarn guide assembly into this hole and secure it with the provided screw.

2. **Install Spindle:** Gently push the spindle onto the central shaft of the winder unit until it clicks into place. Ensure it is firmly seated.
3. **Clamp to Table:** Attach the table clamp to the bottom of the main winder unit. Securely fasten the winder to a sturdy table or workbench edge using the clamp. Ensure the winder is stable and does not wobble.
4. **Connect Power:** Plug the USB power cable into the designated port on the winder unit and connect the other end to a suitable USB power source (e.g., a wall adapter, power bank, or computer USB port).

## Simple Installation and Use



1. Fix the yarn guide



2. Install spindle



3. Clamp table clip



4. Thread yarn to yarn guide

Image: A visual guide demonstrating the four steps for setting up the yarn winder: 1. Fixing the yarn guide, 2. Installing the spindle, 3. Clamping the unit to a table, and 4. Threading the yarn.

## Setup Video Guide

Your browser does not support the video tag.

Video: Official Caydo video demonstrating the installation process of the yarn winder, showing how to assemble and secure the unit.

## OPERATION

Once the winder is set up, follow these steps to wind your yarn:

1. **Thread the Yarn:** Guide the yarn through the tension springs on the yarn guide assembly. Ensure the yarn passes smoothly through both springs to maintain consistent tension. Then, wrap the yarn around the base of the spindle a few times to secure it.
2. **Adjust Speed:** Use the stepless speed control knob to select your desired winding speed. Start with a slower speed and gradually increase it as needed.
3. **Begin Winding:** Turn on the winder. The device will automatically begin winding the loose yarn into a compact cake. Monitor the winding process to ensure the yarn is feeding smoothly and the cake is forming evenly.
4. **Remove Yarn Cake:** Once all the yarn is wound, turn off the winder. Carefully slide the finished yarn cake off the spindle.

# Adjustable Winding Speed

Choose the Speed of Winding According to Your Needs



Image: The Caydo A1 Electric Yarn Winder in operation, highlighting the adjustable speed control knob and the yarn being wound onto the spindle.

## Operation Video Guides

Your browser does not support the video tag.

Video: Official Caydo video demonstrating the ease of use of the electric yarn winder for crocheting, showing the winding process.

Your browser does not support the video tag.

Video: Official Caydo video showcasing how the mini electric yarn winder creates neat yarn cakes efficiently.

## MAINTENANCE

To ensure the longevity and optimal performance of your Caydo A1 Electric Yarn Winder, follow these simple maintenance guidelines:

- **Cleaning:** After each use, wipe down the winder with a soft, dry cloth to remove any dust or yarn fibers. Do not use abrasive cleaners or immerse the unit in water.

- **Storage:** Store the winder in a clean, dry place away from direct sunlight and extreme temperatures. Its compact size allows for convenient storage.
- **Inspection:** Periodically check the yarn guide and spindle for any signs of wear or damage. Ensure all parts are securely attached.

## TROUBLESHOOTING

If you encounter issues with your Caydo A1 Electric Yarn Winder, refer to the following common problems and solutions:

| Problem                          | Possible Cause                                        | Solution                                                                                                                                                             |
|----------------------------------|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Winder does not turn on.         | No power or loose connection.                         | Ensure the USB cable is securely plugged into both the winder and a working power source. Try a different USB port or adapter.                                       |
| Yarn cake is loose or uneven.    | Insufficient tension or incorrect threading.          | Verify that the yarn is correctly threaded through both tension springs on the yarn guide. Adjust the yarn guide position if necessary to ensure proper tension.     |
| Winder stops intermittently.     | Yarn snagging, excessive tension, or internal issue.  | Check for any knots or tangles in the yarn. Ensure the yarn is feeding freely. If the issue persists after checking yarn flow and tension, contact customer support. |
| Yarn is breaking during winding. | Too much tension or too high speed for the yarn type. | Reduce the winding speed using the control knob. Ensure the yarn is not pulled too tightly through the tension springs.                                              |

## SPECIFICATIONS

- Model:** A1
- Brand:** Caydo
- Material:** ABS, POM
- Color:** Pink
- Item Weight:** 0.64 Kilograms
- Max Yarn Capacity:** Up to 7oz (approximately 200 grams)
- Power Source:** USB (5V DC)
- Winding Speed:** Stepless adjustable



Image: A diagram illustrating the compact dimensions of the Caydo A1 Electric Yarn Winder, showing its height, width, and depth.

# WARRANTY & SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Caydo customer service directly. Refer to the contact information provided with your purchase or visit the official Caydo website. You can also visit the [Caydo Store on Amazon](#) for additional product information and support resources.

© 2026 Caydo. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question