

Manuals.plus /

› Skirfy /

› Skirfy Space Claw Machine (Model SF25040) - Instruction Manual

Skirfy SF25040

Skirfy Space Claw Machine (Model SF25040) - Instruction Manual

Your Guide to Fun and Operation

1. INTRODUCTION

Welcome to the world of the Skirfy Space Claw Machine! This electronic game vending machine is designed to provide engaging entertainment for children and adults. This manual will guide you through the setup, operation, and maintenance of your new claw machine, ensuring a smooth and enjoyable experience.

2. PRODUCT OVERVIEW

The Skirfy Space Claw Machine (Model SF25040) features a space-inspired design with interactive elements. Key features include:

- **60-Second Countdown:** Engage in timed challenges.
- **High-Precision Operation:** Control the claw with three joysticks for accurate movements.
- **Lights & Sound:** Enjoy an immersive arcade experience with colorful lights and fun music.
- **Adjustable Volume & Mute:** Control the audio levels to suit your environment.
- **Dual Power Options:** Can be powered by USB connection or 4 AA batteries (not included).
- **Durable Design:** Constructed from lightweight and durable plastic, ensuring longevity.

3. SAFETY INFORMATION

Please read and understand all safety instructions before operating the Skirfy Space Claw Machine. Keep this manual for future reference.

- **Age Recommendation:** This product is recommended for ages 6 years and up.
- **Small Parts:** Contains small parts which may pose a choking hazard for children under 3 years. Adult

supervision is recommended during play.

- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.
- **Power Source:** Use only the specified power sources (USB or 4 AA batteries).
- **Cleaning:** Do not immerse the machine in water. Clean with a dry, soft cloth.

4. WHAT'S INCLUDED

Upon unboxing your Skirfy Space Claw Machine, you should find the following items:

- 1 x Skirfy Space Claw Machine unit
- 10 x Plush toys (various designs)
- 10 x Capsule toys (twist eggs)
- 24 x Game coins
- 1 x USB power cable (wall adapter not included)
- Decorative stickers



Figure 4.1: This image illustrates the compact size of the claw machine and lists the included accessories for immediate

5. SETUP

Follow these steps to set up your Skirfy Space Claw Machine:

1. **Power Source:**

- **Battery Power:** Open the battery compartment on the bottom of the machine. Insert 4 AA batteries (not included), ensuring correct polarity. Close the compartment securely.
- **USB Power:** Connect the provided USB cable to the USB connection port on the back of the machine. Plug the other end into a USB wall adapter (not included) or a compatible USB port.

2. **Assemble Top Decoration:** Attach the decorative elements (e.g., space bunny, flag) to the top of the machine as shown in the instructions.

3. **Apply Stickers:** Carefully apply the decorative stickers to the machine as desired, referring to the packaging for placement suggestions.

4. **Load Prizes:** Open the top cover of the machine. Place the included plush toys and capsule toys inside the play area. Ensure they are not overfilled to allow the claw to move freely.

5. **Turn On:** Locate the ON/OFF switch on the back of the machine and slide it to the 'ON' position.



Figure 5.1: A visual guide detailing the quick and easy steps to assemble the machine and begin playing, from power setup to prize retrieval.

6. OPERATING INSTRUCTIONS

Once the machine is set up, you are ready to play!

1. **Insert Coin:** Insert one of the provided game coins into the coin slot on the front of the machine. This will activate the game and start the 60-second countdown.
2. **Control the Claw:** Use the three joysticks to maneuver the claw:
 - **Left Joystick:** Controls the claw's movement left and right.
 - **Middle Joystick:** Controls the claw's movement forward and backward.
 - **Right Joystick (Star Button):** Press this button to lower the claw and attempt to grab a prize. Once pressed, the claw will automatically attempt to grab and then return to the prize chute.
3. **Collect Your Prize:** If the claw successfully grabs a prize, it will drop into the collection area on the front of the machine. Retrieve your prize and enjoy!
4. **Adjust Volume:** A short press of the volume button (located near the joysticks) toggles the volume between four levels: Loud, Medium, Low, and Mute. A long press turns off the light effects.



Figure 6.1: Key features of the claw machine are highlighted, demonstrating its interactive elements and user-friendly design.



Figure 6.2: The robust claw mechanism is designed to securely grasp prizes, enhancing the game experience.

7. MAINTENANCE

Proper maintenance will ensure the longevity of your Skirfy Space Claw Machine.

- **Cleaning:** Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Replacement:** If using batteries, replace all 4 AA batteries when the machine's performance declines or if the lights and sounds become weak.
- **Storage:** When not in use, store the machine in a cool, dry place away from direct sunlight. If storing for an extended period, remove the batteries.

8. TROUBLESHOOTING

If you encounter any issues with your Skirfy Space Claw Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Batteries are dead or incorrectly inserted; USB cable not connected properly; Power switch is off.	Replace batteries, check polarity; Ensure USB cable is securely connected to both machine and power source; Turn the power switch to 'ON'.
Claw does not move or is stuck.	Prizes are obstructing movement; Claw mechanism is tangled.	Rearrange prizes to ensure clear path; Gently untangle the claw mechanism if necessary.
Prizes are difficult to grab.	Prizes are too large or too heavy for the claw; Claw position is not precise.	Use smaller or lighter prizes; Practice joystick control for better precision.
Sound or lights are not working.	Volume is muted or set too low; Batteries are low.	Adjust volume using the volume button; Replace batteries.

9. SPECIFICATIONS

- **Model:** SF25040
- **Product Dimensions:** 7.48 x 14.17 x 9.45 inches
- **Item Weight:** 3.49 pounds
- **Power Source:** 4 x AA batteries (not included) or USB (cable included, adapter not included)
- **Recommended Age:** 6 years and up
- **Material:** Plastic

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or contact Skirfy customer service directly. Keep your purchase receipt as proof of purchase.