

[Manuals.plus](#) /

› [Xidehuy](#) /

› Xidehuy MP3 Player MP-BLUE*13 User Manual

Xidehuy MP-BLUE*13

Xidehuy MP3 Player MP-BLUE*13 User Manual

Model: MP-BLUE*13

1. INTRODUCTION

The Xidehuy MP3 Player is a portable digital media device designed for music playback, video viewing, voice recording, FM radio, e-book reading, and photo viewing. It features a compact design and comes with a 16GB memory card for ample storage.

Package Contents

- 1 x Xidehuy MP3/MP4 Player
- 1 x 16GB Memory Card
- 1 x Hi-Fi Bass Earphone
- 1 x USB Cable
- 1 x User Manual

2. PRODUCT OVERVIEW

Familiarize yourself with the player's components and controls.



Image 2.1: Front, side, and back view of the Xidehuy MP3 Player. The front features a 1.8-inch LCD screen displaying a 'Music' icon, and a circular control pad with 'M' (Menu), 'VOL' (Volume), and navigation buttons. The side shows a slim profile, and the back includes an 'OFF/ON' switch, a quality control sticker, and ports for headphones and USB/microphone.

Key Features

- 1.8-inch high-resolution true color LCD screen.
- 16GB internal capacity (expandable up to 64GB via memory card).
- Supports MP3 audio, AMV video, TXT e-book, and JPEG photo formats.
- Functions include music playback, video playback, voice recording, FM radio, e-book reader, and photo viewer.
- Built-in lithium-ion battery, rechargeable via USB.
- Independent volume control and one-key screen lock/unlock.

3. SETUP

3.1 Charging the Player

1. Ensure the player is turned on before charging for optimal results.
2. Connect the small end of the provided USB cable to the player's USB port.
3. Connect the other end of the USB cable to a computer's USB port or a compatible USB wall adapter.
4. The player will begin charging. A full charge typically takes about 1 hour.

3.2 Inserting/Managing Memory Card

Your player comes with a 16GB memory card pre-installed. The device supports memory cards up to 64GB. If you need to replace or insert a new card, locate the memory card slot (usually on the side) and gently insert the card until it clicks into place.

3.3 Connecting to a Computer

1. Connect the player to your computer using the provided USB cable.
2. The player will be recognized as an external storage device (e.g., a USB drive).
3. Open the player's drive on your computer. You can now drag and drop music, video, photo, or e-book files directly into the appropriate folders on the player.
4. **Note:** This MP3 player does not work with iTunes and is not an Apple iPod.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on, slide the 'OFF/ON' switch (located on the top/back of the device) to the 'ON' position.
- To turn off, slide the 'OFF/ON' switch to the 'OFF' position.

4.2 Basic Navigation

- Use the central circular control pad for navigation.
- The 'M' button typically accesses the main menu or returns to the previous screen.
- The 'VOL' button is for volume control. Press it, then use the navigation arrows to adjust.
- The left and right arrow buttons (◀◀/▶▶) are used for skipping tracks/files or navigating menus.
- The center button (often unmarked or a play/pause symbol) is used to select items or play/pause media.
- To lock/unlock the screen, use the designated one-key function (refer to on-screen prompts if available).

4.3 Music Playback

1. From the main menu, select 'Music'.
2. Navigate through your folders and select the desired MP3 file.
3. Press the center button to play.
4. During playback, use the navigation buttons to skip tracks (left/right arrows) or adjust volume ('VOL' button).
5. Playback modes include normal, repeat once, repeat all, and random. These can usually be accessed via the 'M' button during playback.

4.4 Video Playback

The player supports AMV video format. Transfer AMV files to the player and select 'Video' from the main menu to browse and play them.

4.5 Photo Viewer

View JPEG images by selecting 'Photos' or 'Image Viewer' from the main menu. Navigate through your images using the control pad.

4.6 E-book Reader

The device supports TXT format e-books. Transfer your TXT files to the player and select 'E-book' from the main menu to read them.

4.7 Voice Recording

Select 'Voice Recorder' from the main menu. Follow the on-screen prompts to start, pause, and save recordings. The player features noise cancellation for clearer audio.

4.8 FM Radio

Plug in the earphones (which act as an antenna) and select 'FM Radio' from the main menu. Use the navigation buttons to scan for stations or manually tune.

4.9 Language Settings

The player supports multiple languages including Simplified Chinese, English, Commercial Chinese, Japanese, Korean, and Italian. Access the 'Settings' menu to change the display language.

5. MAINTENANCE

- Keep the device dry. Moisture can damage the internal circuits.
- Avoid extreme temperatures. High temperatures can shorten the life of electronic devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards.
- Clean the screen and body with a soft, dry cloth. Avoid using harsh chemicals or cleaning agents.
- Regularly back up important files from the player to a computer to prevent data loss.

Battery Information

The built-in lithium-ion battery provides approximately 5-7 hours of playback time on a full charge. Battery performance may vary based on usage and settings. To prolong battery life, avoid fully discharging the battery frequently.

6. TROUBLESHOOTING

- **Player does not turn on:** Ensure the 'OFF/ON' switch is in the 'ON' position. Connect the player to a power source using the USB cable to check if the battery is depleted.
- **Cannot connect to computer:** Try a different USB port or cable. Ensure the player is turned on. On some computers, you may need to manually open 'My Computer' or 'This PC' to find the device.
- **No sound:** Check the volume level using the 'VOL' button. Ensure earphones are properly plugged in. Test with different earphones if possible.
- **Files not playing:** Verify that the files are in a supported format (MP3 for audio, AMV for video, TXT for e-books, JPEG for photos). Ensure files are transferred correctly to the player's storage.
- **Screen frozen:** If the device becomes unresponsive, try sliding the 'OFF/ON' switch to 'OFF' and then 'ON' again to restart it.
- **Important Note:** This MP3 player is not compatible with Apple iTunes software. It functions as a simple drag-and-drop storage device.

7. SPECIFICATIONS

Brand	Xidehuy
-------	---------

Model Name	MP-BLUE*13
Special Feature	Voice Recorder
Connectivity Technology	USB
Memory Storage Capacity	16 GB (supports up to 64GB card)
Additional Features	Voice Recorder
Screen Size	1.8 Inches
Compatible Devices	Headphone
Display Technology	LCD
Colour	Pink
Manufacturer	Xidehuy
UPC	629090254065
Manufacturer Part Number	MP-BLUE*13
Component Type	Memory

8. SUPPORT

For any concerns or issues regarding your Xidehuy MP3 Player, please contact the seller or manufacturer's customer support. They are committed to assisting you with any after-sales inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question