

G3 Ferrari G1022100

G3 Ferrari G10221 32L Multifunction Air Fryer Oven Instruction Manual

Model: G1022100

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation may cause damage to the appliance and injury to the user.

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become very hot.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact customer service for assistance.
- Use only accessories recommended by the manufacturer.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning parts.
- Do not block any ventilation openings.
- Exercise extreme caution when removing hot oil or other hot liquids.
- Do not place food directly on the heating elements. Always use the provided accessories.

2. PRODUCT OVERVIEW

The G3 Ferrari G10221 is a versatile 32-liter multifunction air fryer oven designed for healthy and efficient cooking. It combines the functions of an air fryer, traditional oven, convection oven, and grill, offering a wide range of cooking possibilities.

Key Features:

- **Large 32-Liter Capacity:** Ideal for cooking large portions or multiple dishes simultaneously.

- **2000W Power:** Ensures rapid heating and efficient cooking.
- **5 Cooking Programs:** Dedicated settings for various cooking needs.
- **6 Heating Elements:** Provides even heat distribution for consistent results.
- **Adjustable Temperature:** From 80°C to 230°C.
- **Digital Display with Timer:** For precise control and monitoring.
- **Internal Light:** Allows monitoring of cooking progress without opening the door.
- **Multi-level Cooking:** Cook up to 3 dishes at once.
- **Stainless Steel Interior and Accessories:** Durable and easy to clean, BPA/PFOA free.



Figure 1: G3 Ferrari G10221 Multifunction Air Fryer Oven with dimensions (44 cm W x 42.5 cm D x 41 cm H).



Figure 2: Front view of the appliance, showing the control panel and oven door.



Figure 3: Interior view with visible top and bottom heating elements.

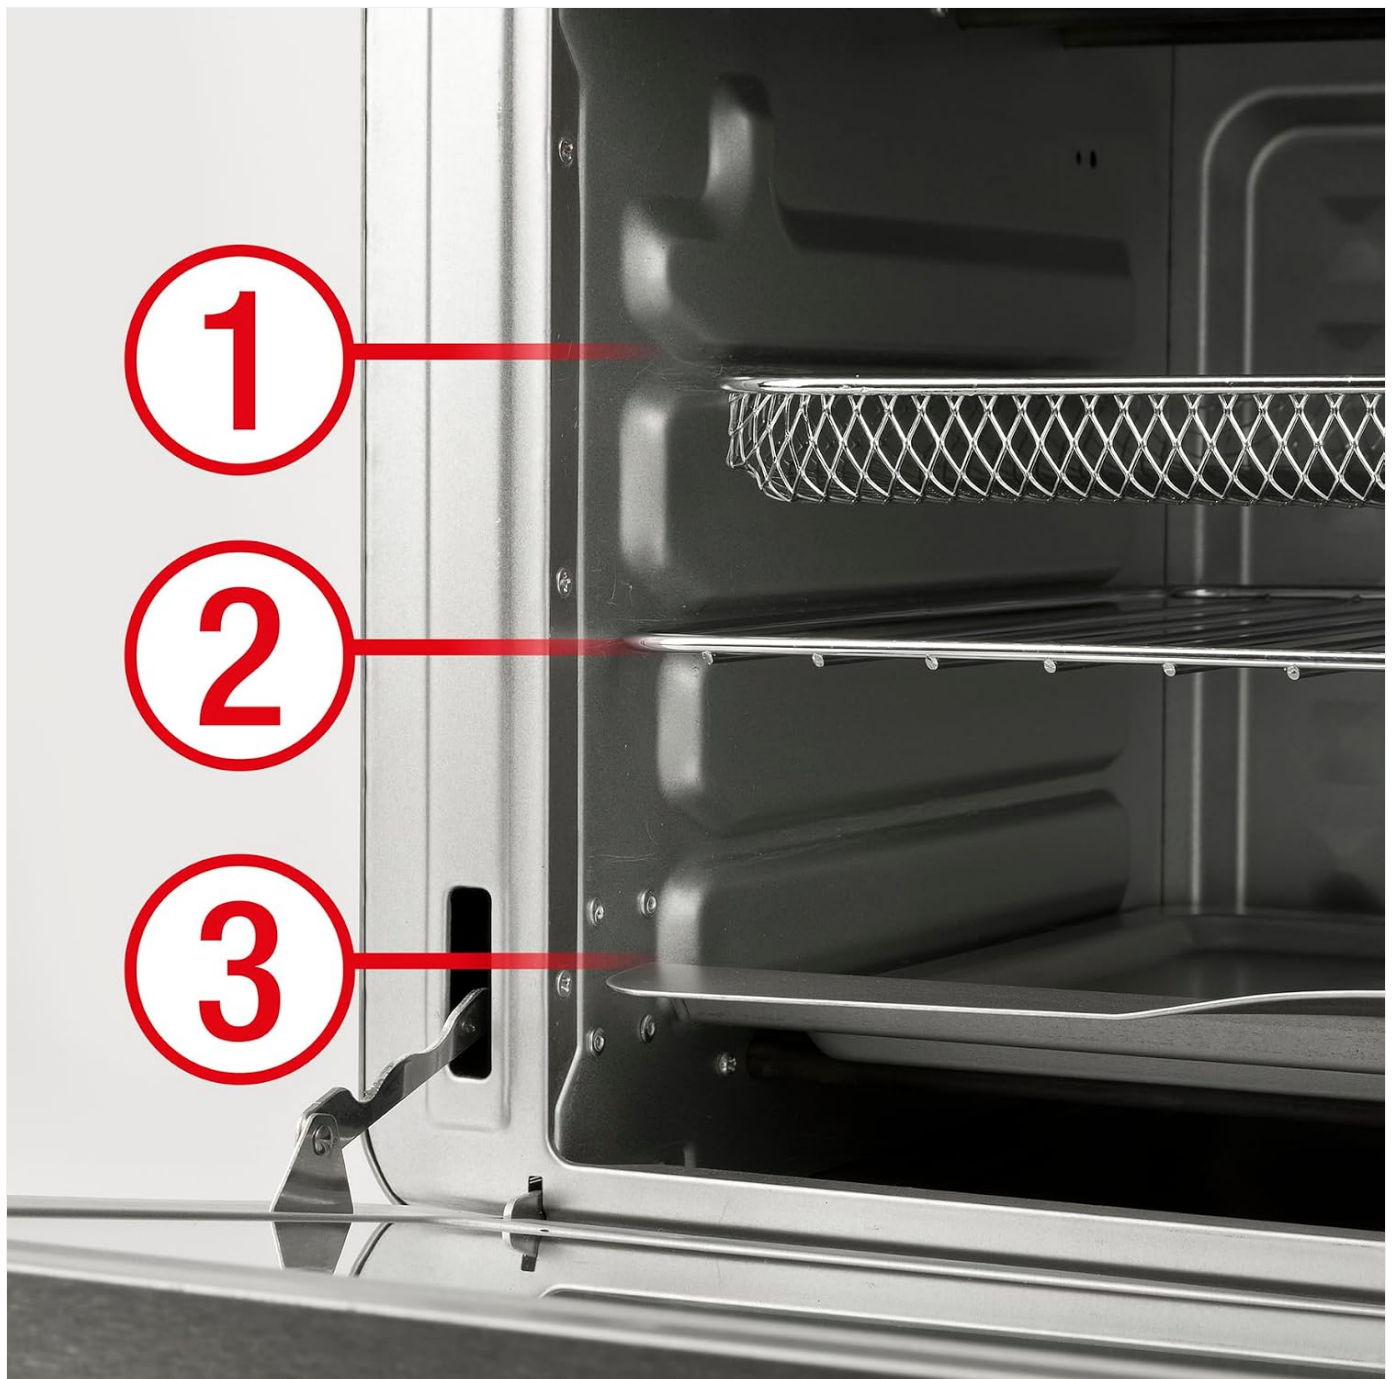


Figure 4: Interior showing three rack positions for versatile cooking.

3. SETUP AND FIRST USE

3.1 Unpacking

- Carefully remove the appliance and all accessories from the packaging.
- Remove any protective films, stickers, or packaging materials from the appliance.
- Check that all parts are present and undamaged.

3.2 Placement

- Place the oven on a flat, stable, and heat-resistant surface.
- Ensure there is at least 10-15 cm of clear space around the appliance for proper ventilation.
- Do not place the oven near flammable materials or under cabinets that are not heat-resistant.

3.3 Initial Cleaning

- Before first use, wipe the exterior of the oven with a damp cloth.
- Wash all removable accessories (air fry basket, baking tray, wire rack) in warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the interior with a damp cloth.

3.4 First Use (Burn-Off)

It is recommended to run the oven empty for about 15 minutes before cooking food for the first time to eliminate any manufacturing odors.

- Plug the appliance into a grounded electrical outlet.
- Set the function dial to 'Bake' or 'Air Fry'.
- Set the temperature to 200°C (390°F).
- Set the timer to 15 minutes.
- A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
- Once the cycle is complete, unplug the oven and let it cool down.

4. OPERATING INSTRUCTIONS

The G3 Ferrari G10221 features intuitive controls for various cooking functions.

4.1 Control Panel

The control panel typically consists of rotary dials for selecting cooking function, temperature, and time, along with a digital display and an internal light button.

- **Function Dial:** Selects the desired cooking mode (e.g., Air Fry, Bake, Defrost, Toast, Warm, Pizza, Grill, Broil).
- **Temperature Dial:** Adjusts the cooking temperature from 80°C to 230°C.
- **Timer Dial:** Sets the cooking duration. The digital display will show the remaining time.
- **Light Button:** Activates the internal oven light to check food without opening the door.

4.2 Cooking Functions

The oven offers 5 primary cooking functions, utilizing its 6 heating elements and powerful fan:

- **Air Fry:** Uses rapid hot air circulation for crispy results with little to no oil. Ideal for fries, chicken wings, and vegetables.
- **Bake:** For traditional oven cooking, suitable for cakes, cookies, and casseroles.
- **Grill/Broil:** For browning and crisping the top of dishes, or for grilling meats and vegetables.
- **Toast:** For toasting bread or bagels.
- **Defrost/Warm:** Gentle heat for thawing frozen foods or keeping cooked food warm.

4.3 General Operation Steps

1. Place food on the appropriate accessory (air fry basket, baking tray, or wire rack).
2. Insert the accessory into the desired rack position inside the oven (refer to Figure 4 for rack positions).
3. Close the oven door securely.
4. Turn the Function Dial to select your desired cooking mode.

- 5. Turn the Temperature Dial to set the desired cooking temperature.
- 6. Turn the Timer Dial to set the cooking duration. The oven will start automatically.
- 7. The internal light can be turned on/off using the dedicated button to monitor cooking.
- 8. Once the timer expires, the oven will automatically turn off. Carefully remove the cooked food using oven mitts.

4.4 Multi-level Cooking

The oven supports cooking on up to 3 levels simultaneously. When cooking multiple items, ensure adequate space for air circulation and consider rotating items for even cooking.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

5.1 Before Cleaning

- Always unplug the oven from the power outlet.
- Allow the appliance to cool down completely before cleaning any part.

5.2 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may damage the finish.

5.3 Interior Cleaning

- The interior walls are designed for easy cleaning. Wipe with a damp cloth and mild detergent.
- For stubborn food residue, a non-abrasive sponge can be used.
- The removable grease collection tray should be emptied and cleaned after each use.

5.4 Accessory Cleaning

- Wash the air fry basket, baking tray, and wire rack in warm, soapy water.
- Rinse thoroughly and dry completely before storing or reusing.
- *Note: The appliance and its accessories are not dishwasher safe.*

5.5 Storage

Ensure the oven is clean and dry before storing. Store it in a cool, dry place.

6. TROUBLESHOOTING

If you encounter any issues with your G3 Ferrari G10221, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Overcrowding; incorrect rack position; food not turned/shaken.	Do not overcrowd the oven. Use the recommended rack position. Turn or shake food halfway through cooking.
White smoke coming from the oven.	Grease or food residue on heating elements; fatty food cooking.	Clean the interior and accessories thoroughly. For fatty foods, ensure the grease tray is in place and clean.
Appliance makes unusual noise.	Fan operation (normal); loose accessory.	The fan noise is normal during operation. Ensure all accessories are correctly placed. If noise persists or is excessive, contact customer support.

If the problem persists after attempting these solutions, please contact G3 Ferrari customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand Name	G3 Ferrari
Model Name/Number	G1022100
Product Type	Multifunction Air Fryer Oven
Special Feature	Multifunction Device
Capacity	32 Liters
Product Dimensions (D x W x H)	42.5 x 44 x 41 cm
Item Weight	13.2 Kilograms
Color	Grey Silver-Black
Exterior Material	Plastic
Interior Material	Stainless Steel
Wattage / Output Power	2000 Watts
Control Method	Rotary Dials and Buttons
Minimum Temperature Setting	80 Degrees Celsius
Maximum Temperature Setting	230 Degrees Celsius
Air Frying Technology	Yes
Non-stick Coating	No
Dishwasher Safe	No (for appliance and accessories)

Feature	Specification
Recommended Uses	Fry, Bake, Grill, Defrost, Reheat
Manufacturer	Trevidea
Country of Origin	China

8. WARRANTY AND SUPPORT

Information regarding the product warranty, terms, and conditions is typically provided in a separate warranty card or can be found on the official G3 Ferrari website. For technical support, spare parts, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the manufacturer's official support channels.

9. ENVIRONMENTAL PROTECTION

Do not dispose of this product with general household waste. It should be taken to a designated collection point for the recycling of electrical and electronic equipment. This helps protect the environment and human health.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question